
<u>Step 6.</u>

Adjust to the desired azimuth and elevation angles and tighten all pivot hardware. (4 places)

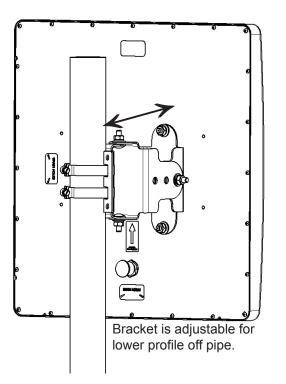

For Optional Extension Bracket, proceed to steps 7 - 9. (Not included with all antennas.)

Extension Bracket Kit Contents:

- 2 Extension Brackets
- 1 ¼ 20 x 4-1/2 bolt
- 3 1/4 20 x 3-1/4 bolt
- 4 1⁄4" 20 hex nut
- 4 1/4" flat washer
- 4 ¹/₄" split lock washer
- 1 0.37" ID, 0.065" Wall, 3.47" L tube spacer
- 3 0.37" ID, 0.065" Wall, 2.33" L tube spacer

NOTE: There will be extra hardware from the P02370 when used with the extension bracket mount kit.

- 4 ¼" 20 hex nut
- 4 1/4" 20 spring lock washer
- 4 1/4" 20 flat washer


Additional Tools:


[Required for securing the hex head bolts.] 7/16" wrench


<u>Step 7.</u>

Remove the extension bracket from packaging.


Preassemble the extension bracket.

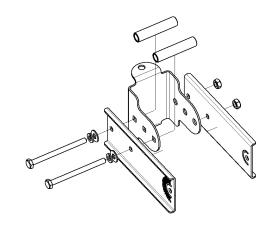

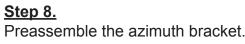

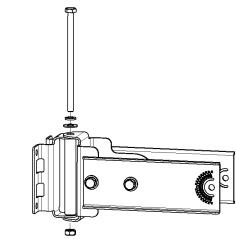

Step 9. Install antenna.

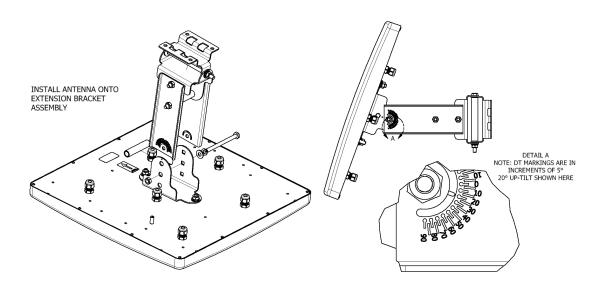



Flat Panel Antenna Series

MIS-FLAT-PANELS, Rev. B

IMPORTANT NOTICE:

The antenna should be handled with care. Do not stand on or drop antenna.

Fits Pole sizes: 1.63" to 2.3" pipe O.D.

Antenna Contents:

Panel antenna with adjustable mount and hardware, including:

- 4 1/4" 20 x 3/4 carriage bolt
- 6 1/4" 20 hex nut
- $6 \frac{1}{4}$ " 20 spring lock washer
- $6 \frac{1}{4}$ " 20 flat washer
- 2 pipe clamps

Tools:

[Required for attaching mount to antenna and securing to pole.] 7/16" wrench 8 mm nut driver or flat head screwdriver for hose clamps

Pipe Clamp Recommended Torque:

43-51 in-lbf (4.9-5.8 N-m)

Note:

Mount allows antenna to be vertically or horizontally polarized.

*Mount can be wall mounted. Hardware not included.

<u>Step 1.</u>

Remove antenna and mount kit from packaging.


Mount kit contents:

- (A) 1 - Antenna mount bracket
- Elevation adjustable bracket (B)
- 1 Azimuth adjustable bracket (C)
- 4 1/4" 20x3/4 carriage bolt (D)
- 6 1/4" 20 hex nut (E)
- (F) 6 - 1/4" - 20 spring lock washer
- 6 1/4" 20 flat washer (G)
- (H) 2 - pipe clamps

Step 2. Determine mount configuration.


Step 4.

BRACKET ATTACHMENT FOR VARIOUS MOUNTING CONFIGURATIONS (NOTE: 45 SLANT NOT AVAILABLE IN ALL MODELS)

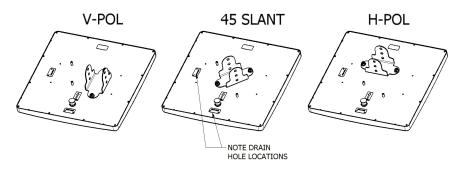

NOTE: CONNECTOR TYPE, LOCATION AND QUANTITY MAY DIFFER FROM WHAT IS SHOWN


Attach antenna mount bracket (A) to the back of the antenna as shown applying a maximum nut-tightening torque of 55 in-lbf (6.2 Nm).

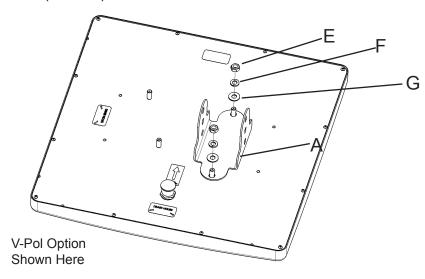

<u>Step 5.</u>

<u>Step 3.</u>

Attach elevation adjustable bracket (B) as shown and loosely secure hardware. The carriage bolt square holes must be on the inside.

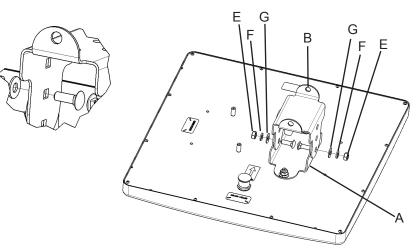

Attach azimuth adjustable bracket to pipe routing band clamps as shown. Maximum tightening torque.

