



Primary Current	mV/Amp	Recommended Connections
+/-6A	100	P5 to P6, P2 to P3, Isense in to P5A, Isense Out to P2A
+/-3A	200	P3 to P6
+/-2A	300	P3 to P5, P2 to P6

Isense_TP connects to the Unit under test DNI= Do not insert

		Unauthorized Disclosure of the information contained herein is prohibited
		Project Engineer
		Development Level
Schematic Sheet Title Current Sense Using LTSR 6-NP		
Size A	PC Board Number and Rev Enter PCB # & Rev Here	Schematic Number SchematicNumber
Date Printed 1/17/2014 10:09:45 AM		Sheet 1 of 1