




SparkFun Pro nRF52840 Mini Hookup Guide

Introduction

The SparkFun Pro nRF52840 Mini is a breakout and development board for Nordic Semiconductor's nRF52840 – a powerful combination of ARM Cortex-M4 CPU and 2.4 GHz Bluetooth radio. With the nRF52840 at the heart of your project, you'll be presented with a seemingly endless list of project possibilities.

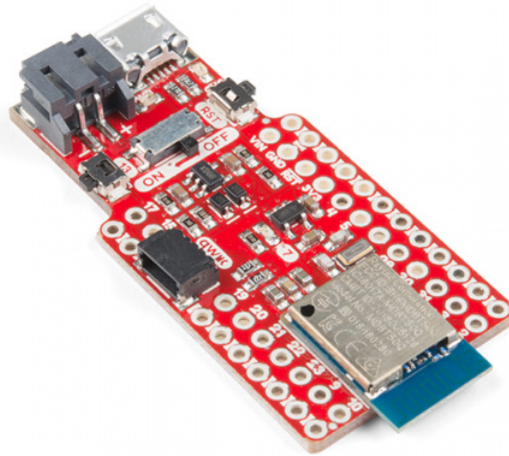

SparkFun Pro nRF52840 Mini - Bluetooth Development Board

● DEV-15025

Our “mini” development board for the nRF52840 breaks out most, critical I/O pins while maintaining a small footprint. It features a USB interface (using the nRF52840's native USB support), which can be used to program, power, and communicate with the chip. Also included are a LiPo battery charger, qwiic connector, on/off switch, reset switch, and a user LED/button.

The board comes pre-programmed with a **USB bootloader**. You can develop programs for the nRF52840's Cortex-M4 using either Arduino, Circuit Python, or C (using Nordic's nRF5 SDK), and load that compiled code on using a USB serial or mass-storage interface.

Product Showcase: SparkFun Pro nRF52840 Mini



Covered in This Tutorial

This tutorial is designed to introduce you to the nRF52840 and the hardware features of our Pro nRF52840 Mini Breakout. It will help you assemble the board, and then send you on to the software-development method of your choice.

Make sure to check out the Software Development Guides section, which splits into Arduino, Circuit Python, or C (Nordic SDK) development guides.

Required Materials

To follow along with this tutorial, you will need the following materials. You may not need everything, depending on what you already have. Add it to your cart, read through the guide, and adjust the cart as necessary.

nRF52840 Mini Breakout Hookup Guide Wish List SparkFun Wish List




SparkFun Pro nRF52840 Mini - Bluetooth Development Board
DEV-15025



USB micro-B Cable - 6 Foot
CAB-10215

USB 2.0 type A to micro USB 5-pin. This is a new, smaller connector for USB devices. Micro USB connectors are a...

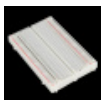

Breadboard - Self-Adhesive (White)
PRT-12002

This is your tried and true white solderless breadboard. It has 2 power buses, 10 columns, and 30 rows - a total of ...



Break Away Headers - Straight
PRT-00116

A row of headers - break to fit. 40 pins that can be cut to any size. Used with custom PCBs or general custom head...



Lithium Ion Battery - 850mAh
PRT-13854

These are very slim, extremely light weight batteries based on Lithium Ion chemistry. Each cell outputs a nominal 3...

Tools

You will need a soldering iron, solder, and general soldering accessories to solder your headers to your nRF52840.



Solder Lead Free - 100-gram Spool

● TOL-09325



 
Weller WLC100 Soldering Station

● TOL-14228

As you look to add more components to your nRF52840 breakout, make sure you check out our line of qwiic boards. The I²C-based qwiic interface is a quick way to prototype and test a huge variety of sensors and outputs.


Suggested Reading

This tutorial builds on a variety of electronics, programming, and engineering concepts. If any of the subjects of these tutorials sound foreign to you, consider checking them out before continuing on:




Serial Communication

 Asynchronous serial communication concepts: packets, signal levels, baud rates, UARTs and more!




Logic Levels

 Learn the difference between 3.3V and 5V devices and logic levels.



Using the Arduino Pro Mini 3.3V

 This tutorial is your guide to all things Arduino Pro Mini. It explains what it is, what it's not, and how to get started using it.



Bluetooth Basics

An overview of the Bluetooth wireless technology.

The nRF52840

Lets quickly overview Nordic's nRF52840. Its list of features is exhaustingly-awesome. Just to top off a few of our favorite features, there's:

- **ARM Cortex-M4 CPU** with floating point unit (FPU)
 - **1MB internal Flash** – For all of your program, SoftDevice, and file-storage needs!
 - **256kB internal RAM** – For your stack and heap storage.
- Integrated 2.4GHz radio with support for:
 - **Bluetooth Low Energy (BLE)** – With peripheral and/or central BLE device support
 - **Bluetooth 5** – Mesh Bluetooth!
 - **ANT** – If you want to turn the device into a heart-rate or exercise monitor.
 - **Nordic's proprietary RF protocol** – If you want to communicate, securely, with other Nordic devices.
- Every I/O peripheral you could need
 - **USB** – Turn your nRF52840 into a USB mass-storage device, use a CDC (USB serial) interface, and more. This is a big add compared to the nRF52832!
 - **UART** – Serial interfaces with support for hardware flow-control if desired.
 - **I²C** – Everyone's favorite 2-wire bi-directional bus interface
 - **SPI** – If you prefer the 3+-wire serial interface
 - **Analog-to-digital converters (ADC)** – Eight pins on the nRF52840 Mini Breakout support analog inputs
 - **PWM** – Timer support on any pin means PWM support for driving LEDs or servo motors.
 - **Real-time clock (RTC)** – Keep close track of seconds and milliseconds, also supports timed deep-sleep features.
- Peripheral-multiplexing – (Nearly) any pin can support any of the above features!

USB

Nordic's nRF52840 builds on their nRF52832 by adding a heap (pun intended) of memory, but the most significant addition is that of built-in support for Full-Speed USB 2.0 interfaces.

The USB interface supports any USB device class you can imagine, including communication device class (**CDC**, USB-to-serial), mass-storage device (**MSC**, removable flash-drives), human-interface device (**HID**, keyboard/mouse), and audio.

On-chip USB support means, most significantly, that a USB bootloader can be built into the chip. No more USB-to-serial converters required to load compiled code onto your chip! For more information on the USB bootloader pre-programmed onto the SparkFun Pro nRF52840 Mini Breakout, check out the Using the Bootloader section.

I/O Features

Coming from the world of AVR's like the Arduino Uno's ATmega328 – or even more modern processors like the SAMD21 – one of the coolest features of the nRF52840's Cortex-M4 is its expansive **pin multiplexing** capability. Just about any pin can support any peripheral. Want UART0's RX to be on pin P0.02? You got it. Need to flip RX and TX? Just a quick definition change.

In the software development guides, we'll provide hardware definitions for "standard" I/O interfaces, but we'll also demonstrate how to tweak these definitions, so you can bend the nRF52840 to your whim.

```

C:\sparkfun_nrf52840h x
50 #define LEDS_NUMBER 1
51
52 #define LED_1 NRF_GPIO_PIN_MAP(0,7)
53
54 #define LEDS_ACTIVE_STATE 1
55
56 #define LEDS_LIST { LED_1 }
57
58 #define LEDS_INV_MASK LEDS_MASK
59
60 #define BSP_LED_0 7
61
62 #define BUTTONS_NUMBER 1
63
64 #define BUTTON_1 22
65 #define BUTTON_PULL NRF_GPIO_PIN_PULLUP
66
67 #define BUTTONS_ACTIVE_STATE 0
68
69 #define BUTTONS_LIST { BUTTON_1 }
70
71 #define BSP_BUTTON_0 BUTTON_1
72
73 #define RX_PIN_NUMBER 15
74 #define TX_PIN_NUMBER 17
75 #define CTS_PIN_NUMBER 19
76 #define RTS_PIN_NUMBER 20
77 #define HWFC false
78
79 #define BSP_QSPI_SCK_PIN 19
80 #define BSP_QSPI_CSN_PIN 9
81 #define BSP_QSPI_IO0_PIN 20
82 #define BSP_QSPI_IO1_PIN 21
83 #define BSP_QSPI_IO2_PIN 22
84 #define BSP_QSPI_IO2_PIN 10
85 #define BSP_QSPI_IO3_PIN 23

```

Pin-mux definitions for LED, button, and Serial pins using the nRF5 SDK.

2.4GHz Radio

The nRF52840's most unique feature is its integrated 2.4GHz radio. This radio is most commonly used as a Bluetooth Low-Energy (BLE) interface, but it can also be used for Bluetooth 5 (a meshed, long-range extension of the Bluetooth spec), ANT (a proprietary network usually used for heart-rate monitors), or Nordic's proprietary 2.4GHz interface.

A Note on SoftDevices

To use the radio for any of the Nordic nRF52840's 2.4GHz RF interfaces – Bluetooth, proprietary or otherwise – you'll need to load a SoftDevice onto your nRF52840.

A SoftDevice is a “precompiled and linked binary software implementing a wireless protocol.” It provides easy access to a Bluetooth or other 2.4GHz radio stack. They are, unfortunately, closed-source, but they do reduce complexity and compile-time for your application.

i S140 SoftDevice

We load the S140 v6.1.1 SoftDevice onto the Pro nRF52840 Mini Breakout in production here at SparkFun. The S140 SoftDevice supports **Bluetooth Low Energy** applications.


New SoftDevices can be loaded onto your board via the USB bootloader, but it's important to know which SoftDevice is currently loaded.

Hardware Overview

With the nRF52840 overviewed, let's take a quick look at the features of our board equipped with the Cortex-M4/BT SoC:

Raytac MDBT50Q-P1M Module

The Pro nRF52840 Mini Breakout actually features a Raytac MDBT50Q-P1M module. This module connects the nRF52840 to an trace antenna, fits the IC into an **FCC-approved footprint**, and also includes a lot of the decoupling and timing mechanisms (i.e. 32 MHz crystal) that would otherwise be required for a bare nRF52840 design.

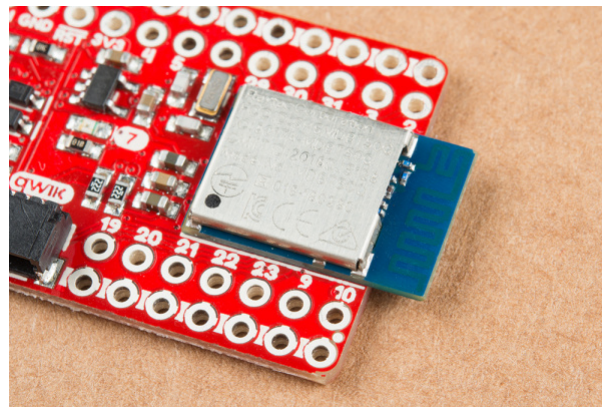


The Raytac MDBT50Q-P1M nRF52840 Module.

For more information on the MDBT50Q-P1M, check out the datasheet.

SparkFun Pro nRF52840 Mini Pinout

Most pin breakouts on the SparkFun Pro nRF52840 Mini are general purpose I/O pins (GPIO). As mentioned in the last section, GPIO on the nRF52840 can be muxed to just about any functionality your project requires.

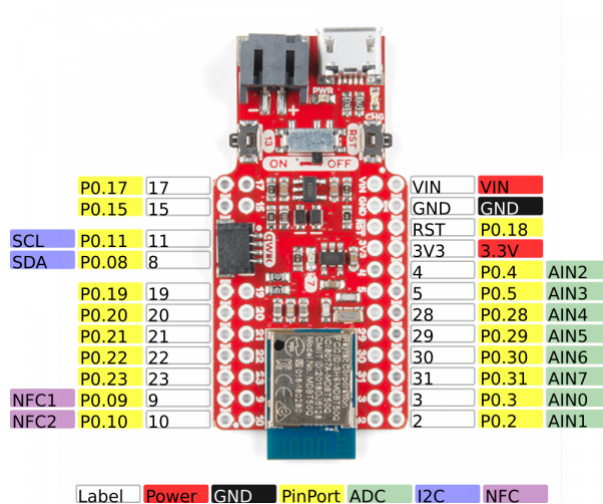

The **analog-to-digital converter (ADC)** pins are the only ones you may need to put extra focus on. These pins are broken out and available on GPIO pins 2-5 and 28-31. You'll find these pins on one side of the board; they're helpfully highlighted on the bottom-side silk.



The analog-input (ADC) pins are highlighted on the back of the board.

i Pro Mini Footprint

The footprint of the SparkFun Pro nRF52840 Mini nearly matches that of the SparkFun Arduino Pro Mini. You'll find power pins in the expected spot. And GPIO — aside from those covered by the qwiic connector — can be used for any purpose (UART, I²C, SPI) that those of the Arduino Pro Mini could.


There are breakouts for the **3.3V** regulator output (3V3) and input (VIN). Check out the next section for more information on these pins.

Finally, you'll find an array of **ground breakouts** on the outside edges of the board. These are covered – as well as the board fab will allow – with white silkscreen.

Powering the nRF52840 Breakout

The breakout's **micro-B USB** interface can be used to both power and program the breakout. The supply-end of your micro-B cable can be either a computer or a USB wall-adapter.

The nRF52840 consumes a very low amount of power – less than 20mA on normal, radio-transceiving operation. Any computer USB interface should be able to reliably power the module.

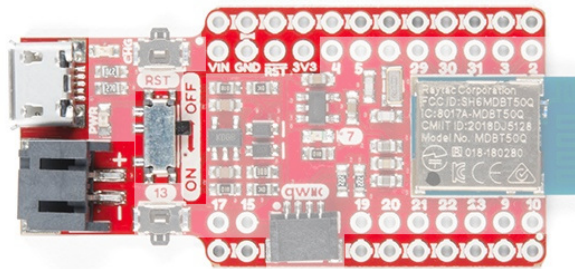


Power supply pins and components highlighted.

Alternatively, the nRF52840 Mini breakout's **3V3** and **VIN** pins can be used to directly power the board. Power to the **VIN** pin should be regulated to somewhere between **3.3V** and **5.5V**, as this supplies the low-dropout 3.3V regulator. If you want to bypass the regulator, a voltage between **2.5-3.6V** can be applied to the 3.3V pin to supply power to the nRF52840 module.

LiPo Charger

In lieu of (or in addition to) the USB supply, a Lithium-Polymer (LiPo) battery can be used to supply the breakout.

A smart-power-selection circuit will ensure that if both USB and LiPo are connected, power to the nRF52840 and its components will be supplied by the USB interface, otherwise LiPo power will be used to supply the system. The USB interface can also be used to charge the LiPo.

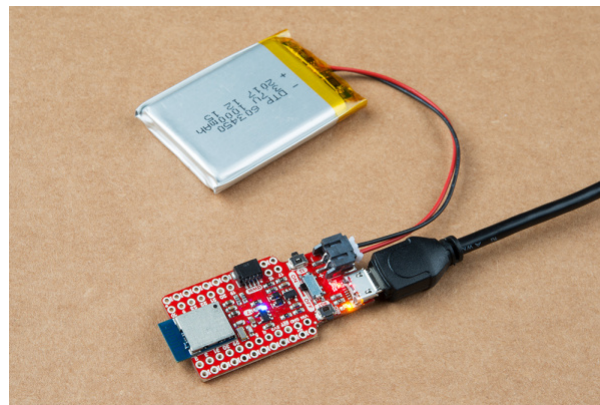

Charging a LiPo battery via USB.


✂ **Please note!** While the USB interface can be used to charge the LiPo, it's configured to charge at a rate of 500mA so batteries less than a rated capacity of 500mAh are not recommended.

ON/OFF Switch

An SPDT on/off switch is populated on the board. This switch controls the enable input on the 3.3V regulator, so any power supplied on the VIN-side of the board (USB and LiPo included) will be regulated by this switch.

The switch, initially, seems oddly placed toward the inside of the board. This helps maintain the small form-factor and ensures spurious swats don't accidentally cycle your project's power.


If you can't get a fingernail into the narrow gap between the switch and components, a pair of tweezers may do the trick.

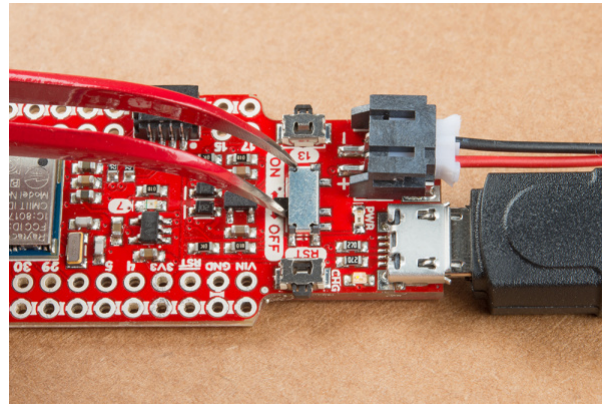

Setting the ON/OFF button with some tweezers.

Reset and Pin-13 Buttons

Reset and user-programmable momentary SPST buttons are provided on either sides of the on/off switch. These buttons play a **critical purpose in triggering the bootloader**, which we'll delve into more in the next section. In your application, the pin-13 button can be used for any purpose.

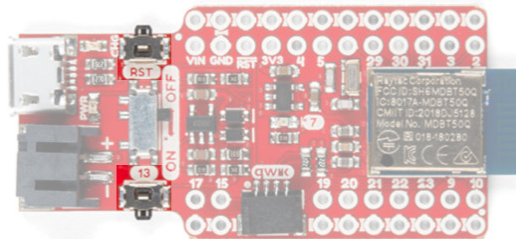

Pin 13 and reset buttons.

Both of these buttons are pulled high, so their signal will go low when the button is actuated.

LEDs: Power, Charge, and Pin 7


The board is equipped with three LEDs. Their color and feature-indications are:

LED Label	Color	Purpose
PWR	Red	3.3V power indication. Indicates the nRF52840 is powered.
CHG	Yellow	LiPo battery charge indicator. Illuminates when the battery is charging.
7	Blue	nRF52840 pin 7. Active-high. Will blink in bootloader mode.

Qwiic Connector

A qwiic connector is provided on the board, with a pair of the nRF52840's I²C-capable pins connected to SDA and SCL.


The nRF52840's P0.11 pin is connected to the qwiic connector's SCL and P0.08 is connected to SDA. See the pinout image here for quick reference.

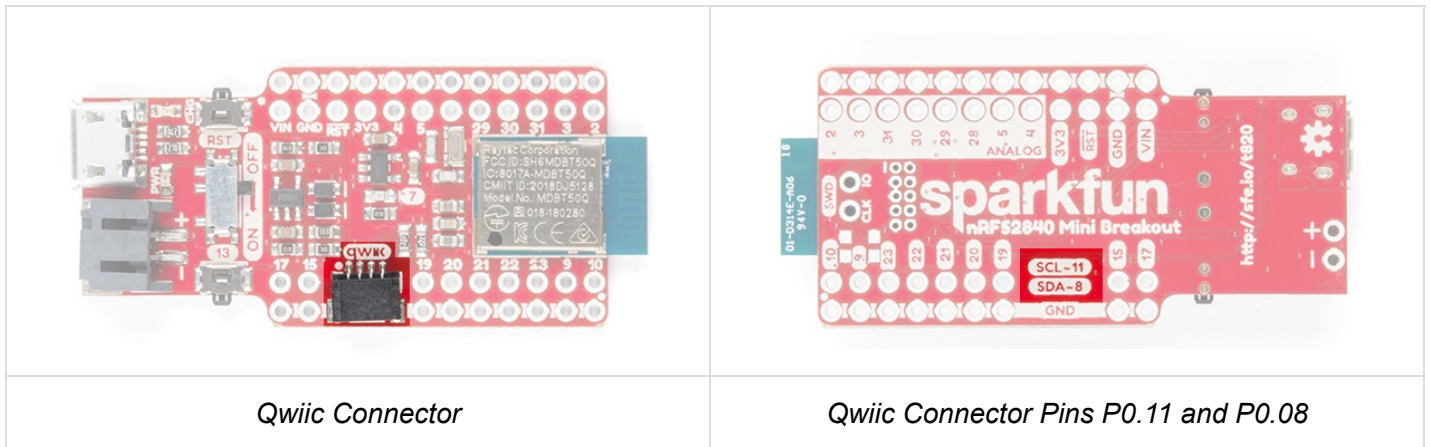

SWD Interface


If you ever want to bypass the bootloader (or *knock-on-wood* you brick it), the nRF52840's single-wire debug (SWD) pins are broken out on the bottom of the board.

They may be difficult to solder to, as the module blocks the other side, but they can be held in place while you quickly program. A keyed 10-pin, 2x5, 0.5" pitch connector, for example, can be angled, and pressure-fit into the 10-pin, 2x5 Cortex-debug connector. Make sure you match up the debug cable's pin-1 indicator to the small silkscreen pin-1 indicator on the board!

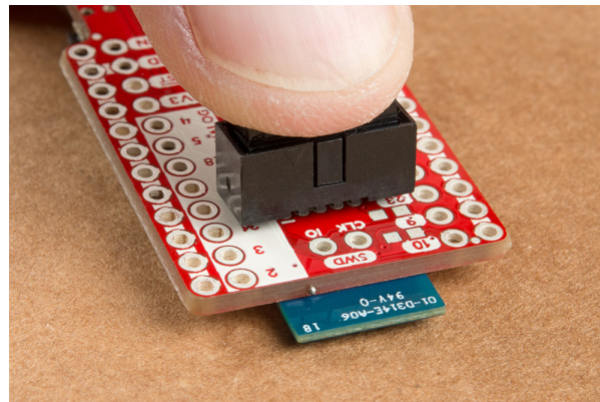


Holding the 10-pin Cortex-debug connector in place.

You can then use a programming tool, like Nordic's nRF52840 DK to flash new firmware onto your nRF52840 via SWD.

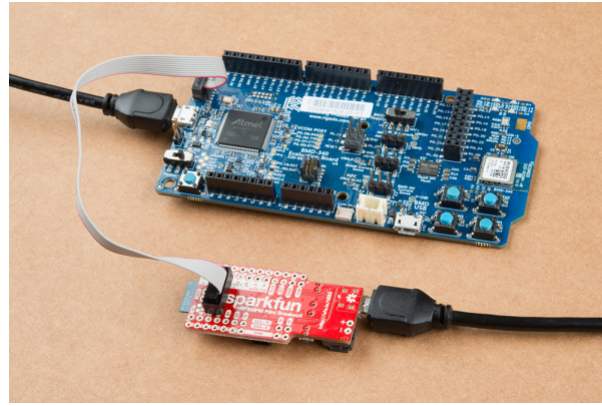

Using an nRF52840 DK to program the Pro nRF52840 Mini Breakout via the 10-pin Cortex-debug connector.

The SWD's IO and CLK pins can also be soldered to using relatively high-gauge wire, and routed to the programming interface of your choice if you prefer.

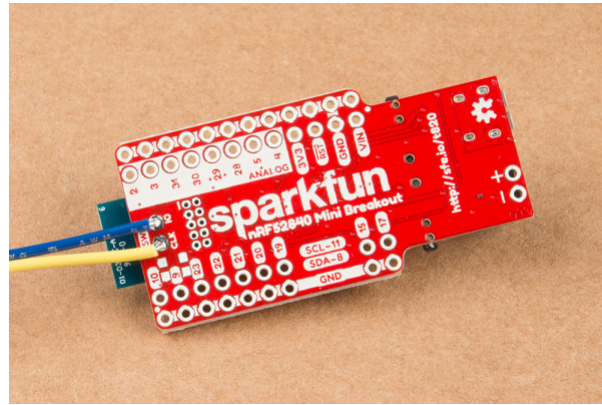


Soldering directly to the SWD IO and CLK pins for a more reliable programming solution.

Hardware Assembly

Because the Pro nRF52840 Mini Breakout is a more advanced development platform, we'll leave most of the hardware hookup to you. Here are a few quick tips-and-tricks, though:

Soldering the Breakout

 You will need to solder *something* to the I/O and/or power pins to connect them to other components. New to soldering? No worries! Check out our through-hole soldering tutorial.




How to Solder: Through-Hole Soldering

SEPTEMBER 19, 2013

This tutorial covers everything you need to know about through-hole soldering.

We recommend soldering in either male header pins or female header sockets, but what you solder into these pins ultimately depends on your application.

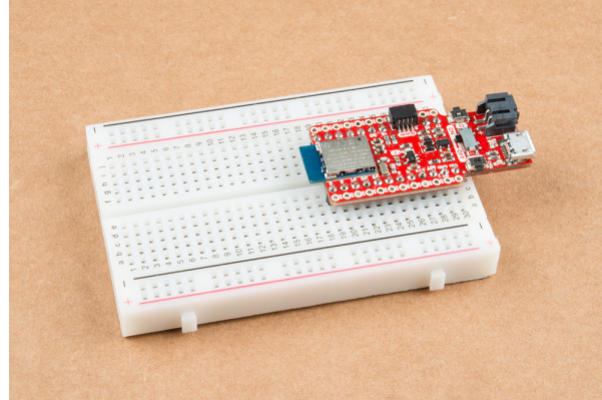


A nRF52840 breakout with male headers soldered in, breadboarded.

Each of the nRF52840's ground (GND) and I/O/power headers are 12-pins, with the exception of...

That Gap in the I/O Header...

We hope the addition of a qwiic connector provides easy access to a huge library of sensors, displays, and output-controllers, but, admittedly, the connector's placement does mess with the breakout's solder-ability.

If you have a 12-pin header that you'd like to solder into these breakout pins, either cut or "push-out" the 3rd, 4th, and 5th (1-indexed) pins of the header.

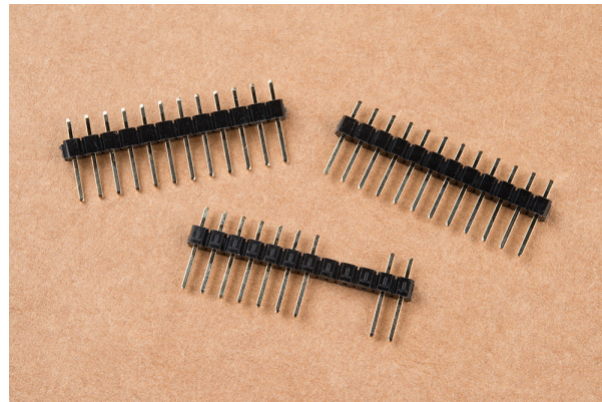

Three 12-pin male connectors – note three pins on one of the headers have been pushed out.

Otherwise you can cut two separate strips of 7- and 2-pin headers.

Using the Bootloader

Hopefully (unless you really need a debug interface) you'll never have to touch those SWD pins on the bottom side of the nRF52840 Breakout. The pre-programmed USB bootloader should have all of your programming bases covered.

The USB bootloader programmed on this board should provide support for programming via either USB serial (CDC), DFU (device firmware upgrade) or mass-storage device (MSD). So you can either automate your programming via a serial-like interface or drag a pre-compiled application onto your nRF52840's removable drive.

i Bootloader Credits

The bootloader that ships on this board is heavily based on Adafruit's nRF52 Bootloader. This is an extremely well-designed UF2, CDC, and DFU bootloader that provides extensive bootloading support to Nordic's nRF52 (nRF52840 and nRF52832) products.

Software Tools Required

After you've compiled your nRF52840 application, you'll need one of two software tools to upload it to the chip via the USB bootloader. Both applications are compatible across all platforms.

adafruit-nrfutil and Python 3

Nordic's nrfutil is a Python-based tool for packaging device firmware updates (DFU) and updating a nRF chip with that package over either serial or Bluetooth. `adafruit-nrfutil` is derived from Nordic's original version of the software. It updates `nrfutil` to be Python 3-based, and provides DFU support for a variety of boards equipped with their nRF52 bootloader.

`adafruit-nrfutil` is used to update code on your nRF52840 with the **serial bootloader**.

To install `adafruit-nrfutil`, you'll first need to download and install Python 3. (If you have Python 2.7 installed, you'll still need Python 3 to install `adafruit-nrfutil`.)

Once you have Python 3 installed, the easiest way to install `adafruit-nrfutil` is with PyPI:

```
pip3 install --user adafruit-nrfutil
```

uf2conv.py (and Python Too)

In addition to the USB serial bootloader, the nRF52840 also includes a **UF2 bootloader**. This bootloader turns the nRF52840 into a USB mass-storage device, and allows you to simply drag a compiled file onto the device to program it.

If you'd like to take advantage of the nRF52840's UF2 bootloader, you'll need another Python-based tool: `uf2conv.py`. This Python script transforms a compiled ".hex" binary file to a UF2-compatible ".uf2" file.

You can grab the `uf2conv.py` script by downloading or cloning the Microsoft UF2 GitHub Repository.


To convert a compiled hex file to uf2, a command like...

```
python uf2conv.py -f 0xADA52840 -c -o _build/nrf52840_xxaa.uf2 _build/nrf52840_xxaa.hex
```


...should do the trick.

Entering the Bootloader

To get into bootloader mode manually you'll need to use one or both of the **reset and pin-13 buttons**. You can either **double-tap** the reset button.

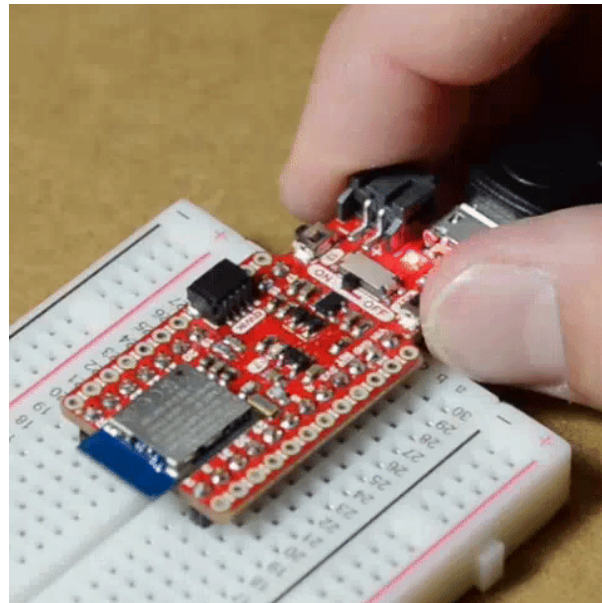

Or reset while holding down the pin-13 button:

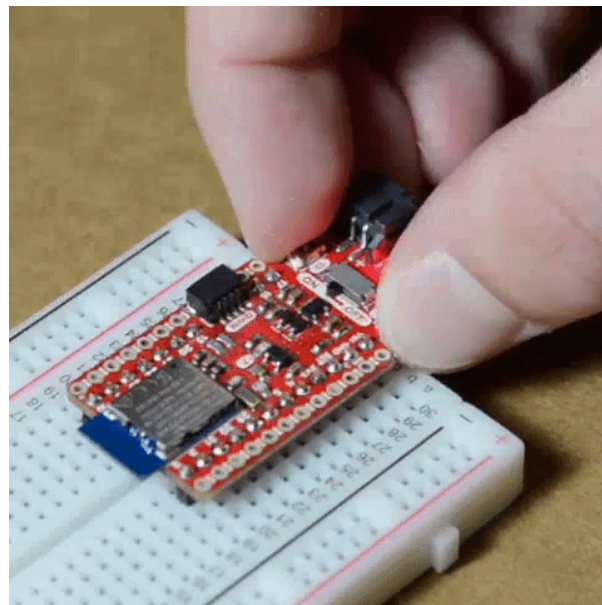

Either reset method will work. Bootloader mode is indicated by a flashing blue pin 7 LED. You should also notice a removable drive and USB serial port enumerate on your computer.

Factory Resetting

If your nRF52840 application isn't quite working as expected, you can wipe it out and return safely to bootloader mode. To perform a factory reset **ground pin 2 while resetting the board**.


ⓘ Warning: Because pin 2's state at reset is sampled by the bootloader, be careful using it with any component that may pull the pin low on startup.

Software Development Guides

Once you've set up your nRF52840's hardware and gotten comfortable with the USB bootloader, you're ready to begin developing applications!

There are three potential approaches to nRF52840 software development: Arduino and CircuitPython can provide a beginner-friendly approach while development in C with Nordic's nRF5 SDK (software development-kit) provides extensive access to all Nordic libraries and components.

If you're more comfortable in the Arduino and/or Python worlds, consider heading over to the nRF52840 Development with Arduino and/or CircuitPython tutorial as you continue your nRF52840 development.

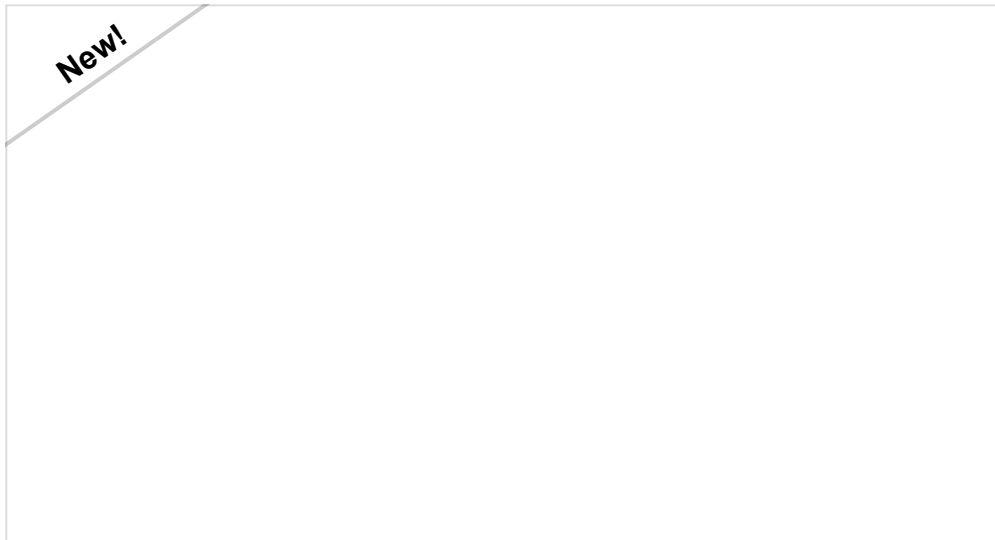


nRF52840 Development with Arduino and CircuitPython

NOVEMBER 29, 2018

How to use Arduino or CircuitPython to develop applications for the nRF52840 Cortex-M4 Bluetooth SoC.

If you're interested in getting the most out of your nRF52840, at the cost of a bit more time getting comfortable with new API's, check out the nRF52840 Advanced Development With the nRF5 SDK tutorial.

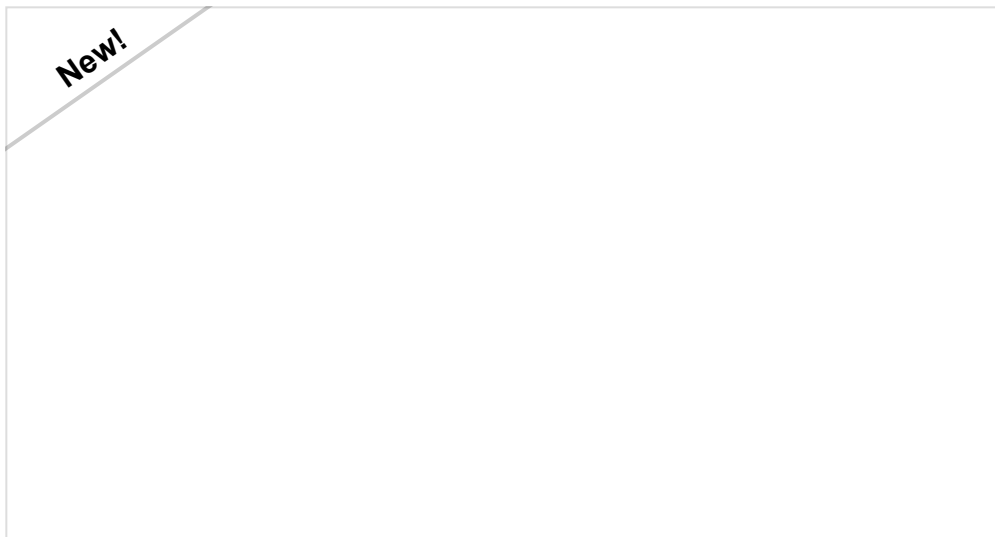

nRF52840 Advanced Development With the nRF5 SDK

NOVEMBER 29, 2018

Take your nRF52840 development to the next level -- build your applications with the nRF5 C SDK. This tutorial explains how to set up a development environment based around the GNU Arm Embedded Toolchain.

 
Resources and Going Further

Thanks for checking out the SparkFun Pro nRF52840 Mini Breakout! We're excited to see what amazing projects are created with the powerful Bluetooth/microcontroller combination.

For more documentation, be sure to check out the software development guides above. You may also find these resources handy:


- SparkFun Pro nRF52840 Mini Breakout GitHub Respository
- **Hardware**
 - Schematic (PDF) – PDF of the Pro nRF52840 Mini Breakout
 - Eagle Files (ZIP) – v10 Eagle PCB Design Files
 - Raytac MDBT50Q Datasheet
- **Software**
 - Bootloader Source Code
 - Nordic nRF5 SDK – Nordic's nRF5 Software Development Kit – software development environment for nRF52's.
 - Arduino Core for nRF52 Boards – Adafruit's Arduino core with support for nRF52 boards.
 - CircuitPython nRF Port – Adafruit's port of CircuitPython for nRF52 boards.

For more tutorials, more to learn, and more project-inspiration, check out these related tutorials:



Interactive Hanging LED Array

 Learn how we converted 72 lightbulbs into an interactive LED array for our conference room.



nRF52832 Breakout Board Hookup Guide

How to hookup and program (in Arduino!) the nRF52832 Breakout -- a development board for Nordic's BLE/ANT/2.4GHz system on chip.



nRF52840 Advanced Development With the nRF5 SDK

Take your nRF52840 development to the next level -- build your applications with the nRF5 C SDK. This tutorial explains how to set up a development environment based around the GNU Arm Embedded Toolchain.



nRF52840 Development with Arduino and CircuitPython

How to use Arduino or CircuitPython to develop applications for the nRF52840 Cortex-M4 Bluetooth SoC.