

www.lemo.com

# FGG.0B.307.CLAD56

## **SUMMARY**

### # Wires

Low voltage 7



Image is for illustrative purpose only

Series 0B

Termination type Male solder

IP rating 50

AWG wire size 34.00 - 28.00

Cable Ø 5.30 - 5.60 mm

Status active

Matching parts EGG.0B.307.CLL

PHG.0B.307.CLLD56

### **Download**

Request a quote

Eplan Catalog

See video assembly instructions

## **TECHNICAL DETAILS**

#### Mechanics

Shell Style/Model FG\*: Straight plug, cable collet

Keying 1 key (alpha=0, plug: male contacts, receptacle: female contacts)

Housing Material

Brass (chrome plated [SAE AMS 2460]) shell and collet nut, nickel plated [SAE AMS QQ N 290]

brass latch sleeve and mid pieces

Weight 8.31 g

### **Performance**

Configuration 0B.307 : 7 Low Voltage Insulator L: PEEK (UL 94 / V-0/1.5)

Rated Current 2.5 Amps

## **Specifications**

Contact Type: Solder

Contact Dia.: 0.5 mm (0.02in) Bucket Dia.: 0.45 mm (0.018in)

Max. Solid Conductor: 0.09 mm<sup>2</sup> (AWG 28) Max. Stranded Conductor: 0.09 mm<sup>2</sup> (AWG 28)

R (max): 8.7 mOhm

Vtest (contact-shell): 700 V (AC), 990 V (DC) Vtest (contact-contact): 800 V (AC), 1130 V (DC)

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

### **Others**


Endurance (Shell): 5000

Temp (min / max): -55°C / +250°C

Humidity (max): <=95% [at 60 deg C /140 F]

Vibration: 15 g [10 Hz - 2000 Hz] Shock Resistance: 100 g [ 6 ms] Climatical Category: 50/175/21 Shielding (min): 75 dB (10 MHz) Shielding (min): 40 dB (1 GHz) Salt Spray Corrosion: >1000 hr

## **DRAWINGS**

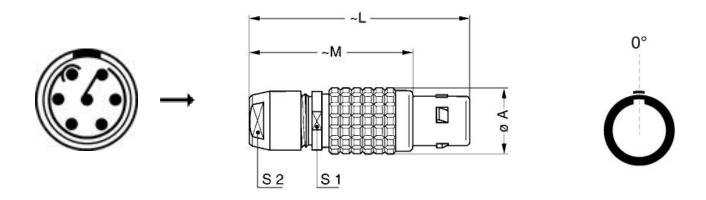

### **Dimensions**

	А	L	М	<b>S</b> 1	S2
mm.	9.5	36	26	8	7
in.	0,37	1,42	1,02	0,31	0,28

## **RECOMMENDED BY LEMO**

## Tools

Spanner wrench: DCD.0B.ZZZ.PA070
Caps: BFG.0B.100.PCSG

LEMO products and services are provided "as is". LEMO makes no warranties or representations with regard to LEMO product & services or use of them, express, implied or statutory, including for accuracy, completeness, or security. The user is fully responsible for his products and applications using LEMO components.

