

Datasheet

Low cost self-contained sensors for use with plastic fiber optics



- Low-cost, 5 V dc, self-contained sensors for use with all Banner plastic fiber optics
- Compact 11 mm-wide housing designed for DIN rail mounting; also mounts to other surfaces using the supplied mounting bracket
- Choice of NPN (sinking) or PNP (sourcing) complementary outputs—one normally open and one normally closed; 150 mA output load rating
- Fast, 500 microsecond (0.5 millisecond) output response
- LED status indications for power ON, output overload, fiber alignment, and marginal gain conditions
- Choose models with integral 2 m (6.5 ft) cable or pico-style quick disconnect (QD) connector;
 9 m (30 ft) cables are also available




WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel **protection**. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

Models

Models ¹	Range	Cable	Supply Voltage	Output Type
D11SN72FP	Range varies by sensing mode and fiber optics used	2 m (6.5 ft)	4.5 V dc to 5.5 V dc	Complementary NPN
D11SN72FPQ		4-pin Pico QD		
D11SP72FP		2 m (6.5 ft)		Complementary PNP
D11SP72FPQ		4-pin Pico QD		

Features

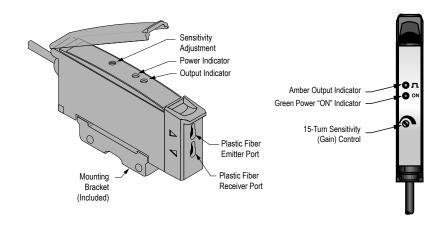

Installation


Mount the D11 on a DIN rail or the included bracket.



Original Document 46485 Rev. A


To order the 9 m (30 ft) PVC cable model, add the suffix "W/30" to the cabled model number. For example, D11SN72FP W/30.

Models with a quick disconnect require a mating cordset.

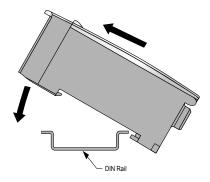


Installing **Plastic** Fibers


- 1. Cut the fiber ends according to the instructions included with the fibers.
- 2. Slide the fiber gripper up (open).
- 3. If you are using 0.254 mm or 0.508 mm (0.010 inch or 0.020 inch) diameter fibers: Insert the adaptor into the ports as far as it will go.

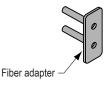


- 4. For all fiber diameters: Insert the prepared plastic fiber sensor ends gently into the ports as far as they will go.
- 5. Slide the fiber gripper back down to lock it.

Wiring

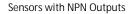

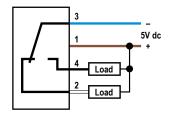

Sensors with PNP Outputs

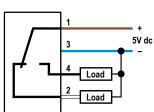

1 = Brown 2 = White

3 = Blue

4 = Black

Quick disconnect (QD) wiring diagrams are functionally identical.

Specifications

Required Fiber Optic Cable

PI or PB Series plastic fibers

Sensing Beam

Visible red. 680 nm

Supply Voltage and Current

5 V dc (±10%) at 25 mA (exclusive of load current)

Output Configuration

Complementary: one normally open (N.O.) and the other normally closed (N.C.); Outputs are NPN (sinking) or PNP (sourcing), depending on model

Output Rating

150 mA maximum (each output); The total load may not exceed 150 mA; Off-state leakage current: < 5 microamps at 30 V dc

On-state saturation voltage: < 0.8 V at 80 mA dc; < 1.5 V at 150 mA dc

Output Protection Circuitry

Protected against output short-circuit and false pulse on power up False pulse protection circuit causes a 0.1 second delay on power-up

Output Response Time

500 microseconds on and off

Repeatability

160 microseconds

Response time and repeatability are independent of signal strength

Adjustments

Sensitivity control on top of module is a 15-turn slotted brass screw, clutched at both ends of travel $\,$

Indicators

Two LEDs: Green and Amber

Green on steady: power to sensor is on Green flashing: output is overloaded

Amber on steady: normally open output is conducting

Amber flashing: marginal excess gain (1-1.5×) in light condition = alarm output on

Black ABS flame-retardant housing with acrylic cover Stainless steel M3 \times 0.5 hardware for use with ABS mounting bracket (supplied)

Environmental Rating

2 m (6-1/2 ft) or 9 m (30 ft) attached cable, or 4-pin pico-style quick-disconnect fitting Cables for QD models are purchased separately

Operating Temperature

-20 °C to +55 °C (−4 °F to +131°F) 90% at +50 °C maximum relative humidity (non-condensing)

Dimensions

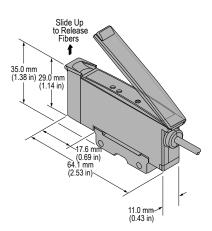


Figure 1. Cabled Models

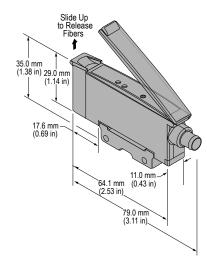


Figure 2. QD Models

2 x ø 3.25 mm (0.128")

30.2 mm

(0.10")5 0 mm (0.20")

8.6 mm

(0.34")

9.6 mm (0.38")


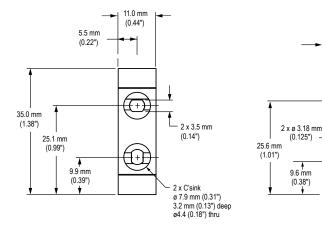


Figure 3. Mounting Bracket


Performance Curves

Diffuse mode performance based on 90% reflectance white test card.


Opposed Mode

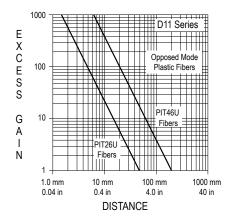

Diffuse Mode

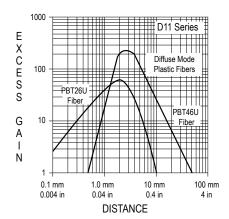

Accessories

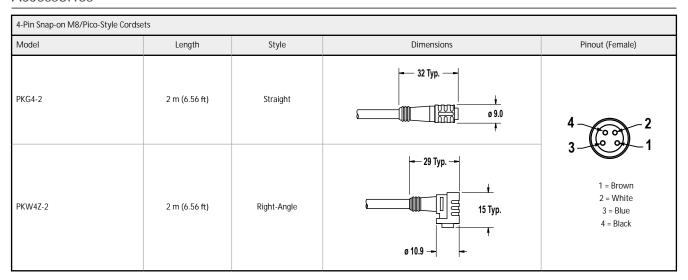

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.

Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change: Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.