

Using the UCC25230EVM-754

User's Guide



Literature Number: SLUU670
November 2011

1.5-W Forward-Flyback DC-to-DC Converter for 48-V Telecom Biasing Supply

1 Introduction

This EVM is to help evaluate the UCC25230 PWM device in a forward-flyback or flyback DC-to-DC converter topology for a 48-V telecom biasing supply. The targeted application is telecom module design with nominal 48-V input. The EVM is a dual-output converter. Each channel is nominal 12 V and 65 mA for a total output power of 1.5 W. The design is made on a small footprint and low profile, the effective circuit area for the bias portion is 0.6 in x 0.5 in x 0.15 in (L x W x H). The UCC25230 is a highly integrated PWM controller operating as an isolated forward flyback. It has integrated high-side and low-side power switches and a control circuit with all key converter functions included.

2 Description

The EVM is a 1.5-W forward-flyback DC-to-DC converter that accepts an input range of 36 V to 72 V DC and converts it to two regulated output voltages, nominally 12 V and maximum 65-mA load current for each channel. The two outputs are 1500-V level isolated from each other, with one channel on the primary side and the other on the secondary side.

2.1 Typical Applications

- Biasing Power to Power on the Main Controller (whether on the primary or the secondary side of the isolation barrier)
- 48-V Telecom
- Server Systems
- Datacom
- DSP's, ASIC's, and FPGA's

2.2 Features

- Start Up Directly from Telecom Input Voltage 36 V to 72 V DC
- Two Regulated 12-V Outputs, 65-mA Maximum Load Current
- Telecom Isolation from Primary-to-Secondary 1500 V
- Small Footprint and Low Profile Design
- Output Voltage Regulation (from no load to full load, and from low line to high line)
- Input Voltage Status Signal, (manually or automatically set up)
- Device Evaluation Test Points
- All Surface Mount Components and Industry Leading-Edge Small Footprint

3 Electrical Performance Specifications

Table 1. UCC25230EVM-754 Electrical Performance Specifications

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNITS
Input Characteristics					
Voltage range		36	48	72	V
Maximum input current	$V_{IN} = 36\text{ V}$ and $I_{OUT1} = I_{OUT2} = 65\text{ mA}$		70		mA
No load input current			8.5		
Output Characteristics					
Output voltage, V_{OUT1}	$I_{OUT1} = 0\text{ mA}$, $I_{OUT2} = 65\text{ mA}$	11.5	11.8	12.5	V
	$I_{OUT1} = 65\text{ mA}$, $I_{OUT2} = 0\text{ mA}$	11.5	11.8	12.5	
Output voltage, V_{OUT2}	$I_{OUT1} = 0\text{ mA}$, $I_{OUT2} = 100\text{ mA}$	9.5	10.0	11.0	V
	$I_{OUT1} = 100\text{ mA}$, $I_{OUT2} = 0\text{ mA}$	9.5	12.0	12.5	
Output load current, I_{OUT2} or I_{OUT1}				65	mA
Output-1 voltage regulation (regulated output)	Line regulation: input voltage = 36 V to 72 V $I_{OUT1} = I_{OUT2} = 100\text{ mA}$			10	mV
	Load regulation: input voltage = 48 V $I_{OUT1} = 0\text{ mA}$ to 100 mA $I_{OUT2} = 100\text{ mA}$			10	
Output-2 voltage regulation (cross-regulated output)	Line regulation: input voltage = 36V to 72V $I_{OUT1} = I_{OUT2} = 65\text{ mA}$			0.75	V
	Load regulation: input voltage = 48 V $I_{OUT1} = 65\text{ mA}$ $I_{OUT2} = 0\text{ mA}$ to 65 mA			-1.35	
Output voltage ripple Output-1 and -2	At $I_{OUT1} = I_{OUT2} = 65\text{ mA}$		45	60	mVpp
Systems Characteristics					
Switching frequency			380		kHz
Peak efficiency	$V_{IN} = 36\text{ V}$, $I_{OUT1} = I_{OUT2} = 50\text{ mA}$		81%		
Full load efficiency	$V_{IN} = 48\text{ V}$, $I_{OUT1} = I_{OUT2} = 65\text{ mA}$		80%		
Input status good (TP4)		4.2		5.2	V
Operating temperature	Natural convection			45	°C

NOTE: Effective bias real-estate size, L x W x H = 0.6 in x 0.5 in x 0.15 in and a board size of L x W = 2.2 in x 1.4 in.

5 Test Setup

5.1 Test Equipment

Voltage Source: V_{sc1} , the input voltage shall be a variable DC source capable of supplying up to 72 V_{DC} at no less than 0.35 A_{DC}, and connected to J1 and Ams1 as shown in Figure 2.

Multimeters:

- **Ams1:** IIN, 0 mA_{DC} to 100 mA_{DC}, ammeter, four digits display.
- **Vms1:** VIN, 0-V to 75-V voltmeter, three and half digits display.
- **Vm1:** VOUT1, 0-V to 13-V voltmeter, three and half digits display.
- **Vm2:** VOUT2, 0-V to 13-V voltmeter, three and half digits display.

Output Load (Load-1 and Load-2): Electronic, 0 mA_{DC} to 200 mA_{DC} (2 units), For the output load on VOUT1 and VOUT2, a programmable electronic load capable of sinking not less than 100 mA_{DC} shall be used. The loads should have a current display, if not then an ammeter should be added in series with the load. Refer to the schematic shown in Figure 2.

Oscilloscope: A 20-MHz or equivalent analog or digital oscilloscope with Tektronix P6138 or equivalent oscilloscope probe. Set scope for AC coupling measurement with 20-MHz bandwidth limiting. Use 20-mV/div. vertical resolution, 5.0- μ s/div. horizontal resolution for VOUT ripple voltage test. Set horizontal cursor to measure ripple voltage.

Recommended Wire Gauge: The minimum recommended wire size is AWG #26, with the total length of wire less than 8 feet (4 feet output, 4 feet return).

Ventilation FAN: A small fan capable of 200 LFM to 400 LFM is optional to reduce component temperatures, but it is not a requirement in the test at room temperature

5.2 Recommended Test Setup

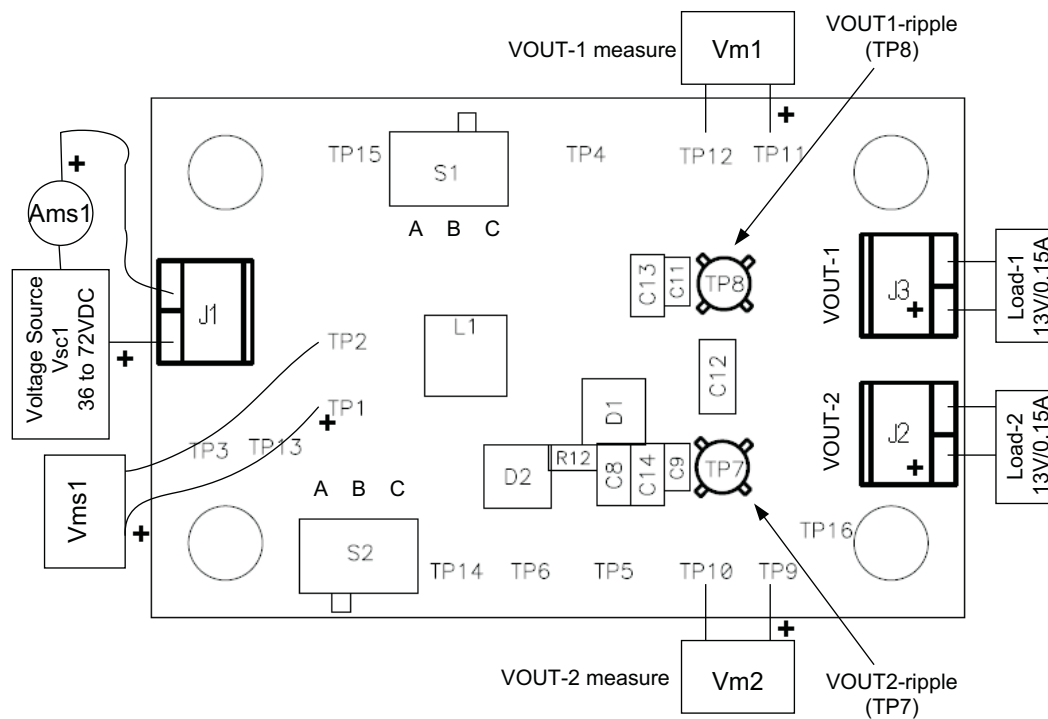


Figure 2. UCC25230EVM-754 Recommended Test Set Up

5.3 List of Test Points

Table 2. Test Points Functions

TEST POINTS	NAME	DESCRIPTION
TP1	Vin	Input voltage positive test point, for efficiency test
TP2	GND	Input voltage negative test point, for efficiency test
TP3	VDD	Device VDD on primary side
TP4	VIN_G	VIN_G good, when it is good, TP4 voltage is in 4.2 V to 5.2 V
TP5	Loop+	Feedback loop test point
TP6	Loop-	Feedback loop test point
TP7	Vo2_rpl	Output-2 voltage ripple test point
TP8	Vo1_rpl	Output-1 voltage ripple test point
TP9	Vo2+	Output-2 output terminal
TP10	Vo2-	Output-2 return terminal
TP11	Vo1+	Output-1 output terminal
TP12	Vo1-	Output-1 return terminal
TP13	GND	Primary-side ground
TP14	GND	Primary-side ground
TP15	Phase	Primary-side phase node
TP16	L1-2	Inductor coupled coil on the secondary side
J1	INPUT	Input voltage terminals
J2	VOUT-2	Output-2 load connection terminals
J3	VOUT-1	Output-1 load connection terminals
S1	VIN_G	Input voltage good manual switch
S2	VDD_short	VDD short circuit current measurement switch – not installed

6 Test Procedure

Set up the EVM based on [Figure 2](#).

CAUTION

High voltage and high temperature present when the EVM is in operation!

6.1 Line/Load Regulation and Efficiency Measurement Procedure

1. Connect the ammeter Ams1 (0 mA to 100 mA range) between DC source and J1 as shown in [Figure 2](#).
2. Prior to connecting the DC source, Vsc1, it is advisable to limit the source current to 0.35 A maximum. Make sure the DC source is initially set to 0 V and connected to J1 and Ams1 as shown in [Figure 2](#).
3. Connect voltmeter, Vms1, on to the test points, TP1 (+) and TP2 (-) as shown in [Figure 2](#).
4. Connect Load-1 to J3 as shown in [Figure 2](#). Set Load-1 to constant current mode to sink 0 mA_{DC} before the input voltage on J1 is applied.
5. Connect voltmeter, Vm1 to test point TP11 (+) and TP12(-). Set Vm1 range 0 V to 13 V_{DC} as shown in [Figure 2](#).
6. Connect Load-2 to J2 as shown in [Figure 2](#). Set Load-2 to constant current mode to sink 0 mA_{DC} before the input voltage on J1 is applied.
7. Connect voltmeter, Vm2 to test point TP9 (+) and TP10(-). Set Vm2 range 0 V to 13 V_{DC} as shown in [Figure 2](#).
8. Increase the DC source voltage from 0 V to 36.0 V_{DC}.
9. Set Load-1 to 65 mA ±0.1 mA.
10. Vary Load-2 to 0.0 mA to 65 mA.
11. Read Ams1, Vm1, and Vm2.
12. Set Load-1 to 0.0 mA.
13. Vary Load-1 to 0.0 mA to 65.0 mA
14. Read Ams1, Vm1, and Vm2.
15. Increase the DC source voltage to 72.0 V,
16. Repeat steps 9 to 14.
17. During above tests out ripple can be observed on TP8 for VOUT-1 and TP7 for VOUT-2.

6.2 Equipment Shutdown

1. Decrease Load-1 and Load-2 to 0 mA.
2. Decrease VIN from 72 V to 0 V.
3. Shut down V_{SC1}.
4. Shut down the loads.

7 Performance Data and Typical Characteristic Curves

Figure 3 through Figure 11 present typical performance curves for UCC25230EVM-754.

7.1 Efficiency

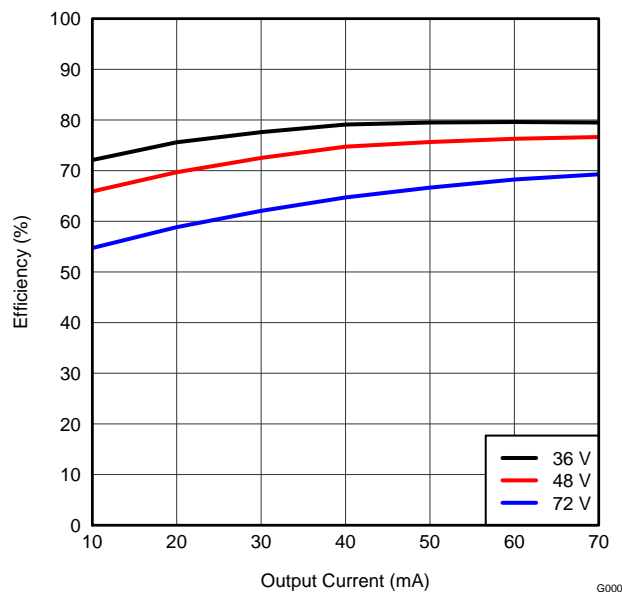


Figure 3.

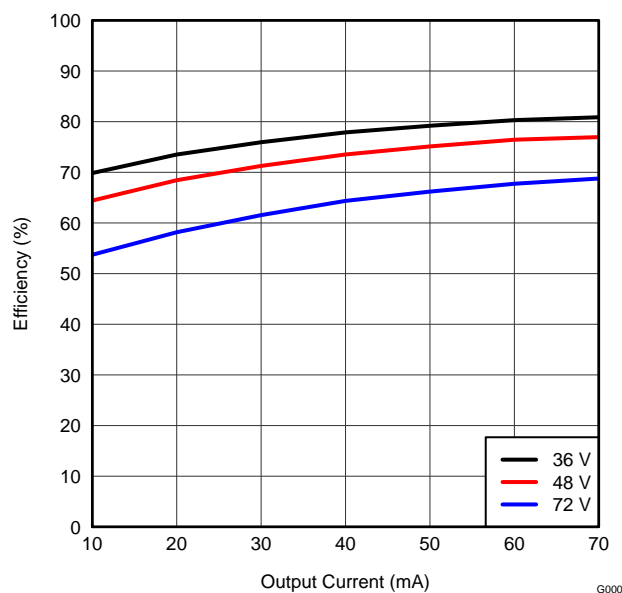


Figure 4.

7.2 Load Regulation

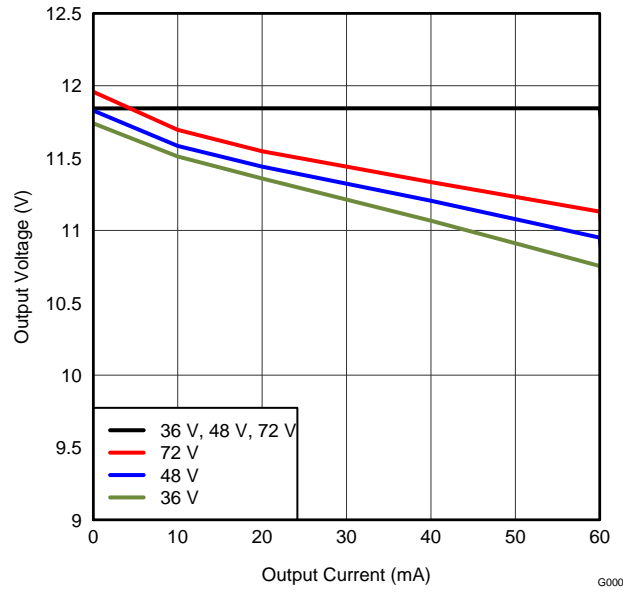


Figure 5.

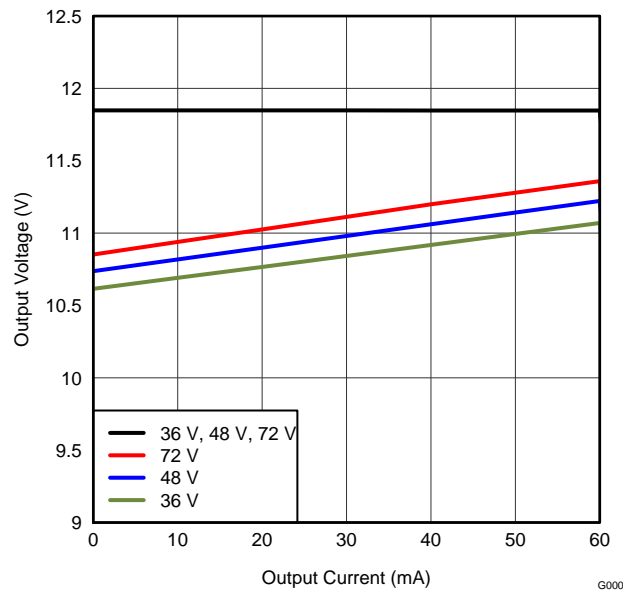



Figure 6.

7.3 Regulation at Corner Conditions

Table 3. UCC25230EVM-754 Regulation at Corners

V_{IN} (V)	I_{O1} (mA)	I_{O2} (mA)	V_{O1} (V)	V_{O2} (V)
36	0.0	0.0	11.85	11.50
		65.0		9.70
	65.0	0.0		12.10
		65.0		10.50
72	0.0	0.0		11.75
		65.0		10.25
	100.0	0.0		12.30
		65.0		11.10

7.4 Bode Plots

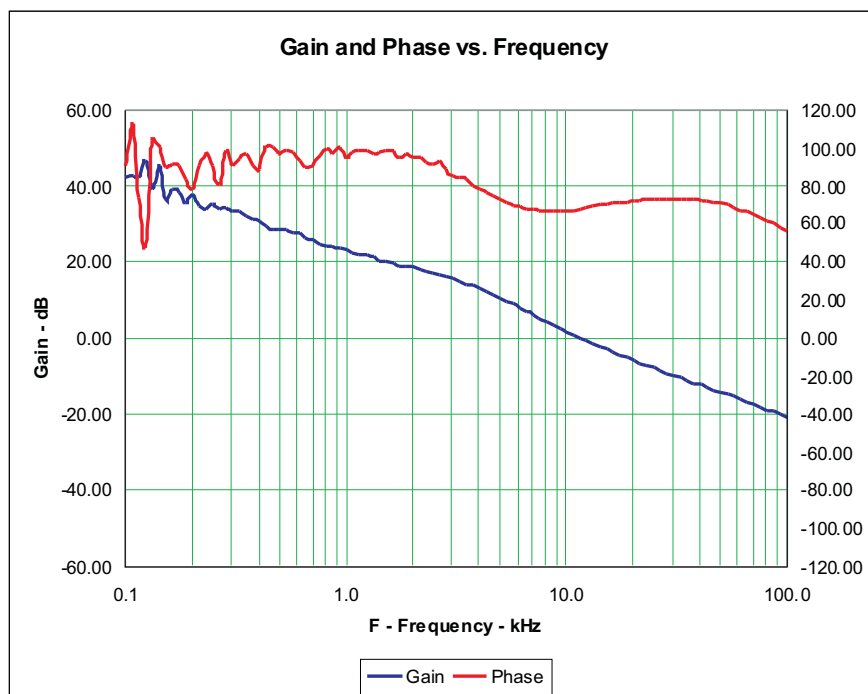

**Figure 7. Bode Plots,
Test Points Used: TP5 and TP6,
($V_{in} = 48V$, $I_{o1} = 50mA$, $I_{o2} = 50mA$)**

7.5 Output Ripple

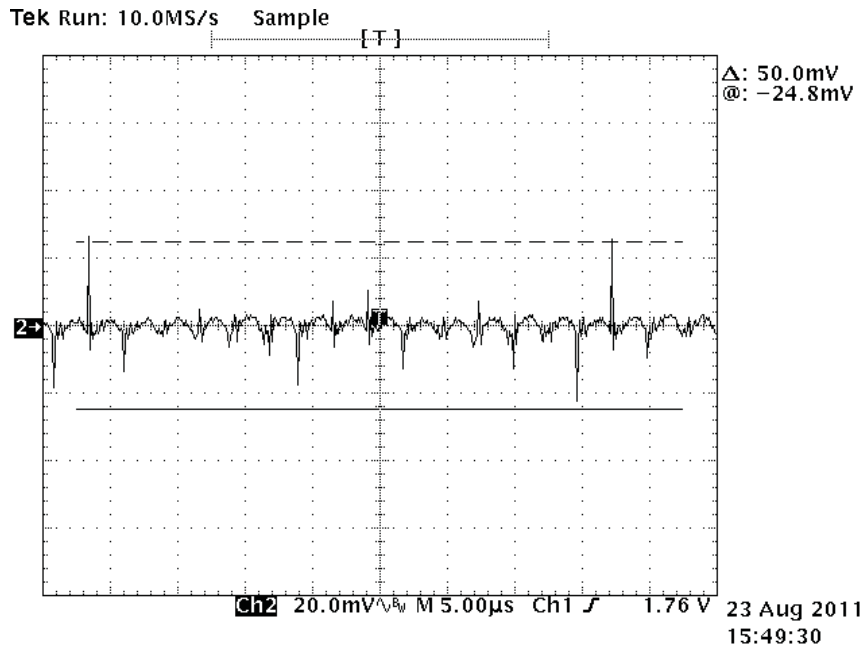


Figure 8. Output Ripple
($V_{IN} = 48\text{ V}$, $I_{o1} = I_{o2} = 50\text{ mA}$ from Vo_1 (TP8) or Vo_2 (TP7))

7.6 Phase-Node Voltage

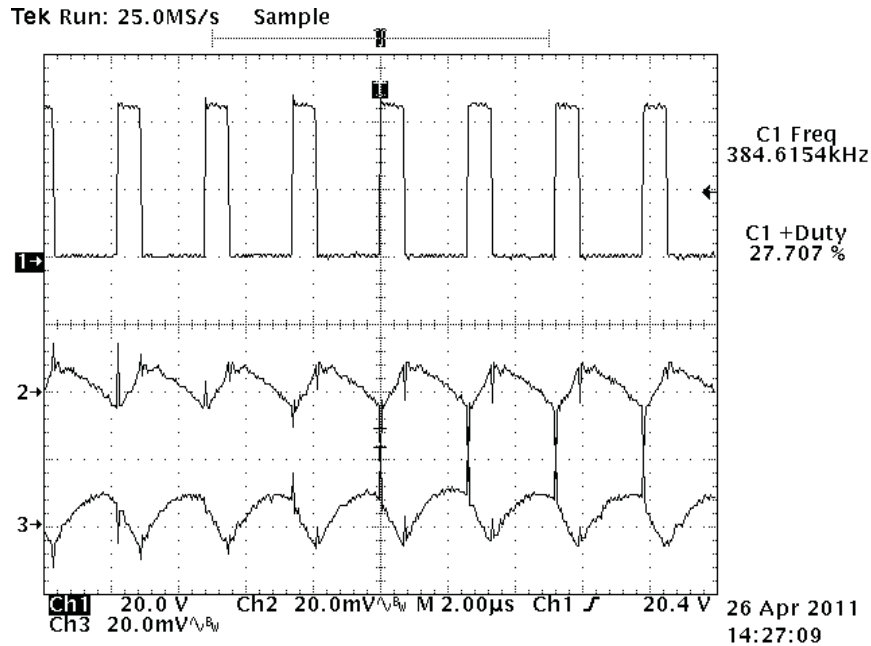


Figure 9. Switching-Node Waveform
(CH1 = Phase (TP15), Ch2 = Vo_1 ripple, Ch3 = Vo_2 ripple, $V_{IN} = 48\text{ V}$, $I_{o1} = I_{o2} = 50\text{ mA}$)

7.7 Turn-On Waveform

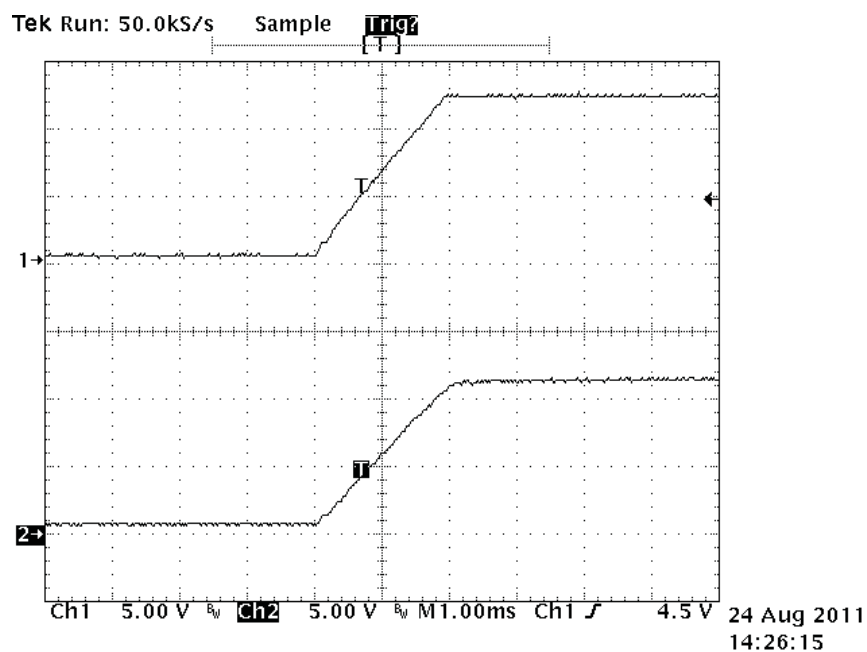


Figure 10. Enable Turn-On Waveform
($V_{IN} = 48\text{ V}$, $I_{o1} = I_{o2} = 50\text{ mA}$, Ch1: V_{o1} (TP8), V_{o2} (TP7))

7.8 Turn-Off Waveform

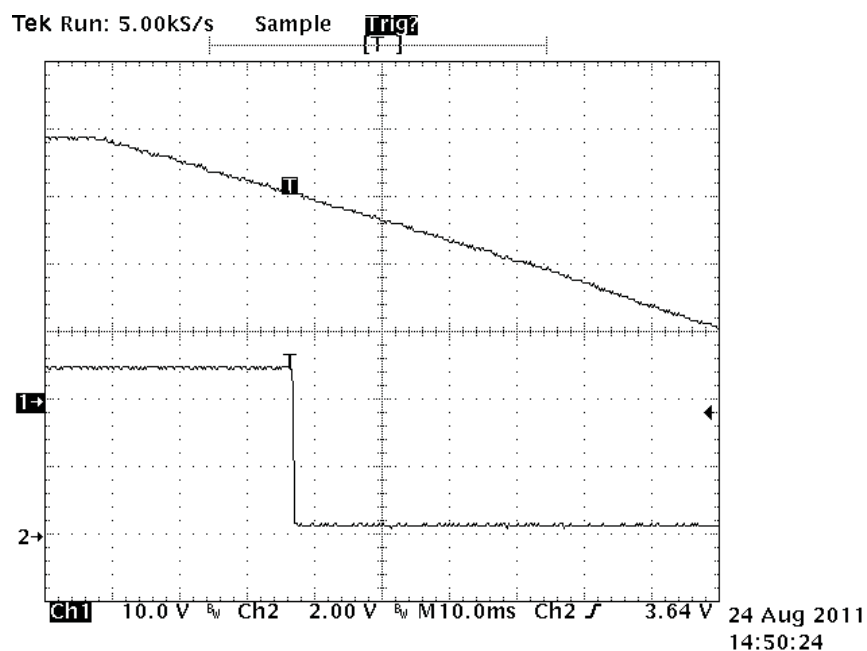


Figure 11. Enable Turn-Off Waveform
($I_{o1} = I_{o2} = 50\text{ mA}$, Ch1: V_{IN} (TP1, 2), Ch2: V_{IN_G} (TP4))

8 EVM Assembly Drawing and PCB layout

The following figures (Figure 12 through Figure 17) show the design of the UCC25230EVM-754 printed circuit board.

- **PCB dimensions:** L x W = 2.2 inch x 1.4 inch,
- **PCB material:** FR406 or compatible, four layers and 2-oz copper on each layer.

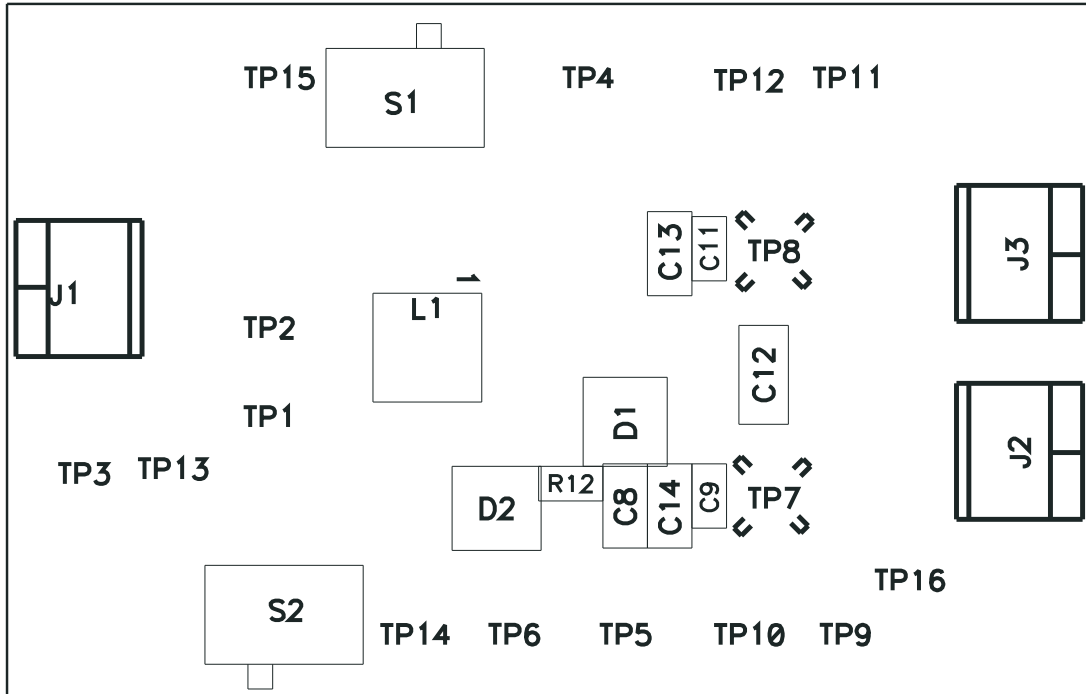


Figure 12. UCC25230EVM-754 Top Layer Assembly Drawing (top view)

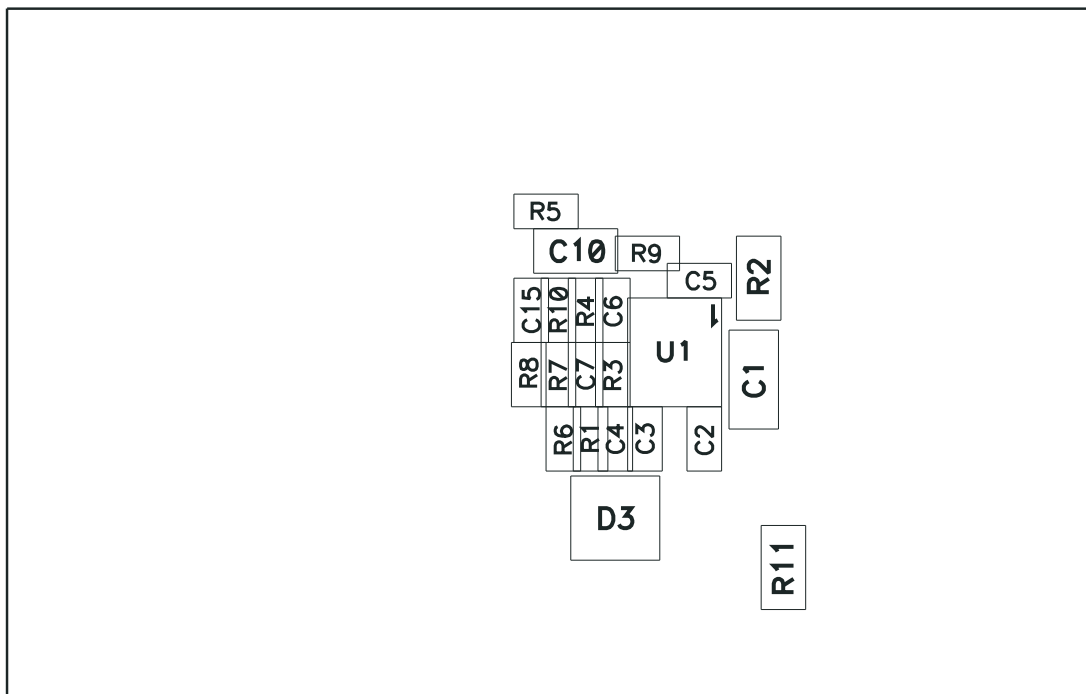


Figure 13. Bottom Assembly Drawing (bottom view)

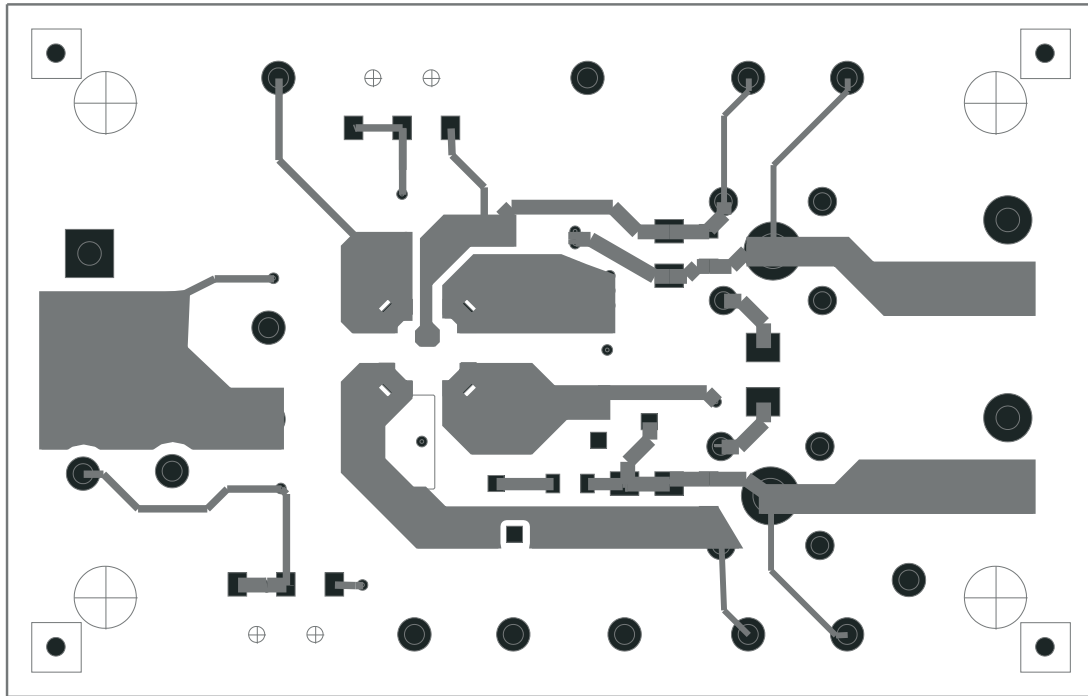


Figure 14. Top Copper (top View)

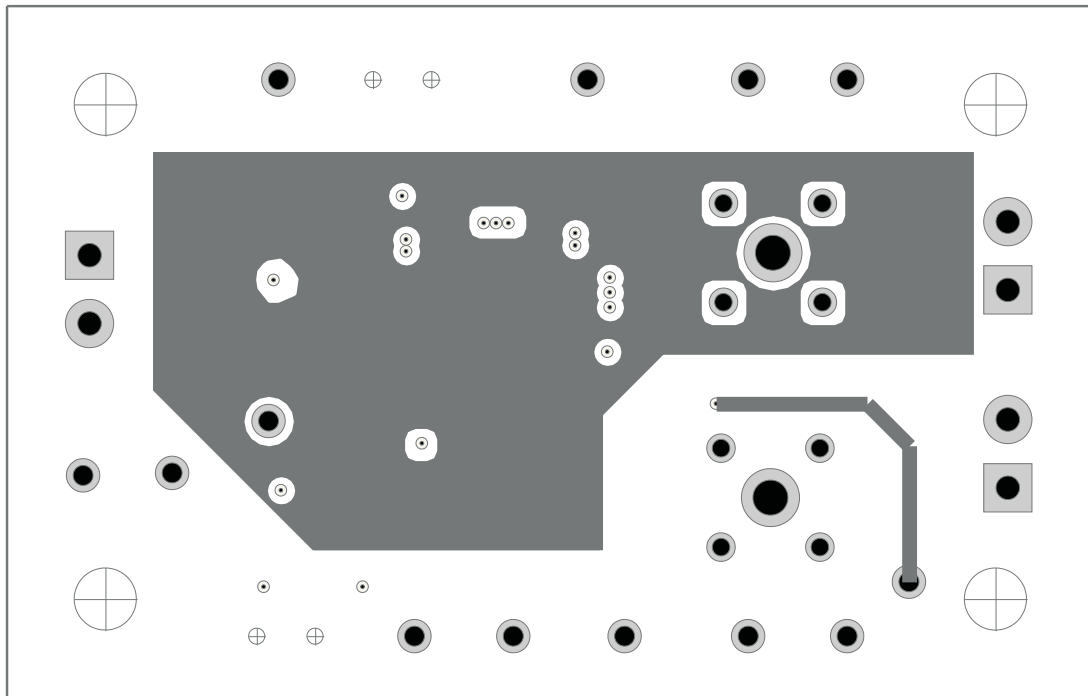


Figure 15. Internal Layer 1 (top view)

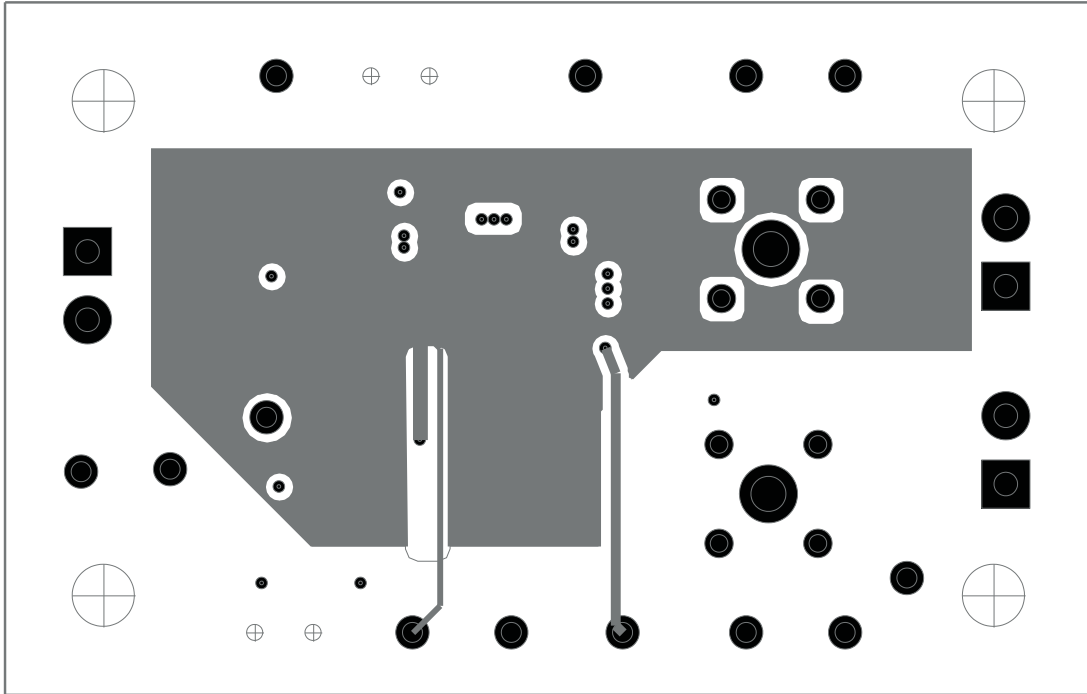


Figure 16. Internal Layer 2 (top view)

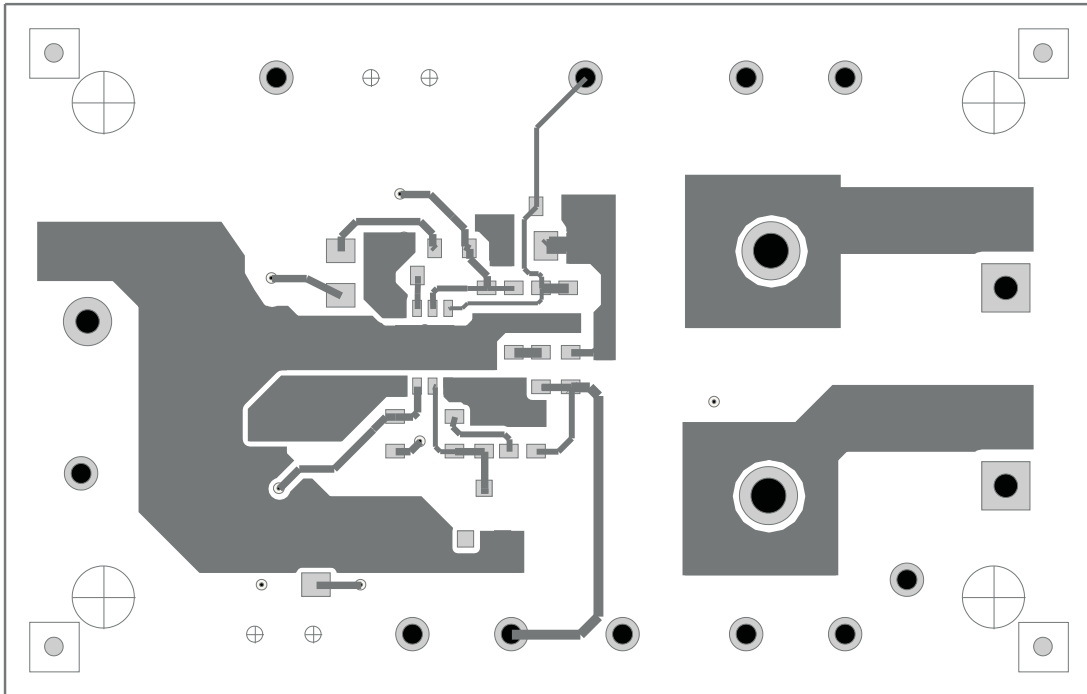


Figure 17. Bottom Copper (top view)

9 List of Materials

The EVM components list according to the schematic shown in [Figure 1](#).

Table 4. UCC25230EVM-754 List of Materials

QTY	REF DES	DESCRIPTION	PART NUMBER	MFR
1	C1	Capacitor, ceramic, 100 V, X7R, 20%, 1 μ F, 1206	std	std
1	C12	Capacitor, ceramic, 2000 V, X7R, 20%, 1000 pF, 1206	std	std
4	C2, C6, C9, C11	Capacitor, ceramic, 16 V, X7R, \pm 10%, 1 μ F, 0603	std	std
1	C3	Capacitor, ceramic, 50 V, NP0, \pm 10%, 1000 pF, 0603	std	std
1	C4	Capacitor, ceramic, 50 V, X7R, \pm 10%, 47 pF, 0603	std	std
2	C5, C15	Capacitor, ceramic, 16 V, X7R, \pm 10%, 0.1 μ F, 0603	std	std
1	C7	Capacitor, ceramic, 50 V, NP0, \pm 10%, 270 pF, 0603	std	std
4	C8, C10, C13, C14	Capacitor, ceramic, 16 V, X5R, \pm 10%, 4.7 μ F, 0805	std	std
1	D1	Diode, switching, 200 mA, 85 V, 350 mW, SOT23	BAS16	Fairchild
1	D2	Diode, Zener, 11 V, 20 mA, 225 mW, 5%, SOT23	BZX84C11LT1G	Onsemi
1	D3	Diode, Zener, 3.9 V, 20 mA, 225 mW, 5%, SOT23	BZX84C3V9LT1G	Onsemi
3	J1, J2, J3	Terminal block, 2 pin, 6 A, 3.5 mm, 0.27 inch x 0.25 inch	OSTTE020161	OST
1	L1	Inductor, SMT, 0.35 A, 3.3 Ω , 220 μ H, 0.19 inch x 0.19 inch	MA5401-AE	Coilcraft
1	R1	Resistor, chip, 1/16 W, 1%, 20.5 k Ω , 0603	std	std
1	R10	Resistor, chip, 1/16 W, 1%, 6.81 k Ω , 0603	std	std
0	R11	Resistor, chip, 1/10 W, 1%, open, 0805	std	std
1	R2	Resistor, chip, 1/8 W, 1%, 316 k Ω , 0805	std	std
1	R3	Resistor, chip, 1/16 W, 1%, 47.5 k Ω , 0603	std	std
2	R4, R5	Resistor, chip, 1/16 W, 1%, 10 k Ω , 0603	std	std
1	R6	Resistor, chip, 1/16 W, 1%, 178 k Ω , 0603	std	std
1	R7	Resistor, chip, 1/16 W, 1%, 3.65 k Ω , 0603	std	std
2	R8, R12	Resistor, chip, 1/16 W, 1%, 49.9 Ω , 0603	std	std
1	R9	Resistor, chip, 1/16 W, 1%, 0 Ω , 0603	std	std
1	S1	Switch, actuator SPDT, 0.18 inch x 0.28 inch	AYZ0102AGRLC	C & K
0	S2	Switch, actuator SPDT, open, 0.18 inch x 0.28 inch	AYZ0102AGRLC	C & K
1	U1	12-V to 100-V input, 0.25-A output switching converter, VSON	UCC25230DRM	TI

Evaluation Board/Kit Important Notice

Texas Instruments (TI) provides the enclosed product(s) under the following conditions:

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. Persons handling the product(s) must have electronics training and observe good engineering practice standards. As such, the goods being provided are not intended to be complete in terms of required design-, marketing-, and/or manufacturing-related protective considerations, including product safety and environmental measures typically found in end products that incorporate such semiconductor components or circuit boards. This evaluation board/kit does not fall within the scope of the European Union directives regarding electromagnetic compatibility, restricted substances (RoHS), recycling (WEEE), FCC, CE or UL, and therefore may not meet the technical requirements of these directives or other related directives.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. **THE FOREGOING WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.**

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods. Due to the open construction of the product, it is the user's responsibility to take any and all appropriate precautions with regard to electrostatic discharge.

EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

TI currently deals with a variety of customers for products, and therefore our arrangement with the user **is not exclusive.**

TI assumes **no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.**

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please contact the TI application engineer or visit www.ti.com/esh.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used.

FCC Warning

This evaluation board/kit is intended for use for **ENGINEERING DEVELOPMENT, DEMONSTRATION, OR EVALUATION PURPOSES ONLY** and is not considered by TI to be a finished end-product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC rules, which are designed to provide reasonable protection against radio frequency interference. Operation of this equipment in other environments may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

EVM Warnings and Restrictions

It is important to operate this EVM within the input voltage range of 36 V to 72 V and the output voltage range of 8.5 V to 12.5 V .

Exceeding the specified input range may cause unexpected operation and/or irreversible damage to the EVM. If there are questions concerning the input range, please contact a TI field representative prior to connecting the input power.

Applying loads outside of the specified output range may result in unintended operation and/or possible permanent damage to the EVM. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative.

During normal operation, some circuit components may have case temperatures greater than 60° C. The EVM is designed to operate properly with certain components above 60° C as long as the input and output ranges are maintained. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors. These types of devices can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during operation, please be aware that these devices may be very warm to the touch.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2011, Texas Instruments Incorporated

EVALUATION BOARD/KIT/MODULE (EVM) ADDITIONAL TERMS

Texas Instruments (TI) provides the enclosed Evaluation Board/Kit/Module (EVM) under the following conditions:

The user assumes all responsibility and liability for proper and safe handling of the goods. Further, the user indemnifies TI from all claims arising from the handling or use of the goods.

Should this evaluation board/kit not meet the specifications indicated in the User's Guide, the board/kit may be returned within 30 days from the date of delivery for a full refund. THE FOREGOING LIMITED WARRANTY IS THE EXCLUSIVE WARRANTY MADE BY SELLER TO BUYER AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE. EXCEPT TO THE EXTENT OF THE INDEMNITY SET FORTH ABOVE, NEITHER PARTY SHALL BE LIABLE TO THE OTHER FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.

Please read the User's Guide and, specifically, the Warnings and Restrictions notice in the User's Guide prior to handling the product. This notice contains important safety information about temperatures and voltages. For additional information on TI's environmental and/or safety programs, please visit www.ti.com/esh or contact TI.

No license is granted under any patent right or other intellectual property right of TI covering or relating to any machine, process, or combination in which such TI products or services might be or are used. TI currently deals with a variety of customers for products, and therefore our arrangement with the user is not exclusive. TI assumes no liability for applications assistance, customer product design, software performance, or infringement of patents or services described herein.

REGULATORY COMPLIANCE INFORMATION

As noted in the EVM User's Guide and/or EVM itself, this EVM and/or accompanying hardware may or may not be subject to the Federal Communications Commission (FCC) and Industry Canada (IC) rules.

For EVMs **not** subject to the above rules, this evaluation board/kit/module is intended for use for ENGINEERING DEVELOPMENT, DEMONSTRATION OR EVALUATION PURPOSES ONLY and is not considered by TI to be a finished end product fit for general consumer use. It generates, uses, and can radiate radio frequency energy and has not been tested for compliance with the limits of computing devices pursuant to part 15 of FCC or ICES-003 rules, which are designed to provide reasonable protection against radio frequency interference. Operation of the equipment may cause interference with radio communications, in which case the user at his own expense will be required to take whatever measures may be required to correct this interference.

General Statement for EVMs including a radio

User Power/Frequency Use Obligations: This radio is intended for development/professional use only in legally allocated frequency and power limits. Any use of radio frequencies and/or power availability of this EVM and its development application(s) must comply with local laws governing radio spectrum allocation and power limits for this evaluation module. It is the user's sole responsibility to only operate this radio in legally acceptable frequency space and within legally mandated power limitations. Any exceptions to this are strictly prohibited and unauthorized by Texas Instruments unless user has obtained appropriate experimental/development licenses from local regulatory authorities, which is responsibility of user including its acceptable authorization.

For EVMs annotated as FCC – FEDERAL COMMUNICATIONS COMMISSION Part 15 Compliant

Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Interference Statement for Class A EVM devices

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Interference Statement for Class B EVM devices

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EVMs annotated as IC – INDUSTRY CANADA Compliant

This Class A or B digital apparatus complies with Canadian ICES-003.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Concerning EVMs including radio transmitters

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Concerning EVMs including detachable antennas

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

This radio transmitter has been approved by Industry Canada to operate with the antenna types listed in the user guide with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Cet appareil numérique de la classe A ou B est conforme à la norme NMB-003 du Canada.

Les changements ou les modifications pas expressément approuvés par la partie responsable de la conformité ont pu vider l'autorité de l'utilisateur pour actionner l'équipement.

Concernant les EVMs avec appareils radio

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Concernant les EVMs avec antennes détachables

Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés dans le manuel d'usage et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

【Important Notice for Users of this Product in Japan】

This development kit is NOT certified as Confirming to Technical Regulations of Radio Law of Japan

If you use this product in Japan, you are required by Radio Law of Japan to follow the instructions below with respect to this product:

1. Use this product in a shielded room or any other test facility as defined in the notification #173 issued by Ministry of Internal Affairs and Communications on March 28, 2006, based on Sub-section 1.1 of Article 6 of the Ministry's Rule for Enforcement of Radio Law of Japan,
2. Use this product only after you obtained the license of Test Radio Station as provided in Radio Law of Japan with respect to this product, or
3. Use of this product only after you obtained the Technical Regulations Conformity Certification as provided in Radio Law of Japan with respect to this product. Also, please do not transfer this product, unless you give the same notice above to the transferee. Please note that if you could not follow the instructions above, you will be subject to penalties of Radio Law of Japan.

Texas Instruments Japan Limited
(address) 24-1, Nishi-Shinjuku 6 chome, Shinjuku-ku, Tokyo, Japan

<http://www.tij.co.jp>

【ご使用にあたっての注】

本開発キットは技術基準適合証明を受けておりません。

本製品のご使用に際しては、電波法遵守のため、以下のいずれかの措置を取っていただく必要がありますのでご注意ください。

1. 電波法施行規則第6条第1項第1号に基づく平成18年3月28日総務省告示第173号で定められた電波暗室等の試験設備でご使用いただく。
2. 実験局の免許を取得後ご使用いただく。
3. 技術基準適合証明を取得後ご使用いただく。

なお、本製品は、上記の「ご使用にあたっての注意」を譲渡先、移転先に通知しない限り、譲渡、移転できないものとします。

上記を遵守頂けない場合は、電波法の罰則が適用される可能性があることをご留意ください。

日本テキサス・インスツルメンツ株式会社
東京都新宿区西新宿6丁目2番1号
西新宿三井ビル

<http://www.tij.co.jp>

EVALUATION BOARD/KIT/MODULE (EVM) WARNINGS, RESTRICTIONS AND DISCLAIMERS

For Feasibility Evaluation Only, in Laboratory/Development Environments. Unless otherwise indicated, this EVM is not a finished electrical equipment and not intended for consumer use. It is intended solely for use for preliminary feasibility evaluation in laboratory/development environments by technically qualified electronics experts who are familiar with the dangers and application risks associated with handling electrical mechanical components, systems and subsystems. It should not be used as all or part of a finished end product.

Your Sole Responsibility and Risk. You acknowledge, represent and agree that:

1. You have unique knowledge concerning Federal, State and local regulatory requirements (including but not limited to Food and Drug Administration regulations, if applicable) which relate to your products and which relate to your use (and/or that of your employees, affiliates, contractors or designees) of the EVM for evaluation, testing and other purposes.
2. You have full and exclusive responsibility to assure the safety and compliance of your products with all such laws and other applicable regulatory requirements, and also to assure the safety of any activities to be conducted by you and/or your employees, affiliates, contractors or designees, using the EVM. Further, you are responsible to assure that any interfaces (electronic and/or mechanical) between the EVM and any human body are designed with suitable isolation and means to safely limit accessible leakage currents to minimize the risk of electrical shock hazard.
3. You will employ reasonable safeguards to ensure that your use of the EVM will not result in any property damage, injury or death, even if the EVM should fail to perform as described or expected.
4. You will take care of proper disposal and recycling of the EVM's electronic components and packing materials.

Certain Instructions. It is important to operate this EVM within TI's recommended specifications and environmental considerations per the user guidelines. Exceeding the specified EVM ratings (including but not limited to input and output voltage, current, power, and environmental ranges) may cause property damage, personal injury or death. If there are questions concerning these ratings please contact a TI field representative prior to connecting interface electronics including input power and intended loads. Any loads applied outside of the specified output range may result in unintended and/or inaccurate operation and/or possible permanent damage to the EVM and/or interface electronics. Please consult the EVM User's Guide prior to connecting any load to the EVM output. If there is uncertainty as to the load specification, please contact a TI field representative. During normal operation, some circuit components may have case temperatures greater than 60°C as long as the input and output are maintained at a normal ambient operating temperature. These components include but are not limited to linear regulators, switching transistors, pass transistors, and current sense resistors which can be identified using the EVM schematic located in the EVM User's Guide. When placing measurement probes near these devices during normal operation, please be aware that these devices may be very warm to the touch. As with all electronic evaluation tools, only qualified personnel knowledgeable in electronic measurement and diagnostics normally found in development environments should use these EVMs.

Agreement to Defend, Indemnify and Hold Harmless. You agree to defend, indemnify and hold TI, its licensors and their representatives harmless from and against any and all claims, damages, losses, expenses, costs and liabilities (collectively, "Claims") arising out of or in connection with any use of the EVM that is not in accordance with the terms of the agreement. This obligation shall apply whether Claims arise under law of tort or contract or any other legal theory, and even if the EVM fails to perform as described or expected.

Safety-Critical or Life-Critical Applications. If you intend to evaluate the components for possible use in safety critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, such as devices which are classified as FDA Class III or similar classification, then you must specifically notify TI of such intent and enter into a separate Assurance and Indemnity Agreement.

Mailing Address: Texas Instruments, Post Office Box 655303, Dallas, Texas 75265
Copyright © 2012, Texas Instruments Incorporated

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, enhancements, improvements and other changes to its semiconductor products and services per JESD46, latest issue, and to discontinue any product or service per JESD48, latest issue. Buyers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All semiconductor products (also referred to herein as "components") are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its components to the specifications applicable at the time of sale, in accordance with the warranty in TI's terms and conditions of sale of semiconductor products. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by applicable law, testing of all parameters of each component is not necessarily performed.

TI assumes no liability for applications assistance or the design of Buyers' products. Buyers are responsible for their products and applications using TI components. To minimize the risks associated with Buyers' products and applications, Buyers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right relating to any combination, machine, or process in which TI components or services are used. Information published by TI regarding third-party products or services does not constitute a license to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of significant portions of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions.

Resale of TI components or services with statements different from or beyond the parameters stated by TI for that component or service voids all express and any implied warranties for the associated TI component or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

Buyer acknowledges and agrees that it is solely responsible for compliance with all legal, regulatory and safety-related requirements concerning its products, and any use of TI components in its applications, notwithstanding any applications-related information or support that may be provided by TI. Buyer represents and agrees that it has all the necessary expertise to create and implement safeguards which anticipate dangerous consequences of failures, monitor failures and their consequences, lessen the likelihood of failures that might cause harm and take appropriate remedial actions. Buyer will fully indemnify TI and its representatives against any damages arising out of the use of any TI components in safety-critical applications.

In some cases, TI components may be promoted specifically to facilitate safety-related applications. With such components, TI's goal is to help enable customers to design and create their own end-product solutions that meet applicable functional safety standards and requirements. Nonetheless, such components are subject to these terms.

No TI components are authorized for use in FDA Class III (or similar life-critical medical equipment) unless authorized officers of the parties have executed a special agreement specifically governing such use.

Only those TI components which TI has specifically designated as military grade or "enhanced plastic" are designed and intended for use in military/aerospace applications or environments. Buyer acknowledges and agrees that any military or aerospace use of TI components which have **not** been so designated is solely at the Buyer's risk, and that Buyer is solely responsible for compliance with all legal and regulatory requirements in connection with such use.

TI has specifically designated certain components which meet ISO/TS16949 requirements, mainly for automotive use. Components which have not been so designated are neither designed nor intended for automotive use; and TI will not be responsible for any failure of such components to meet such requirements.

Products

Audio	www.ti.com/audio
Amplifiers	amplifier.ti.com
Data Converters	dataconverter.ti.com
DLP® Products	www.dlp.com
DSP	dsp.ti.com
Clocks and Timers	www.ti.com/clocks
Interface	interface.ti.com
Logic	logic.ti.com
Power Mgmt	power.ti.com
Microcontrollers	microcontroller.ti.com
RFID	www.ti-rfid.com
OMAP Applications Processors	www.ti.com/omap
Wireless Connectivity	www.ti.com/wirelessconnectivity

Applications

Automotive and Transportation	www.ti.com/automotive
Communications and Telecom	www.ti.com/communications
Computers and Peripherals	www.ti.com/computers
Consumer Electronics	www.ti.com/consumer-apps
Energy and Lighting	www.ti.com/energy
Industrial	www.ti.com/industrial
Medical	www.ti.com/medical
Security	www.ti.com/security
Space, Avionics and Defense	www.ti.com/space-avionics-defense
Video and Imaging	www.ti.com/video

TI E2E Community

e2e.ti.com