

TECHNICAL INFORMATION MANUAL

Revision 4 – 28 February 2022

R4320P

Proton

Industrial 4-port RAIN RFID Long Range Reader



Visit the [Proton R4320P web page](#), you will find the latest revision of data sheets, manuals, certifications, technical drawings, software and firmware. All you need to start using your reader in a few clicks!

Scope of Manual

The goal of this manual is to provide the basic information to work with the Proton R4320P Industrial 4-port RAIN RFID Long Range Reader.

This manual refers to:

- Proton R4320P DISTRO firmware revision \geq 1.4.0
- [SDK \(Software Development Kit\)](#) revision \geq 4.7.0

Change Document Record

Date	Revision	Changes	Pages
30 Nov 2018	00	Preliminary Release	-
05 Nov 2019	01	Added <i>CE Declaration of Conformity</i>	65
		Modified <i>Ordering Options</i> table	9
		Modified <i>Ethernet Port</i> paragraph	16
08 Jan 2020	02	Added <i>FCC Compliance</i> paragraph and <i>Proton FCC Grant</i>	65
01 Apr 2021	03	Graphic Restyling	all pages
		Added <i>Installation Notice</i> paragraph	8
		Added <i>AUTONOMOUS Profile</i> chapter	50
		Added <i>Technical Drawings</i> paragraph	60
		Added <i>Connecting to RA0003 Multiplexer</i> chapter	62
		Modified <i>Regulatory Compliance</i> chapter	65
28 Feb 2022	04	Modified <i>Regulatory Compliance</i> chapter	65
		Modified <i>firmware revision in Scope of Manual</i> paragraph	2
		Renamed <i>HID</i> profile in <i>AUTONOMOUS</i> profile	all pages
		Added <i>EPC Filter Mask</i> and <i>RSSI Threshold</i> options in the <i>AUTONOMOUS Configuration Options</i> paragraph	30
		Renamed <i>Output Port</i> in <i>Comm Protocol</i> options in the <i>AUTONOMOUS Configuration Options</i> paragraph	30
		Added <i>Ant Notify</i> option in <i>EPC code parameters</i> paragraph	35
		Modified <i>Tab. 4.4: Escape Sequences supported</i>	36
		Added <i>EPC C1G2 Session</i> and <i>Code</i> options in the <i>EASY2READ Configuration Options</i> , <i>AUTONOMOUS Configuration Options</i> and <i>CUSTOM Configuration Options</i> paragraphs	28, 30, 40
		Added <i>Software Trigger</i> and <i>Initial String</i> options in the <i>AUTONOMOUS Configuration Options</i> paragraph	31, 35
		Modified <i>Scan Delay</i> option in the <i>AUTONOMOUS Configuration Options</i> paragraph	33
		Modified <i>EASY2READ Profile</i> , <i>AUTONOMOUS Profile</i> and <i>CUSTOM Profile</i> chapters	42, 50, 54
Modified <i>I/O Interface</i> in the <i>Technical Specifications Table</i>	59		

Reference Document

- [RD1] EPCglobal: EPC Radio-Frequency Identity Protocols Class-1 Generation-2 UHF RFID Protocol for Communications at 860 MHz – 960 MHz, Version 2.0.1 (April, 2015).
- [RD2] CMC Centro Misura Compatibilità S.r.l. - Report Federal Communication Commission (FCC) – Proton R4320P –Long range RAIN RFID reader. Test report n. R19237901 Rev. 1.0 – 11 Dec 2019

CAEN RFID srl

Via Vetraia, 11 55049 Viareggio (LU) - ITALY
Tel. +39.0584.388.398 Fax +39.0584.388.959
info@caenrfid.com
www.caenrfid.com

© CAEN RFID srl – 2022

Disclaimer

No part of this manual may be reproduced in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of CAEN RFID.

The information contained herein has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. CAEN RFID reserves the right to modify its products specifications without giving any notice; for up to date information please visit www.caenrfid.com.


Federal Communications Commission (FCC) Notice

This device was tested and found to comply with the limits set forth in Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This device generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instruction manual, the product may cause harmful interference to radio communications. Operation of this product in a residential area is likely to cause harmful interference, in which case, the user is required to correct the interference at their own expense. The authority to operate this product is conditioned by the requirements that no modifications be made to the equipment unless the changes or modifications are expressly approved by CAEN RFID.

Disposal of the product

Do not dispose the product in municipal or household waste. Please check your local regulations for disposal/recycle of electronic products.

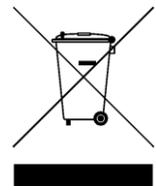

Index

	Scope of Manual	2
	Change Document Record	2
	Reference Document	2
1	Introduction	7
	Description	7
	Development Kit	8
	Installation Notice	8
	Ordering Options	9
2	Getting Started	10
	Introduction	10
	Connecting to the Proton Reader using the Ethernet port	10
	Ethernet Communication Setup	10
	Easy Controller	11
3	External Interface Description	13
	LEDS	13
	Connectors	14
	Power Supply	14
	Ethernet Port	16
	GPIO/Serial	17
	RS232 Communication	20
	Antennas	21
4	Configuration Using the Web Interface	23
	Introduction	23
	NETWORK	25
	SYSTEM	26
	RFID	27
	EASY2READ Configuration Options	28
	AUTONOMOUS Configuration Options	30
	CUSTOM Configuration Options	40
	INFO	41
5	EASY2READ Profile	42
	Introduction	42
	Set the EASY2READ profile	42
	EASY2READ configuration options	42
	Connecting using the Ethernet port	43
	Ethernet Communication Setup	43
	Easy Controller	43
	Connecting using the serial port	45
	Serial Communication Setup	45
	Easy Controller	45
	Inventory on GPIO state change	48
6	AUTONOMOUS Profile	50
	Introduction	50
	Set the AUTONOMOUS profile	50
	AUTONOMOUS configuration options	50
	Connecting using the Ethernet port	52
	Ethernet Communication Setup	52
	Connecting using the serial port	53
	Serial Communication Setup	53
7	CUSTOM Profile	54
	Introduction	54
	Set the CUSTOM profile	54
	CUSTOM Configuration options	54
	Connecting using the Ethernet port	55
	Ethernet Communication Setup	55
	Java Virtual Machine	55

8	Reader Reset	56
9	Firmware Upgrade	57
10	Technical Specifications	59
	Technical Specifications Table	59
	Technical Drawings	60
11	Connecting to RA0003 Multiplexer	62
	RA0003 Multiplexer	62
	Proton R4320P – RA0003 Multiplexer Connection.....	63
12	Regulatory Compliance	65
	CE Compliance	65
	FCC Compliance	65
	RoHS EU Directive	66
	Proton R4320P CE DECLARATION OF CONFORMITY	67
	Proton R4320P FCC Grant.....	68

List of Figures

Fig. 1.1: Proton reader (Model R4320P)	7
Fig. 1.2: Proton R4320P Technical drawings: top view	8
Fig. 3.1: Proton R4320P LEDs	13
Fig. 3.2: Proton R4320P Interfaces Panel	14
Fig. 3.3: Power Supply connector (reader side)	14
Fig. 3.4: Power Connector PHOENIX 1543029	15
Fig. 3.5: Phoenix 1543029 connector	15
Fig. 3.6: Ethernet Connector (reader side)	16
Fig. 3.7: GPIO/Serial Connector (reader side)	17
Fig. 3.8: GPIO Input Signal	18
Fig. 3.9: GPIO Output Signal	20
Fig. 3.10: Example of a serial connection between the reader and a PC	20
Fig. 3.11: Example of a serial connection between the reader and a PC using a USB/RS232 converter	21
Fig. 3.12: Proton R4320P Antennas	21
Fig. 4.1: Proton R4320P Web Interface	24
Fig. 10.1: Proton R4320P Technical Drawings – 3D view	60
Fig. 10.2: Proton R4320P Technical Drawings	61
Fig. 11.1: RA0003 UHF Antenna Multiplexer	62
Fig. 11.2: Proton reader – RA0003 MUX Connection- case 1	63
Fig. 11.3: Proton reader – RA0003 MUX Connection – case 2	64

List of Tables

Tab. 1.1: Cylindrical-head self-tapping screw measures	9
Tab. 3.1: Proton R4320P LEDs	13
Tab. 3.2: Proton R4320P Interfaces Panel	14
Tab. 3.3: Proton R4320P - Power Supply Connector Poles	14
Tab. 3.4: PHOENIX CONTACT: 1543029 Poles	15
Tab. 3.5: Proton R4320P - Ethernet Connector Poles	16
Tab. 3.6: Proton R4320P - Ethernet Connector LEDS	16
Tab. 3.7: Proton R4320P – GPIO/Serial Connector Poles	17
Tab. 3.8: Proton R4320P Antennas	21
Tab. 4.1: Conducted power	28
Tab. 4.2: Conducted power	30
Tab. 4.3: EPC Code parameters	35
Tab. 4.4: Escape Sequences supported	36
Tab. 4.5: Conducted power	40
Tab. 10.1: Proton R4320P Technical Specifications	59

1 INTRODUCTION

Description

The **Proton** (Model R4320P) is a rugged long range RAIN RFID reader of the easy2read[®] product line, well suited for industrial environment installations.

The **Proton** reader has 4 antenna ports capable of a 31.5 dBm maximum power enabling to build RAIN RFID portals for logistic. Its compact form factor makes it easy to install and the IP65 protection permits outdoor or harsh environment installations. Featuring Power Over Ethernet, RS232 and GPIOs via industry standard M12 connectors the Proton is an ideal choice for industrial automation and Industry 4.0 solutions.

The **Proton** is based upon an embedded Linux platform and it's easily configurable using an internal web interface. System integrators can customize the behaviour of the reader installing Java code that, having access to all the RFID features and interfaces, permits a full customization.

The **Proton** reader complies with and can operate in both European and US regulatory environments and, due to its multiregional capabilities, it's ideal for integration in devices requiring compliance to different geographical regions.



Fig. 1.1: Proton reader (Model R4320P)

Development Kit

A development kit with adapter, antennas, cable and demo tags is available:

The kit includes:

- n. 1 [A927Z Temperature Logger Tag](#)
- n. 1 [RT0005 Temperature Logger Tag](#)
- n. 1 [Set of Labels](#)
- n. 1 [WANTENNAX019](#) (ETSI) or [WANTENNAX020](#) (FCC) Circular polarized antenna
- n. 1 WALIM0000006 (EU) or WALIM0000007 (US) power supply for Proton R4320P Reader.
- n.1 WCAVOAAAX005 antenna cable
- n. 1 ECCANTRFX033 Ethernet cable (5 m)

The Proton R4320P reader and its development kit are a complete set up for a quick implementation of RFID solutions.

Installation Notice

The Proton R4320P reader could be mounted either horizontally or vertically. Locate the four mounting slots on the reader, as illustrated in *Fig. 1.2: Proton R4320P Technical drawings: top view*. In the four mounting slots there are rubber gaskets to facilitate adherence to smooth surfaces.

All measurements are in millimetres.


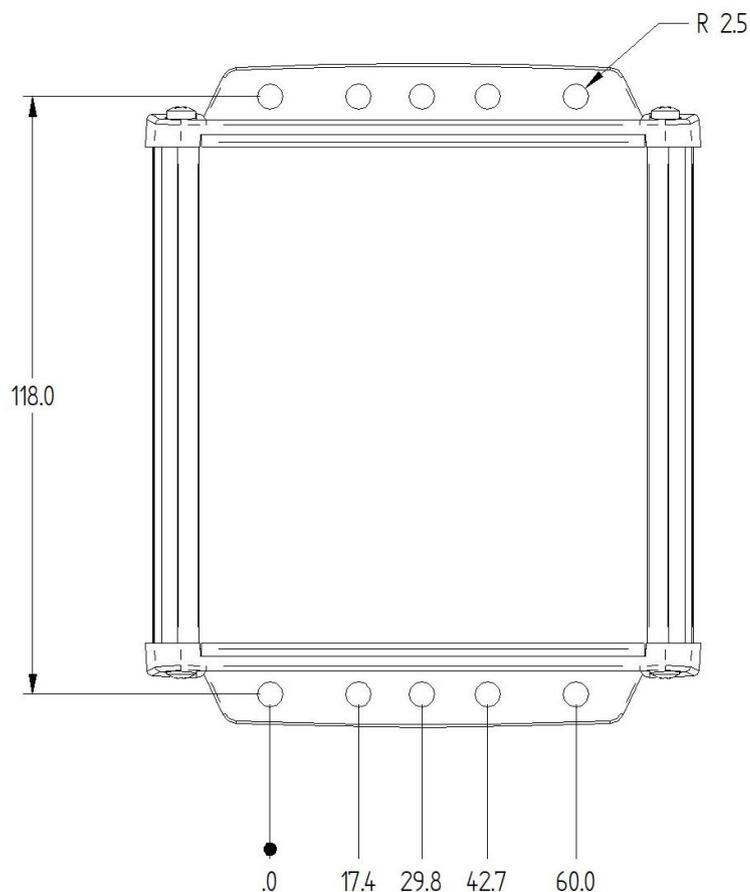


Fig. 1.2: Proton R4320P Technical drawings: top view

Wall fixing

A cylindrical-head self-tapping screw (not provided) with the following measures is recommended to fix the reader directly to the wall:

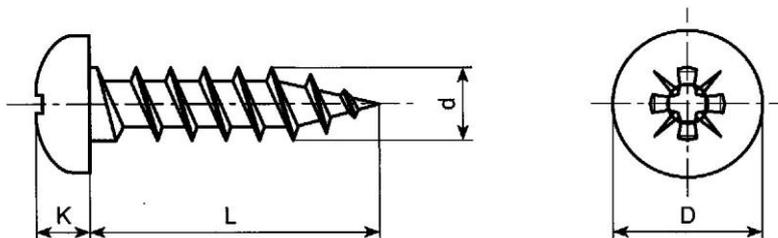

where:

Parameter	Min value	Max value	Unit
K	1	4	mm
L	50	100	mm
d	3	5	mm
D	6	10	mm

Tab. 1.1: Cylindrical-head self-tapping screw measures

Ordering Options

	Code	Description
Reader	WR4320PXAAAA	R4320P Proton - Industrial 4-port RAIN RFID Long Range Reader
Development kit	WR4320PXDKEU	Proton - ETSI Dev Kit including RFID antenna with cable, power supply, Ethernet cable and tag samples (reader not included)
	WR4320PXDKUS	Proton - FCC Dev Kit including RFID antenna with cable, power supply, Ethernet cable and tag samples (reader not included)
Accessories	WALIM0000006	R4320P – Auxiliary Power Supply - EU
	WALIM0000007	R4320P – Auxiliary Power Supply - US
	WANTENNAX019	Circular polarized antenna 8.5dBc – ETSI
	WANTENNAX020	Circular polarized antenna 8.5dBc – FCC
	WCAVOAAAAX005	Antenna RF cable with TNC/RP-N connectors
	ECCANTRFX033	Ethernet cable (5 m)

2 GETTING STARTED

Introduction

This quickstart guide will help you to get started with your Proton (Model R4320P) reader.

The reader can be configured in three different profiles:

- **EASY2READ** (factory default): choosing this option you select the CAEN RFID easy2read communication protocol. Select this option in order to control the reader using the [CAEN RFID Easy Controller Application](#) or the [SDK \(Software Development Kits\)](#) library. For details on the use of the EASY2RD profile please refer to this quickstart guide.
- **AUTONOMOUS**: choosing this option you select the keyboard emulation protocol.
For details on the use of the AUTONOMOUS profile please refer to § *AUTONOMOUS Profile* chapter page 50.
- **CUSTOM**: the use of this profile allows the user to upload their own scripts to the reader. For details on the use of the Custom profile please refer to § *CUSTOM Profile* page 54.

The reader is sold with the factory profile set to *EASY2READ*. This guide helps you to getting started with your reader using the EASY2READ profile.

For more detailed information on reader configuration, connections and setup options please refer to the next chapters.

Connecting to the Proton Reader using the Ethernet port

Ethernet Communication Setup

The Proton reader can be connected to a PC using an Ethernet cable. To correctly operate with the reader, follow the steps above:


1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the *easy2read* profile active.
2. Plug an Ethernet cable (not provided, see § *Ordering Options* page 9) into your computer and connect the other end of the Ethernet cable to the reader. By default, the Proton reader is configured with the static IP address 192.168.0.2. If your private network matches the default network configuration of the reader you can connect to it. Otherwise you can either change the network configuration of the reader (see § *NETWORK* page 25) to connect it to your network or disconnect your PC from your network and connect it to the network of the reader.
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.

Now you can use the [CAEN RFID Easy Controller](#) Application to control the reader.


Easy Controller

Follow these steps to connect the Proton using the *Easy Controller* application for Windows:


1. Download the latest version of the *Easy Controller software* from the [Proton R4320P web page](#), *Downloads* section and install it.
2. Launch the *Easy Controller* application:

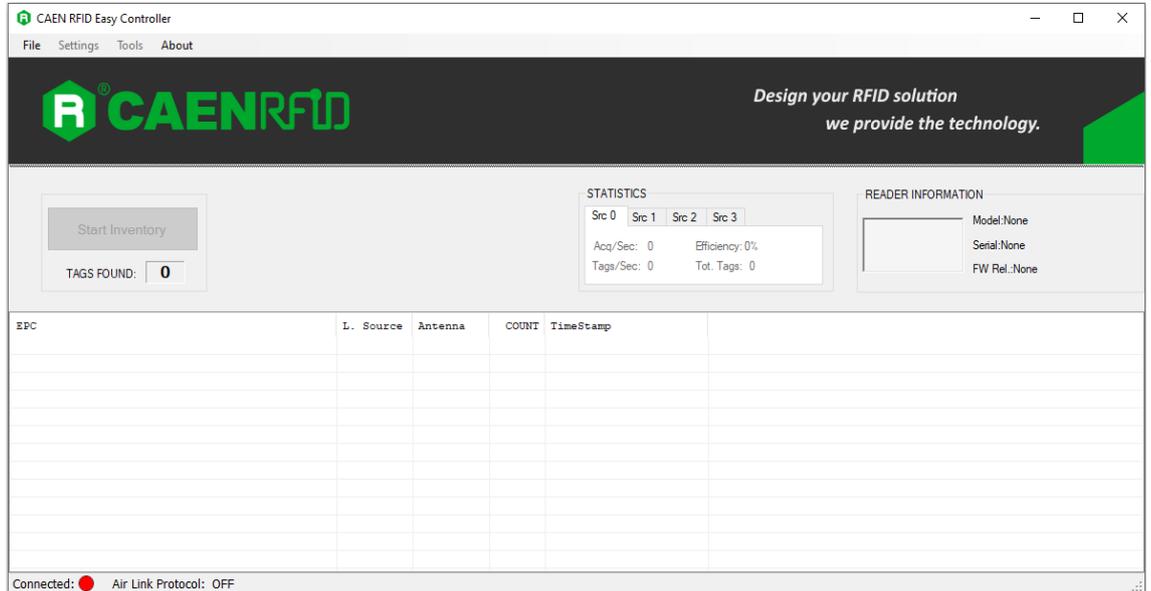


3. On the main screen click on *File* → *Connect*. A Connection windows will open. Select the *Connection Type* (TCP/IP Connection) and type the Proton IP address into the *TCP/IP Address* box (default value is 192.168.0.2). Then click on *Connect*:

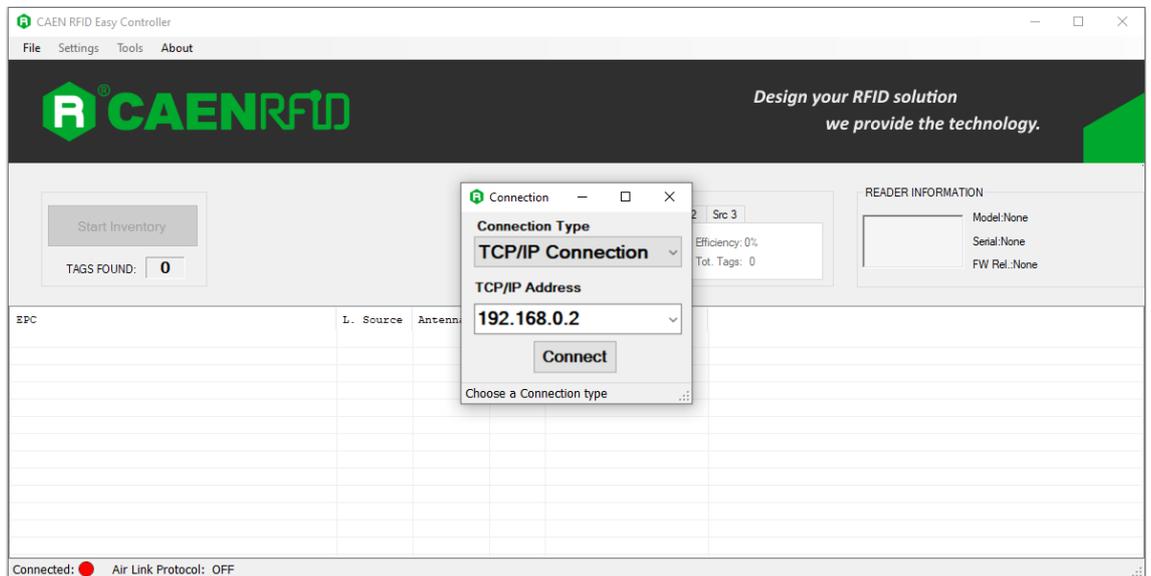

- To verify if the connection with the reader has been established, check the green dot on the bottom left side of the sidebar. Into the *READER INFORMATION* box you can find information on reader model, serial number and firmware release:

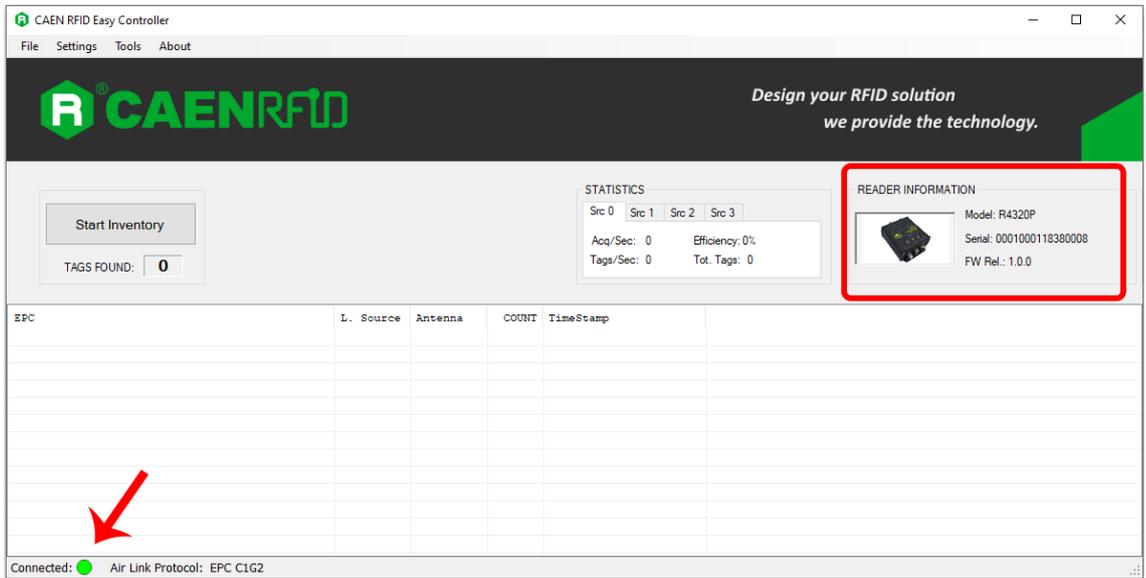

- Place a tag on the read range of the reader, click on *start inventory* and see the tag information displayed on the main window:

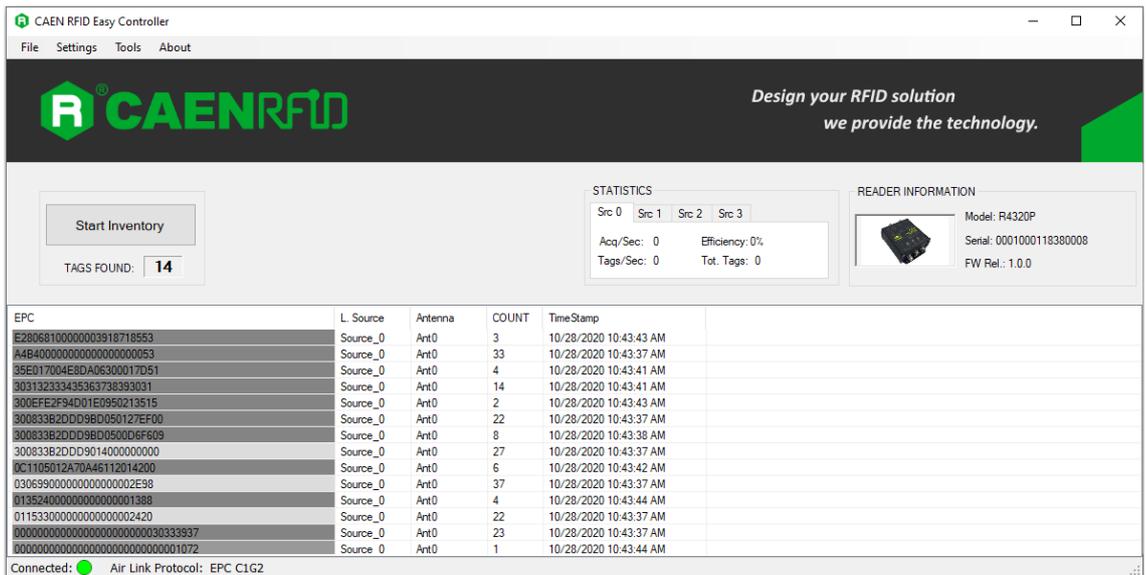

For more info on the use of the *Easy Controller*, please refer to the *CAEN RFID Easy Controller Software Technical Information Manual*, you can download it from the [Proton R4320P web page](#), Downloads section or in the [Manual and Documents](#) web area.

3 EXTERNAL INTERFACE DESCRIPTION

LEDS

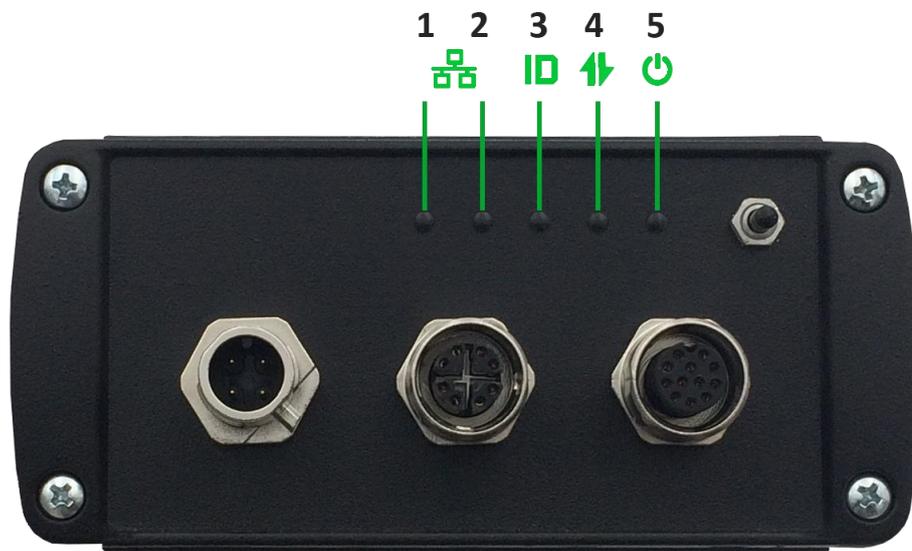


Fig. 3.1: Proton R4320P LEDs

No.	Name	Description
1	ETH Network activity	Yellow LED (see § Tab. 3.6: Proton R4320P - Ethernet Connector LEDES page 16)
2	ETH Speed connection	Yellow/Green LED (see § Tab. 3.6: Proton R4320P - Ethernet Connector LEDES page 16)
3	Tag-ID	Tag Detection – Blinking Red LED
4	Communication	Communication activity – Blinking Yellow LED
5	Power	Power On – Green LED

Tab. 3.1: Proton R4320P LEDs

Connectors

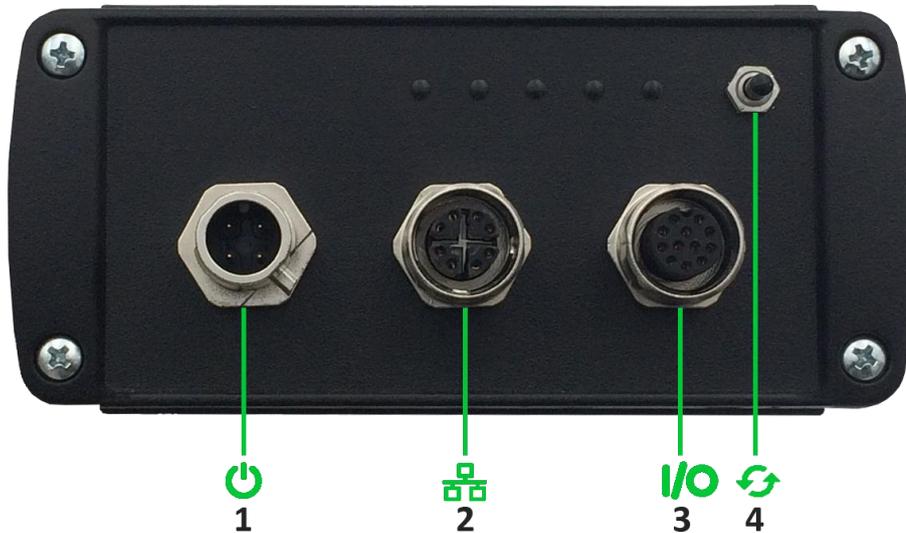


Fig. 3.2: Proton R4320P Interfaces Panel

No.	Name	Description
1	Power	Power Supply Connector
2	Ethernet	Ethernet 10/100/1000BASE-T (M12) / POE standard IEEE 802.3af
3	GPIO	General Purpose Input Output / RS232 (Tx/Rx signal)
4	RESET/UPGRADE	Restart device / Upgrade operative system

Tab. 3.2: Proton R4320P Interfaces Panel

Power Supply

The power supply connector shall be used to provide the Proton R4320P with the DC supply voltage in the range 9V÷36V. A recommended part number for coupling with the connector of the reader is the PHOENIX CONTACT: 1543029 (not provided, to be used on the supply voltage cable).

M12, 4-pin, A-coded, Male

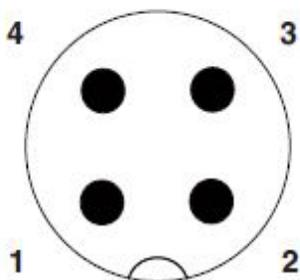


Fig. 3.3: Power Supply connector (reader side)

Pin #	Signal	Function
1	VDC	Positive pole
2	N.C.	Not Connected
3	GND	Ground
4	N.C.	Not Connected

Tab. 3.3: Proton R4320P - Power Supply Connector Poles

Power Supply Connector

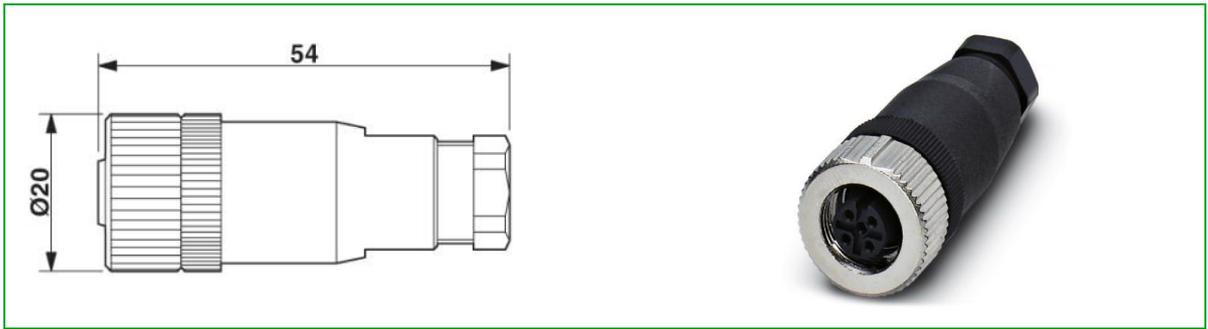


Fig. 3.4: Power Connector PHOENIX 1543029

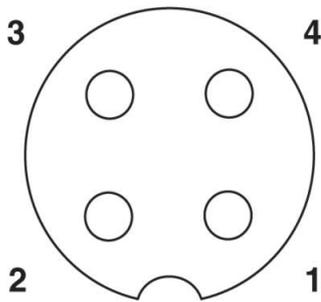


Fig. 3.5: Phoenix 1543029 connector

Pin #	Signal	Function
1	VDC	Positive pole
2	N.C.	Not Connected
3	GND	Ground
4	N.C.	Not Connected

Tab. 3.4: PHOENIX CONTACT: 1543029 Poles



Warning: To guarantee the IP65 degree of the device it is necessary that the male connector on the reader is coupled with the female one on the cable. If the male connector is free, a protective cap must be applied to guarantee the IP65 degree. The following part number is recommended: sealing cap PHOENIX 1560251.

Ethernet Port

The Ethernet interface of the Proton R4320P can be used to connect the reader to a 10/100/1000BaseT network using a M12 to RJ45 cable.

The Proton R4320P reader supports Power Over Ethernet (POE) standard IEEE 802.3 af.

The pinout of the connector is shown in the following figure:

M12, 8-pin, X-coded, Female

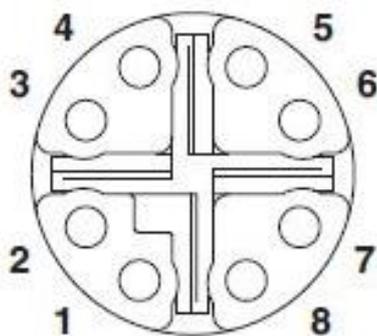


Fig. 3.6: Ethernet Connector (reader side)

Pin #	Signal	Function
1	TX+	Transmission positive
2	TX-	Transmission negative
3	RX+	Receive positive
4	RX-	Receive Negative
5	POWER-	POWER-
6	POWER-	POWER-
7	POWER+	POWER+
8	POWER+	POWER+

Tab. 3.5: Proton R4320P - Ethernet Connector Poles

The Ethernet connector has two LEDs with the following functionalities:

LED	Function	Type
Left	Network activity	Blinking Yellow
Right	10Mbps connection	OFF
Right	100Mbps connection	Yellow
Right	1000Mbps connection	Green

Tab. 3.6: Proton R4320P - Ethernet Connector LEDS

An Ethernet Cable (ECCANTRFX033) is available (not provided with the reader): see *Ordering Options* page 9.

Otherwise, we suggest to use the following product:

- Network cable (5m) - NBC-MSX/ 5,0-94F/R4AC SCO – 1407473 PHOENIX CONTACT

Ethernet cable shall be CAT6 at least (type S/FTP or S/STP) for proper operation of the device.



Warning: To guarantee the IP65 degree of the device it is necessary that the female connector on the reader is coupled with the male one on the cable. If the female connector is free, a protective cap must be applied to guarantee the IP65 degree. The following part number is recommended: Sealing cap PHOENIX 1680539.

GPIO/Serial

The GPIO/Serial interface of the Proton R4320P is used to connect the reader with a standard RS232 serial communication and to provide the signals of 2 inputs and 2 outputs to the reader. The inputs are usually connected to devices (photocells, sensors...) that enable the tag inventory. The outputs instead usually turn on accessory devices, following a pre-established event (sirens, flashing lights...).

M12, 12-pin, A-coded, Female

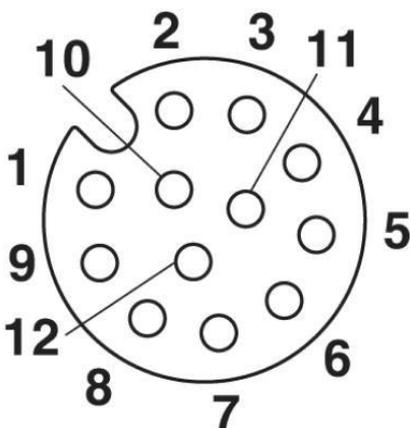


Fig. 3.7: GPIO/Serial Connector (reader side)

Pin #	Signal	Function
1	RS232_RX	RS232 receive signal
2	OUTPUT2.2	SS-Relay 2 Contact 2
3	OUTPUT2.1	SS-Relay 2 Contact 1
4	OUTPUT1.2	SS-Relay 1 Contact 2
5	OUTPUT1.1	SS-Relay 1 Contact 1
6	GND	Ground
7	RTN	Return
8	V_INT	Internal voltage ¹
9	RS232_TX	RS232 transmit signal
10	GPIO	General purpose input 0
11	GPI1	General purpose input 1
12	RTN	Return

Tab. 3.7: Proton R4320P – GPIO/Serial Connector Poles

A GPIO/Serial Cable is not provided. We suggest to use the following products:

- Sensor/Actuator cable (1,5 m)- SAC-12P-MS/ 1,5-35T SH SCO - 1430048 shielded
- Sensor/Actuator cable (1,5 m) - SAC-12P-MS/ 1,5-PVC SCO - 1554775
- Sensor/Actuator cable (3 m) - SAC-12P-MS/ 3,0-35T SH SCO - 1430051 shielded
- Sensor/Actuator cable (3 m) - SAC-12P-MS/ 3,0-PVC SCO - 1554788



Warning: To guarantee the IP65 degree of the device it is necessary that the female connector on the reader is coupled with the male one on the cable. If the female connector is free, a protective cap must be applied to guarantee the IP65 degree. The following part number is recommended: Sealing cap PHOENIX 1680539.

¹ When powered by a power supply, the internal voltage is equal to the supply voltage. When powered by POE, internal voltage is 5V.

Input signal

To have a valid input signal, apply a voltage between 4V and 48V to the pin indicated by GPIO or GPI1

Using the signals on the connector you can connect the Internal Voltage pin to the GPIO pin through a switch that enables the input signal when closed.

A connection between GND ground and RTN signal is also required:


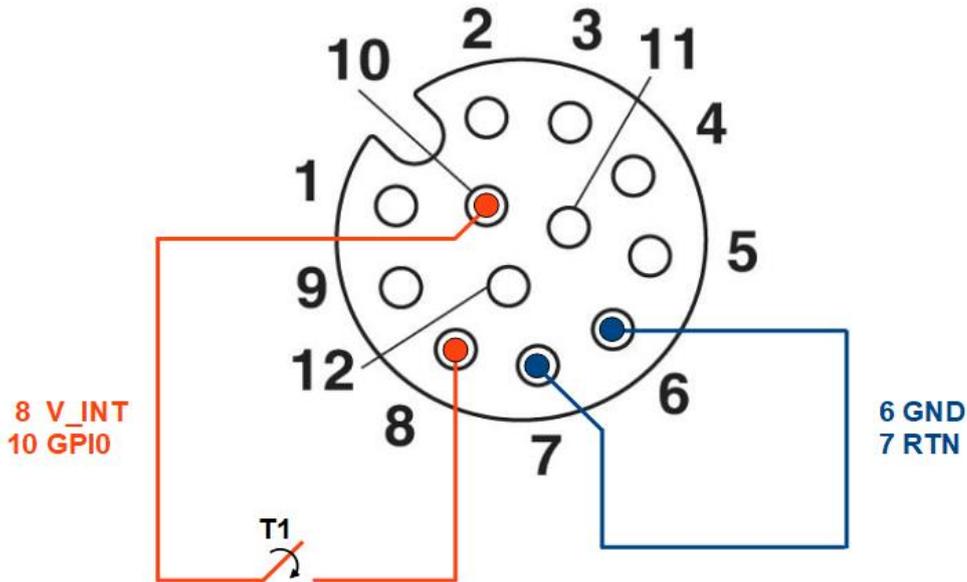


Fig. 3.8: GPIO Input Signal


It is possible to verify the correct functioning of the circuit by connecting the reader to the CAEN RFID Easy Controller software, Tools-I/O management section:

GPIO corresponds to GPIO0 of the Easy Controller software

GPI1 corresponds to GPIO1 of the Easy Controller software

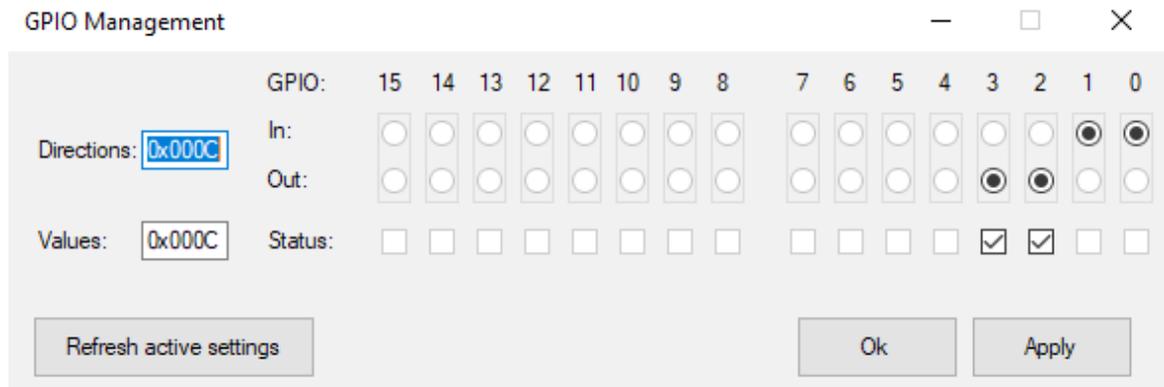

When a valid input is present, a check "V" appears in the Status box at the GPIO 0:

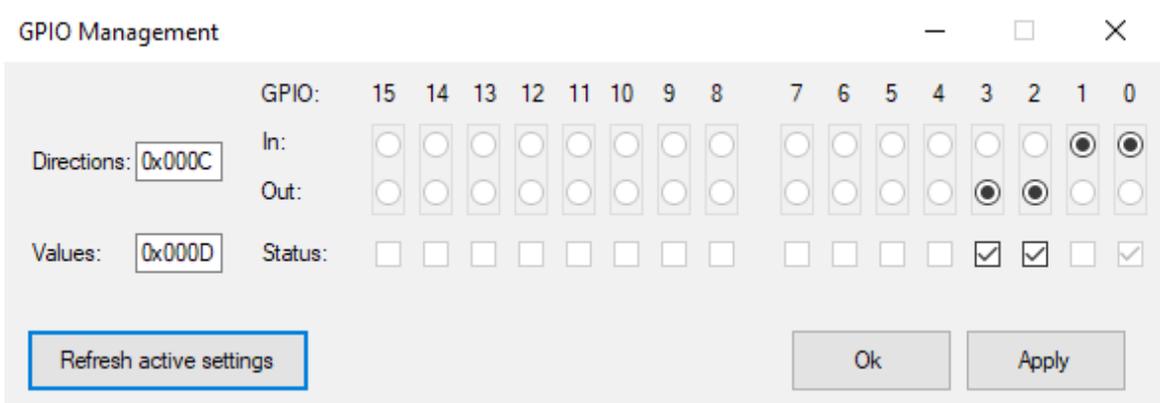


Output signal

The OUTPUT1.1 – OUTPUT1.2 and OUTPUT2.1 – OUTPUT2.2 pins are the terminals of a normally open dry contacts.

By connecting to the CAEN RFID Easy Controller Software, Tools-I/O management section, you can close the contact by removing the check from the Status box related to GPIO 2 and GPIO 3 and then press the Apply button.

OUTPUT1.1 – OUTPUT1.2 correspond to GPIO2 of the Easy Controller software

OUTPUT2.1 – OUTPUT2.2 correspond to GPIO3 of the Easy Controller software

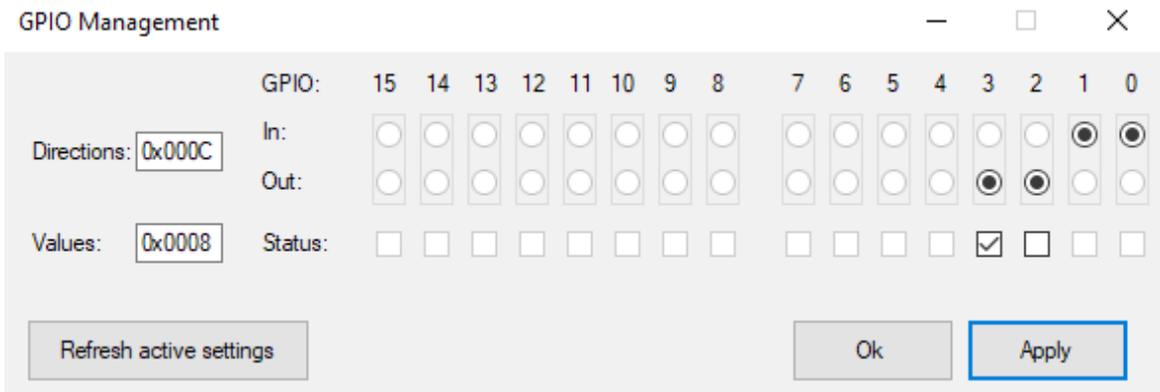

To supply a user U1 to V_INT, make the connection as shown in the drawing below:

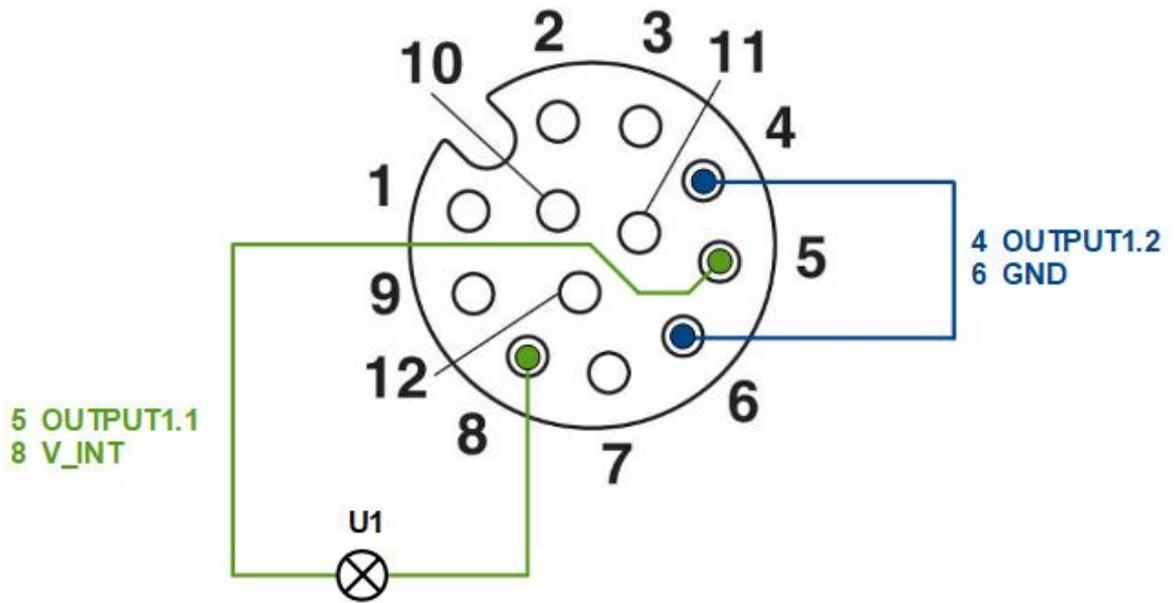


Fig. 3.9: GPIO Output Signal

RS232 Communication

The following figure shows an example of a serial connection between the reader and a PC:

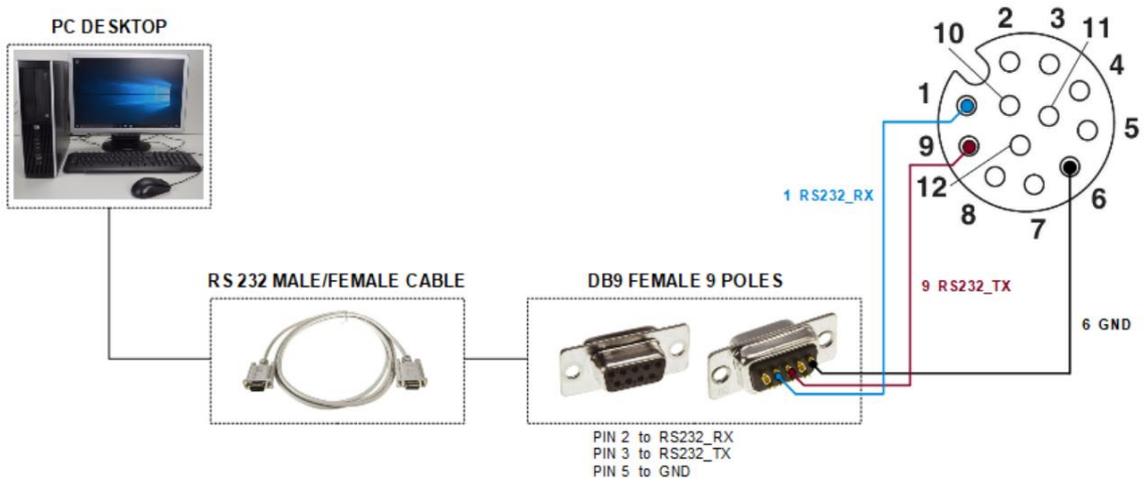


Fig. 3.10: Example of a serial connection between the reader and a PC

If your pc does not have a native RS232 port, it is possible to connect the reader using a USB/RS232 converter, as shown in the following figure. Note that this is the configuration used to execute the upgrade of the reader as indicated in the § *Firmware Upgrade* paragraph page 57.

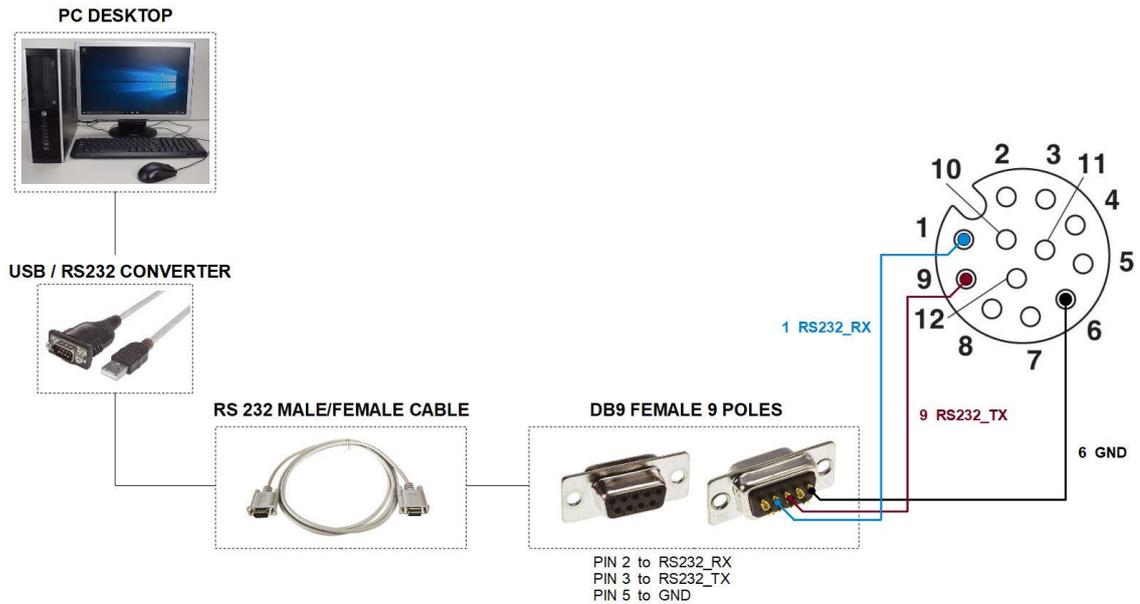


Fig. 3.11: Example of a serial connection between the reader and a PC using a USB/RS232 converter

Antennas

The Proton R4320P reader has 4 antenna ports capable of a 31.5 dBm maximum power enabling to build RAIN RFID portals for logistic.

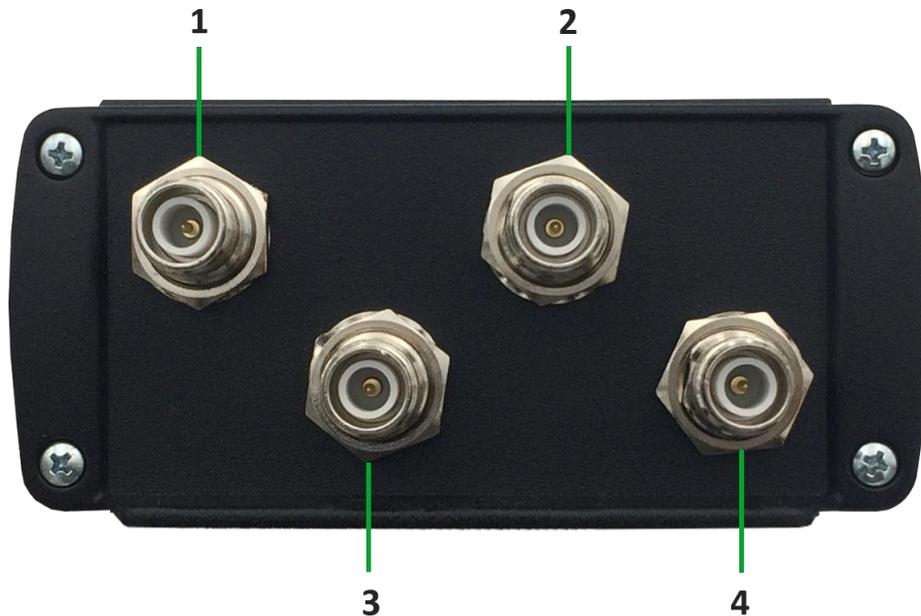


Fig. 3.12: Proton R4320P Antennas

No.	Name	Description
1	ANT 0	50Ω RP-TNC jack connector Antenna 0
2	ANT 2	50Ω RP-TNC jack connector Antenna 2
3	ANT 1	50Ω RP-TNC jack connector Antenna 1
4	ANT 3	50Ω RP-TNC jack connector Antenna 3

Tab. 3.8: Proton R4320P Antennas

To achieve the best reading performances, the VSWR of the antenna shall be lower than 1.5:1.



Warning: To guarantee the IP65 degree of the device, the antennas must all be wired. If the connector is free, a protective cap must be applied to guarantee the IP65 degree. The following part number is recommended: TNC Cap for Female Connector - AMPHENOL part number 202101-12.

4 CONFIGURATION USING THE WEB INTERFACE

Introduction


The reader can be configured via web interface.

The Web Interface is accessible only via the Ethernet connection:

1. Connect the Proton to the power supply.
2. Plug an Ethernet cable (not provided) into your computer and connect the other end of the Ethernet cable to the reader. If your private network matches the default network configuration of the reader (IP address 192.168.0.2) you can connect to it, otherwise you can:
 - a) change the network configuration of the reader (see § NETWORK page 25) to connect it to your network
 - or
 - b) disconnect your PC from your network and connect it to the network of the reader.

By factory default, the Proton web interface is reachable at the following IP address: 192.168.0.2.

To login, type **root** in the Username text box and **root** in the Password textbox. To change the username and password please refer to § SYSTEM page 26.

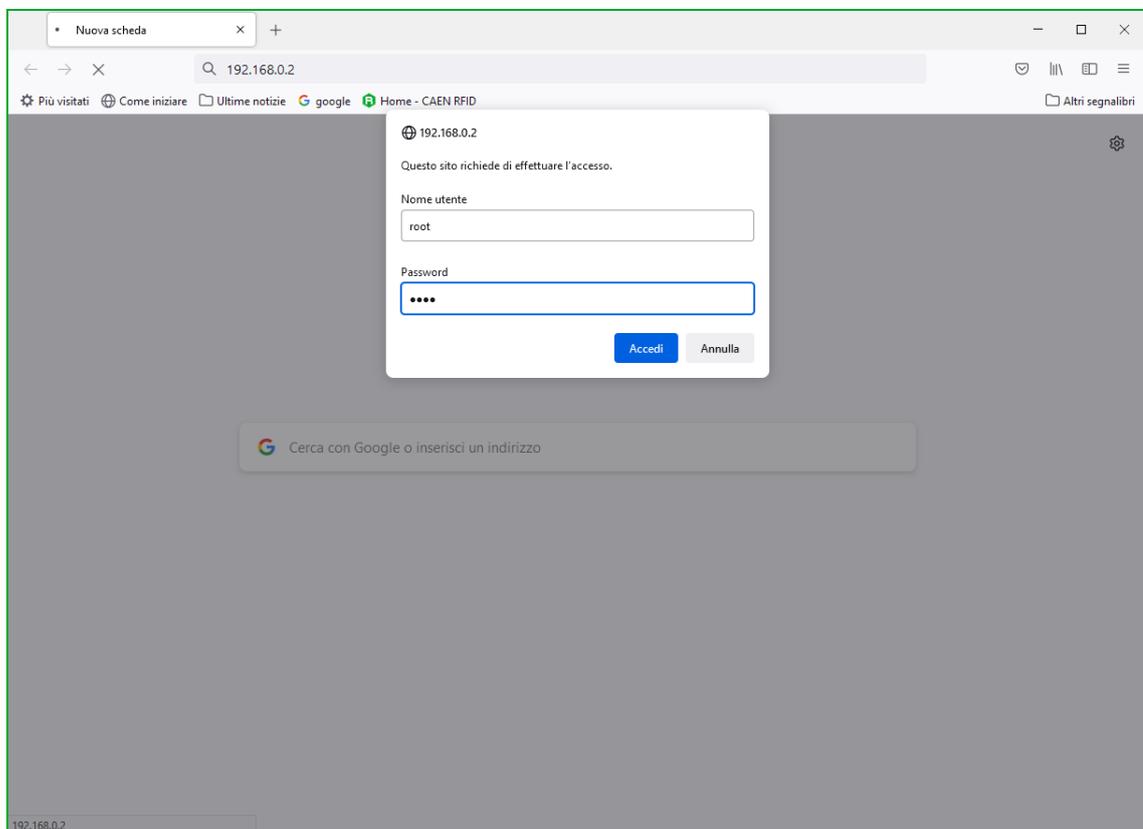

When the connection with the reader is established, the main screen of the web interface is displayed:


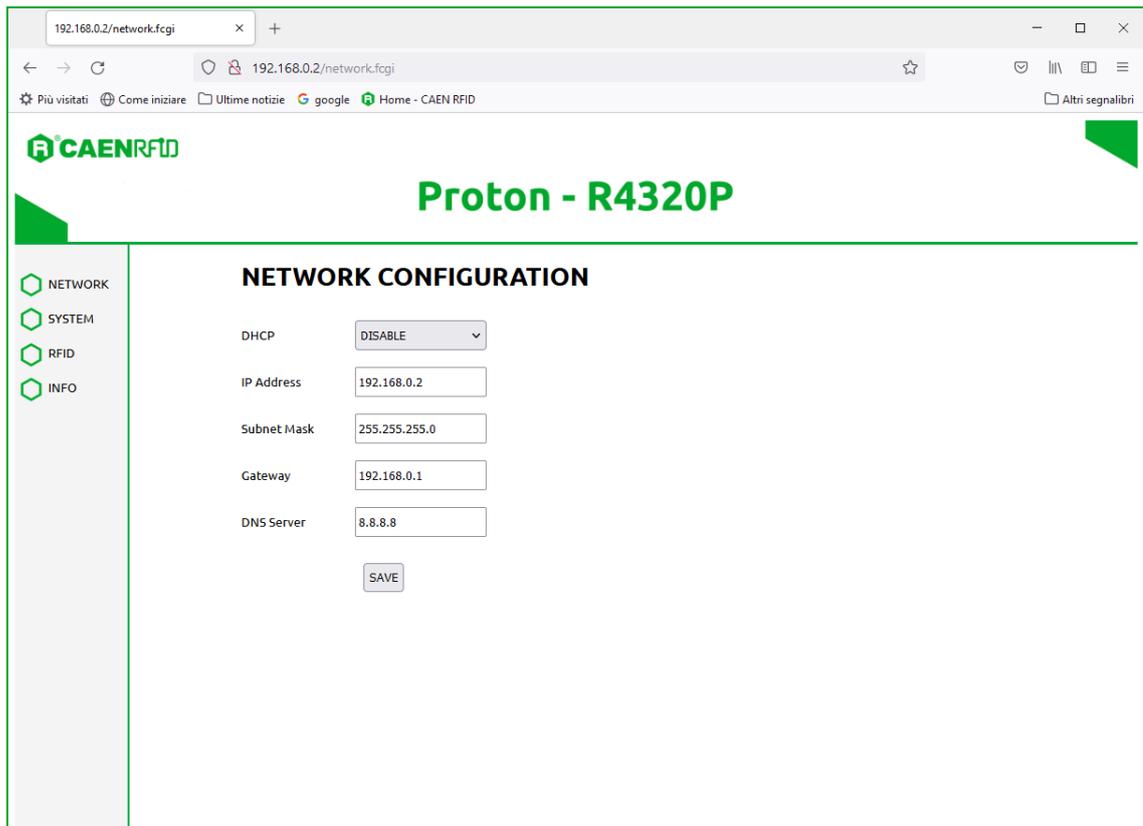


Fig. 4.1: Proton R4320P Web Interface

The Web Interface menu options are the following:

- **NETWORK**
- **SYSTEM**
- **RFID**
- **INFO**

NETWORK

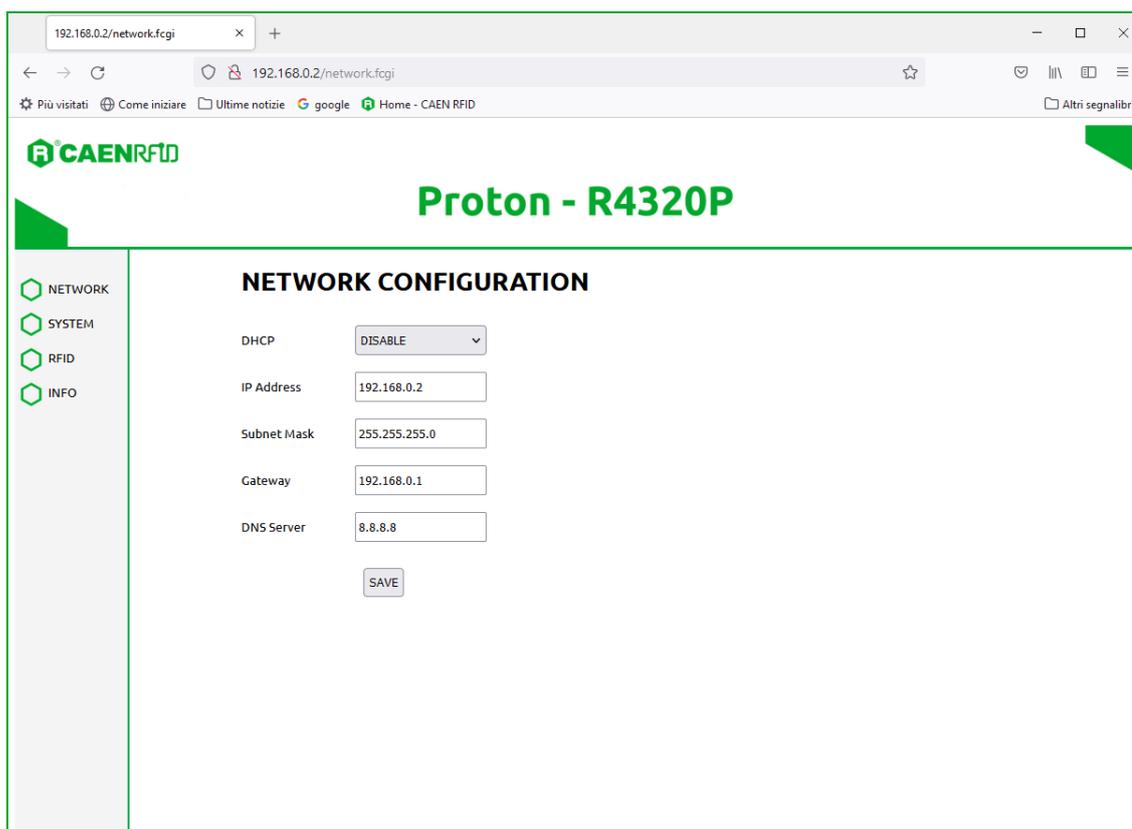


The NETWORK submenu options are the following:

- **DHCP:** Enable/Disable. By default, the DHCP is set to *disable*. You can change the default value using the drop-down menu.
- **IP Address:** the reader default IP address is 192.168.0.2. The Proton reader can be connected to a PC using an Ethernet cable: to correctly operate with the reader, refer to *Ethernet Communication Setup* page 43.
- **Subnet Mask:** the reader default subnet mask is 255.255.255.0.
- **Gateway:** the reader default gateway is 192.168.0.1.
- **DNS Server:** the reader default DNS server is 8.8.8.8.



Warning: To save the changes click on the “*SAVE*” button. Note that all changes made via the web interface are active only after the reader’s reboot. Click on *SYSTEM* option in the Web Interface panel and then click on the “*Reboot*” button. After reboot, the new settings are active.

SYSTEM

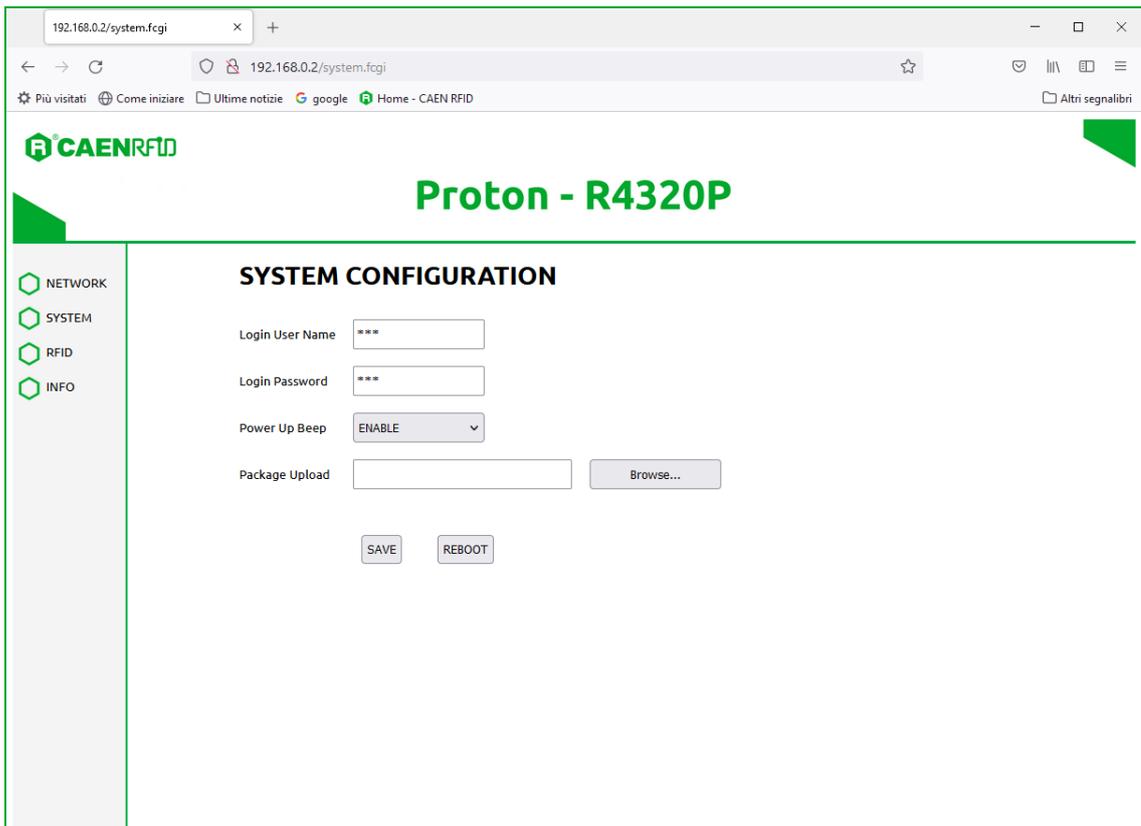

The SYSTEM CONFIGURATION options are the following:

- **Login User Name:** To access the web interface, the default username is “root”. Use this option to change the login username.



Warning: If you forgot your username, you must necessarily make a factory reset (see § *Firmware Upgrade* page 57)

- **Login Password:** To access the web interface, the default password is “root”. Use this option to change the login password.



Warning: If you forgot your password, you must necessarily make a factory reset (see § *Firmware Upgrade* page 57)


- **Power Up Beep:** enable or disable. By default, the *Power Up Beep* is enabled. Through this option you can enable or disable the beep at the power up of the reader.
- **Package Upload:** use this function to upload the script program to be used with the custom profile. Give the package the same name used for the code. Please remember to keep your code as simple as possible; the R4320P reader scripting capability is meant for running inside the reader very simple task (max 3 MB). For more information on the use of the custom profile please refer to § *CUSTOM Profile* page54.



Warning: To save the changes click on the “SAVE” button. Note that all changes made via the web interface are active only after the reader’s reboot. Click on the “Reboot” button. After reboot, the new settings are active.

RFID

Use this section to set the desired profile and then the related configuration options.

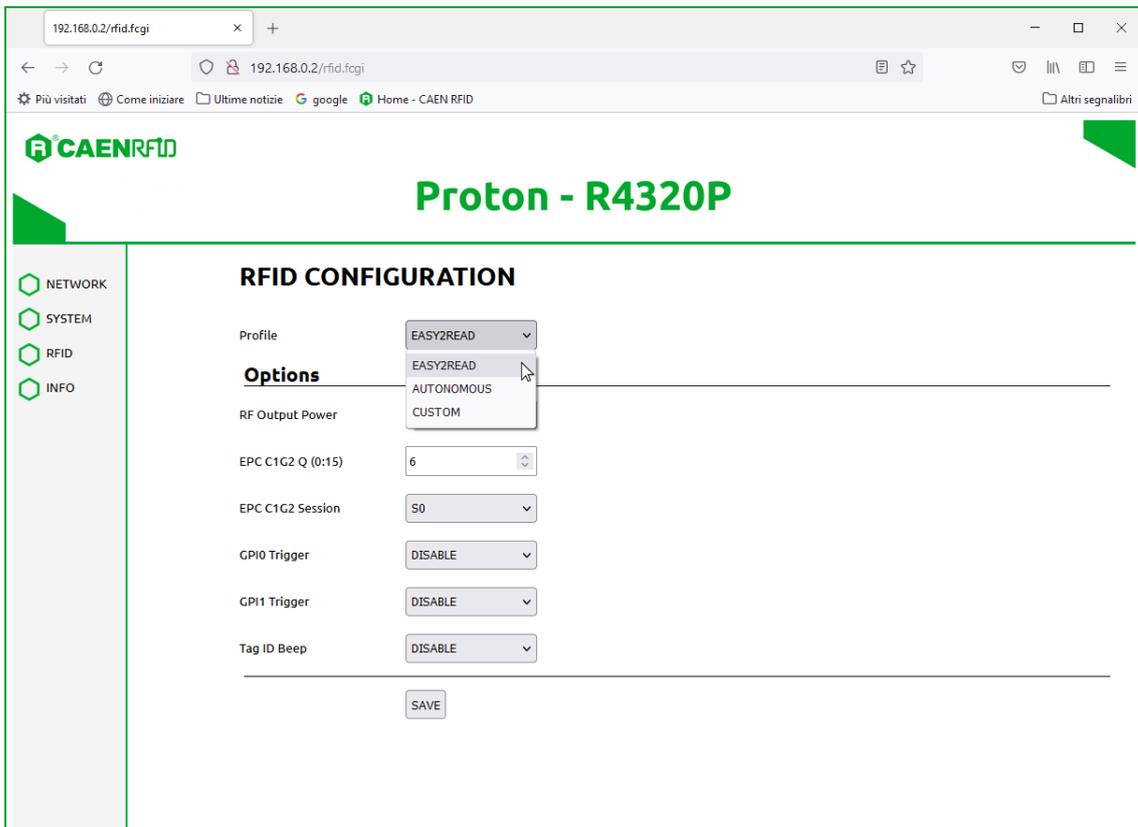

The available profiles are:

- **EASY2READ (factory default)** is the CAEN RFID easy2read communication protocol that permits to control the reader using the CAEN RFID Easy Controller Application or the SDK (Software Development Kit) library. For details on the use of the easy2read profile please refer to § *EASY2READ Profile* chapter page 42.

For details on the easy2read configuration options, refer to § *EASY2READ Configuration Options* paragraph page 28.

- **AUTONOMOUS:** choosing this option you select the keyboard emulation protocol. For details on the use of the AUTONOMOUS profile please refer to § *AUTONOMOUS Profile* chapter page 50.

For details on the AUTONOMOUS configuration options, refer to § *AUTONOMOUS Configuration Options* paragraph page 30.


- **CUSTOM:** the use of this profile allows the user to upload his own scripts to the reader. For details on the use of the Custom profile please refer to § *CUSTOM Profile* chapter page 54.

For details on the Custom configuration options, refer to § *CUSTOM Configuration Options* paragraph page 40.



Warning: To save the changes click on the "SAVE" button. Note that all changes made via the web interface are active only after the reader's reboot. Click on *SYSTEM* option in the Web Interface panel and then click on the "Reboot" button. After reboot, the new settings are active.

EASY2READ Configuration Options

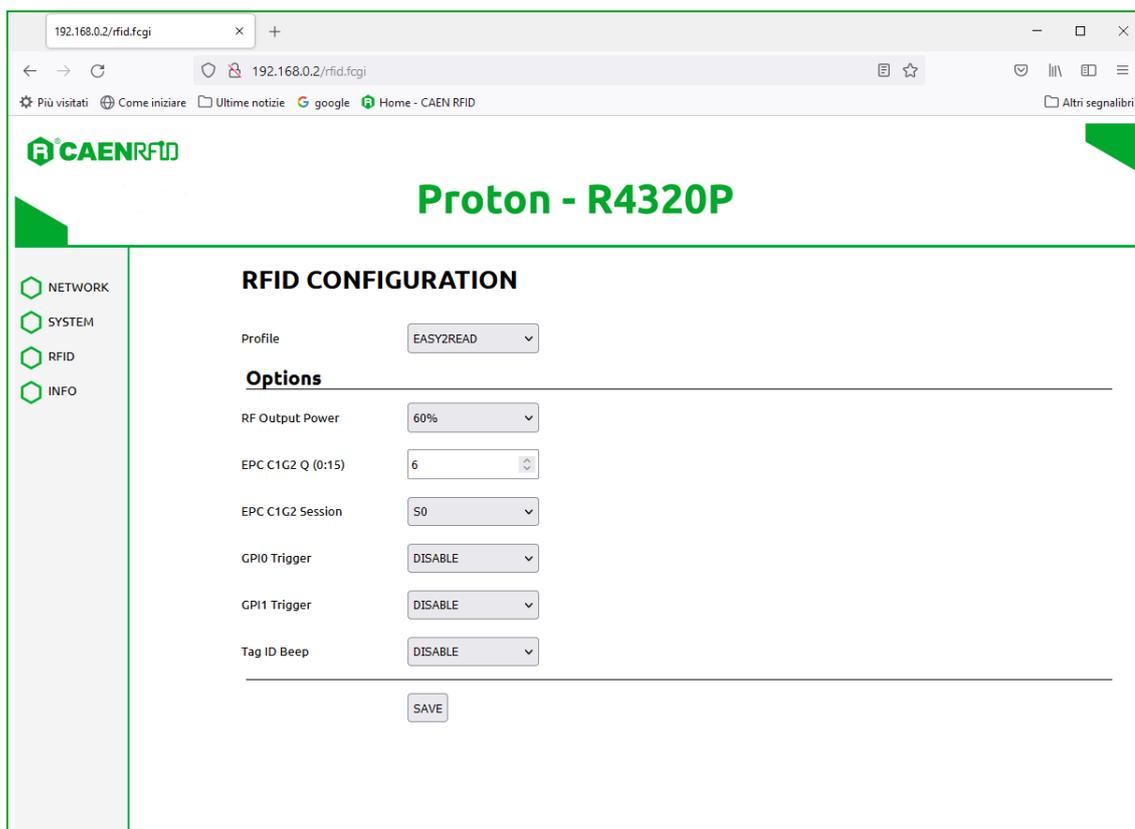

Choosing the EASY2READ profile, the RFID configuration submenu options are the following:

- **RF Output Power:** the default RF Power is 60%. The RF Power value at power up is expressed as a percentage value of the maximum RF output power. Through the *RF Output Power* submenu, you can set the power level emitted by the reader. You can change the default value using the drop-down menu:
 - 5%
 - 10%
 - 20%
 - 40%
 - 60%
 - 80%
 - 100%

The correspondent values are:

Percentage	Conducted Power ETSI (mW)	Conducted Power FCC (mW)
5%	70	70
10%	140	140
20%	280	280
40%	560	560
60%	840	840
80%	1120	1000 ²
100%	1400	1000 ²

Tab. 4.1: Conducted power

Note that, when the reader is configured in the easy2read profile, to set the power you can also use the CAEN RFID Easy Controller Application or the *SetPower* function of the SDK (Software Development Kit) library.

² The reader with the FCC regulation cannot supply more than 1000 mW to the connector. By analogy with the power expressed in the ETSI table, the percentage refers to the full scale of 1400mW, but the percentage of 80% and 100% (that exceed 1000mW) are limited to the maximum of 1000 mW.

- **EPCC1G2 Q:** Q parameter (integer 0÷15) is useful for the optimization of the inventory efficiency: as a rule of thumb, if you have to read a huge population of tags you need to select a high value for the Q parameter, otherwise you can select a lower value. For more information on Q parameter see EPC Class1 Gen2 protocol specification [RD1]. Default value is EPCC1G2 Q =6. You can change the default value using the drop-down menu.
- **EPC C1G2 Session:** the Session used by the anticollision algorithm. The reader chooses one of four sessions available (S0, S1, S2 and S3) and inventories tags within that session. For more information on *session* see EPC Class1 Gen2 protocol specification [RD1]. Default value is *EPC C1G2 Session* = S0. You can change the default value using the drop-down menu.
- **GPIO0 Trigger:** enable or disable. By default, the *GPIO0 Trigger* is disabled. You can change the default value using the drop-down menu. Through this option you can enable/disable the tag inventory at the change of state of the GPIO0.

Note: In the easy2read profile, to enable the tag inventory on GPIO0 trigger, it is necessary to perform a second activation via software:



- **Using the Easy controller Software:** for more details see § *Inventory on GPIO state change* page 48.

or

- **Using the API:** for more details see the *EventInventoryTag* Method (the *event trigger flag*, bit 5, set to 1) in the *CAEN RFID API Reference Manual* downloadable from [Proton R4320P web page](#), *Documents* section or in the [Manual and Documents](#) web area.

- **GPIO1 Trigger:** enable or disable. By default, the *GPIO1 Trigger* is disabled. You can change the default value using the drop-down menu. Through this option you can enable/disable the tag inventory at the change of state of the GPIO1.

Note: In the easy2read profile, to enable the tag inventory on GPIO1 trigger, it is necessary to perform a second activation via software:



- **Using the Easy controller Software:** for more details see § *Inventory on GPIO state change* page 48.

or

- **Using the API:** for more details see the *EventInventoryTag* Method (the *event trigger flag*, bit 5, set to 1) in the *CAEN RFID API Reference Manual* downloadable from [Proton R4320P web page](#), *Documents* section or in the [Manual and Documents](#) web area.

- **Tag ID Beep:** enable or disable. By default, the *Tag ID beep* is disabled. You can change the default value using the drop-down menu. If the *Tag ID beep* is enabled, the reader will beep when a tag is detected.




Warning: To save the changes click on the “*SAVE*” button. Note that all changes made via the web interface are active only after the reader’s reboot. Click on *SYSTEM* option in the Web Interface panel and then click on the “*Reboot*” button. After reboot, the new settings are active.

AUTONOMOUS Configuration Options

The use of the *Autonomous* profile allows the user to select the keyboard emulation protocol.

Scroll the Autonomous configuration submenu options:

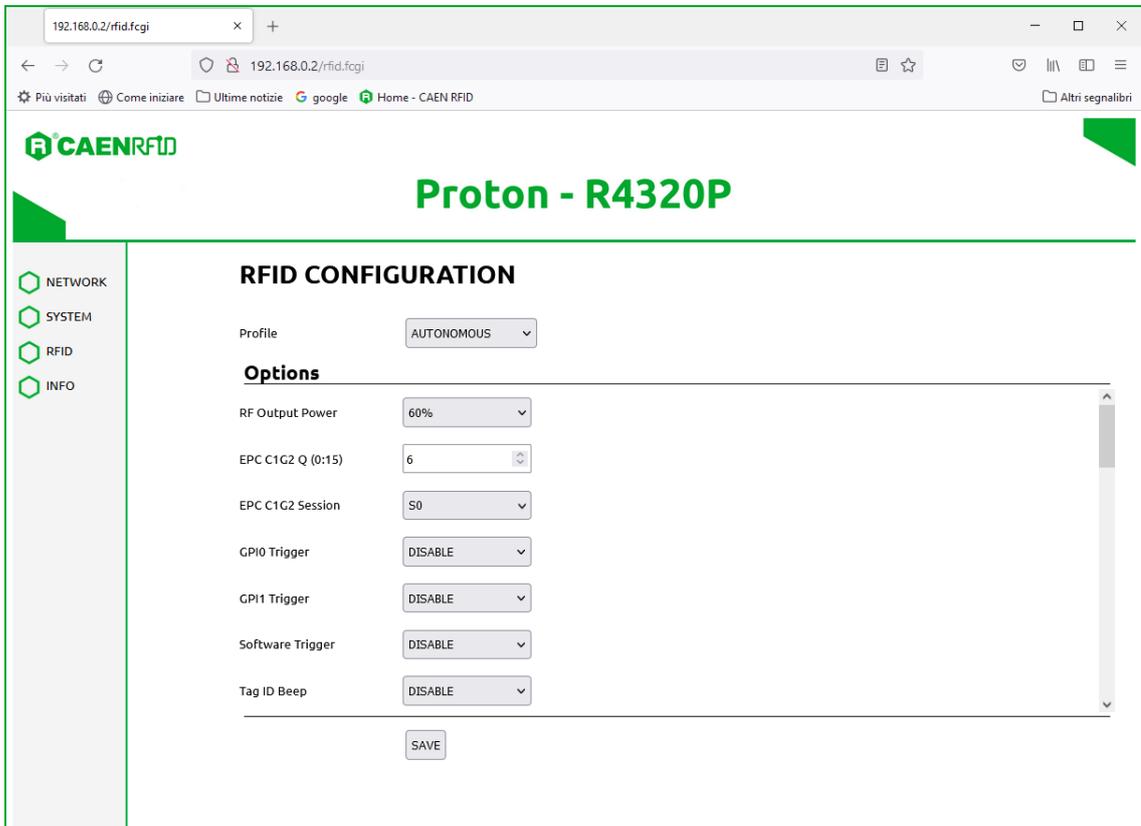

- RF Output Power:** the default RF Power is 60%. The RF Power value at power up is expressed as a percentage value of the maximum RF output power. Through the *RF Output Power* submenu you can set the power level emitted by the reader. You can change the default value using the drop-down menu:

- 5%
- 10%
- 20%
- 40%
- 60%
- 80%
- 100%

The correspondent values are:

Percentage	Conducted Power ETSI (mW)	Conducted Power FCC (mW)
5%	70	70
10%	140	140
20%	280	280
40%	560	560
60%	840	840
80%	1120	1000 ³
100%	1400	1000 ³

Tab. 4.2: Conducted power

³ The reader with the FCC regulation cannot supply more than 1000 mW to the connector. By analogy with the power expressed in the ETSI table, the percentage refers to the full scale of 1400mW, but the percentage of 80% and 100% (that exceed 1000mW) are limited to the maximum of 1000 mW.

- **EPCC1G2 Q:** Q parameter (integer 0÷15) is useful for the optimization of the inventory efficiency: as a rule of thumb, if you have to read a huge population of tags you need to select a high value for the Q parameter, otherwise you can select a lower value. For more information on Q parameter see EPC Class1 Gen2 protocol specification [RD1]. Default value is EPCC1G2 Q =6. You can change the default value using the drop-down menu.
- **EPC C1G2 Session:** Session used by the anticollision algorithm. The reader chooses one of four sessions available (S0, S1, S2 and S3) and inventories tags within that session. For more information on *session* see EPC Class1 Gen2 protocol specification [RD1]. Default value is *EPC C1G2 Session* = S0. You can change the default value using the drop-down menu.
- **GPIO0 Trigger:** Through this option you can enable/disable the tag inventory at the change of state of the GPIO0. By default, the GPIO0 Trigger is disabled. You can change the default value using the drop-down menu:
 - **Enable (one shot):** enables the tag inventory each time the GPIO0 toggles from *Low* to *High*
 - **Enable (start/stop):** starts the tag inventory when the GPIO0 toggles to *High* and repeats the inventory until the GPIO0 returns to *Low* (stop)
- **GPIO1 Trigger:** Through this option you can enable/disable the tag inventory at the change of state of the GPIO1. By default, the GPIO1 Trigger is disabled. You can change the default value using the drop-down menu:
 - **Enable (one shot):** enables the tag inventory each time the GPIO1 toggles from *Low* to *High*
 - **Enable (start/stop):** starts the tag inventory when the GPIO1 toggles to *High* and repeats the inventory until the GPIO0 returns to *Low* (stop)
- **Software Trigger:** Through this option it is possible to enable/disable the tag inventory via software. By default, the software trigger is disabled. You can change the default value using the drop-down menu. If enabled, the reader waits to receive xml data from the host to perform the inventory. The xml data must be as follows:

```
<trigger><action> value </action><repetition><duration> value </duration><interval> value </interval></repetition><echo> value </echo></trigger>
```

Where:

Parameter	Description	Values Range	Unit
action	To start/ stop the inventory	Start/stop	-
repetition	duration	Inventory duration	≥ 0 seconds
	interval	Time between two inventories	0÷inf seconds
echo	If on, the reader returns the command sent by the host as proof of correct data receipt	on/off	-

The *interval* is the equivalent of the *Scan Delay* (see § *Scan Delay* page 33).



Warning: By setting the *Scan Delay* when the software trigger is in use, the total interval will be given by the sum of the two times:

Total interval = Scan delay + Interval (software trigger).

Examples:

1. TRIGGER START:

```
<trigger><action>start</action><repetition><duration>20</duration><interval>15</interval></repetition><echo>on</echo></trigger>
```

The reader performs the inventory for the duration of 20 seconds and then stops the inventory for an interval of 15 seconds and repeats this configuration until a *trigger stop* xml command.

Note that in this example the reader returns to the host the command of *trigger start* as proof of correct command receipt (echo= on).

2. TRIGGER STOP:

```
<trigger><action>stop</action><repetition><duration>20</duration><interval>15</interval></repetition><echo>on</echo></trigger>
```

The reader stops the inventory, after the end of the current repetition.

3. TRIGGER MONOSTABLE:

```
<trigger><action>start</action><repetition><duration>20</duration><interval>inf</interval></repetition><echo>on</echo></trigger>
```

The reader performs the inventory for the duration of 20 seconds and then stops the inventory (interval= inf).

In this case it is not necessary the xml *trigger stop* to stop the inventory activity.

Note that in this example the reader returns to the host the command of *trigger start* as proof of correct command receipt (echo= on).

4. TRIGGER SINGLE:


```
<trigger><action>start</action><repetition><duration>0</duration><interval>15</interval></repetition><echo>off</echo></trigger>
```

The reader performs a single inventory (duration= 0) and then stops the inventory for an interval of 15 seconds and repeats this configuration until a *trigger stop* xml command.

Note that in this example the reader doesn't return to the host the command of *trigger start* (echo= off).

- **Tag ID Beep:** enable or disable. By default, the *Tag ID beep* is disabled. You can change the default value using the drop-down menu. If the *Tag ID beep* is enabled, the reader will beep when detects 1 tag during the inventory.

Scroll the other Autonomous configuration submenu options:

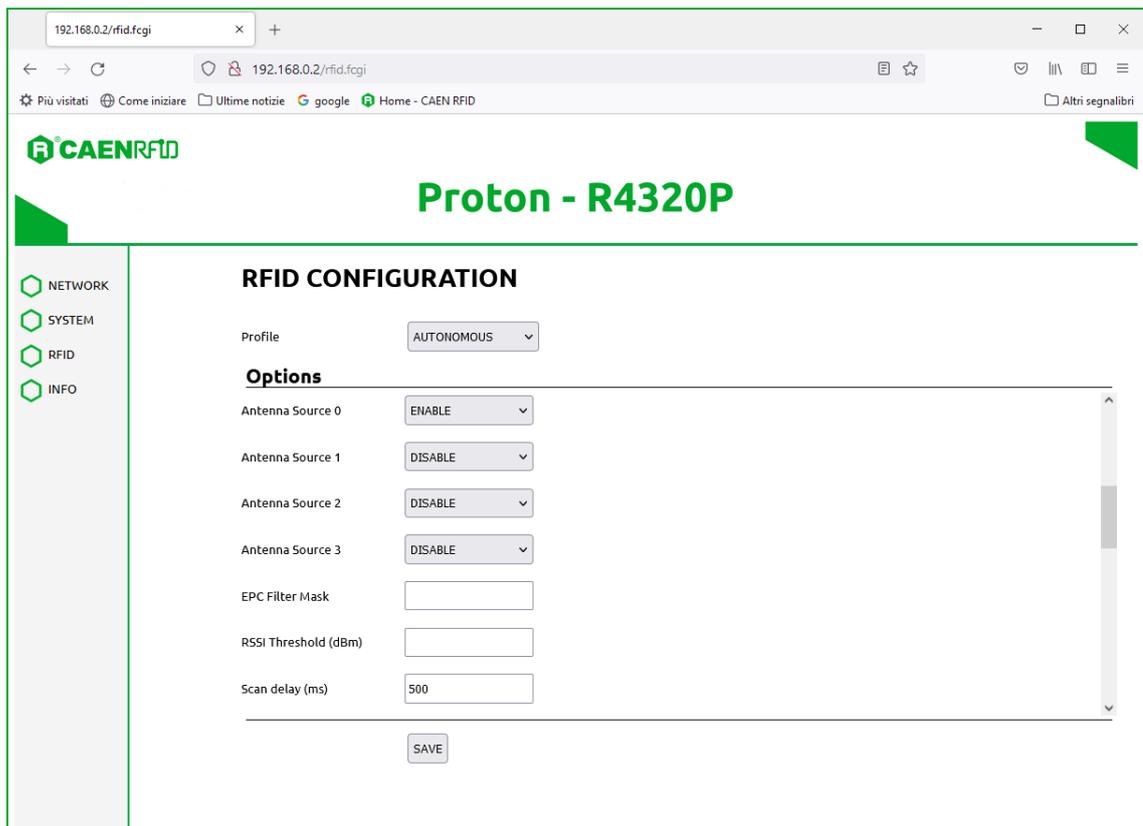

- **Antenna Source 0:** enable or disable. By default, the *Antenna Source 0* is enabled. You can change the default value using the drop-down menu. If the *Antenna Source 0* is enabled, the reader performs the inventory using this antenna.
- **Antenna Source 1:** enable or disable. By default, the *Antenna Source 1* is disabled. You can change the default value using the drop-down menu. If the *Antenna Source 1* is enabled, the reader performs the inventory using this antenna.
- **Antenna Source 2:** enable or disable. By default, the *Antenna Source 2* is disabled. You can change the default value using the drop-down menu. If the *Antenna Source 2* is enabled, the reader performs the inventory using this antenna.

- **Antenna Source 3:** enable or disable. By default, the *Antenna Source 3* is disabled. You can change the default value using the drop-down menu. If the *Antenna Source 3* is enabled, the reader performs the inventory using this antenna.
- **EPC Filter Mask:** EPC Filter Mask is an editable field. By default, the field is empty. It allows to filter read tags by sending only those with the specified EPC mask. For example, by inserting the mask *12345...* in the *EPC Filter Mask*, the reader returns only the read tags that have an EPC starting with 12345. POSIX Basic Regular Expressions are accepted as well.
- **RSSI Threshold (dBm):** RSSI Threshold is an editable field and the value is expressed in dBm. By default, the field is empty. It allows the user to filter the read tags by sending only those with RSSI greater than the threshold. For example, entering the value *-50* in the *RSSI Threshold field*, the reader returns only the read tags with RSSI threshold greater than -50 dBm.
- **Scan Delay (ms):** Scan Delay is an editable field and the value is expressed in ms. By default, the scan delay is 500 ms. The scan delay is the time between two inventories (in case of continuous inventory mode with no triggers enabled). It is the equivalent of the *interval* of the software trigger (see *Software Trigger* page 31).




Warning: By setting the *Scan Delay* when the software trigger is in use, the total interval will be given by the sum of the two times:


Total interval = Scan delay + Interval (software trigger).

Note that if the GPIO0 trigger or GPIO1 trigger are enabled, the scan delay is ignored.


Scroll the other Autonomous configuration submenu options:

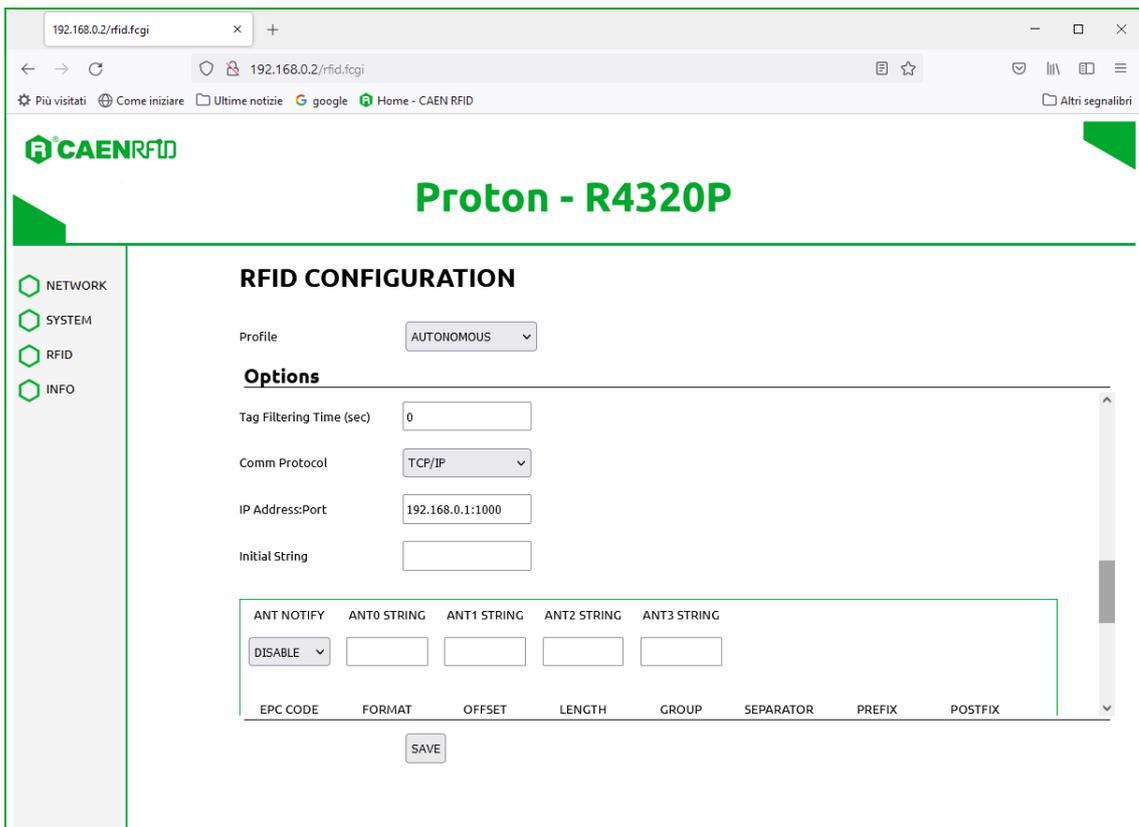

- **Tag Filtering Time (sec):** this option is useful to avoid the retransmission of the same tag for a time equal to the tag filtering time. By default, the *Tag Filtering Time* is set to 0 and the tag is transmitted at each reading. For example, if *Tag Filtering Time* is set to 5s and a tag is read, it is transmitted the first time then it will be retransmitted after 5 seconds if read again.
- **Comm Protocol:** *Comm Protocol* determines the format and transmission of data of the read tags. By default, the *Comm Protocol* is set to TCP/IP. You can change the default value using the drop-down menu:
 - **RS232:** choosing this option, it is requested to insert the *Baud Rate*, see the example below:

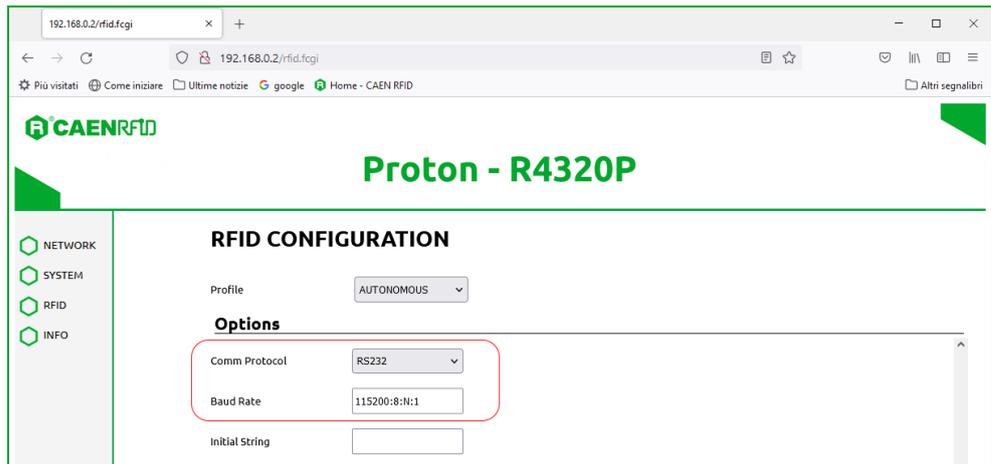


- **TCP/IP:** choosing this option, it is requested to insert the *IP Address:Port*, see the example below:

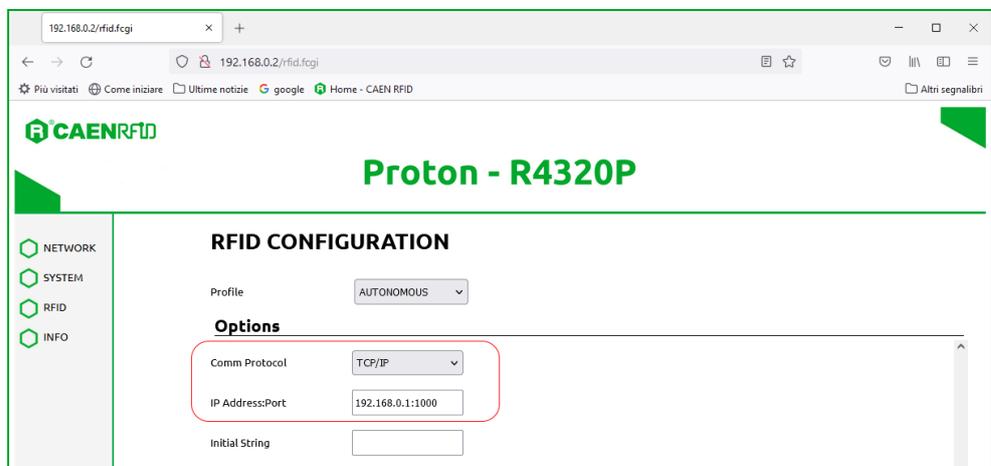

- **HTTP/HTTPS:** choosing this option, it is requested to insert:
 - o the *URL* in the following format: *http://server/path* or *https://server/path*
 - o the *Content-Type*: using the drop-down menu choose the available options between *text/plain*, *text/xml*, *text/xml* or *application/json*.

See the example below:

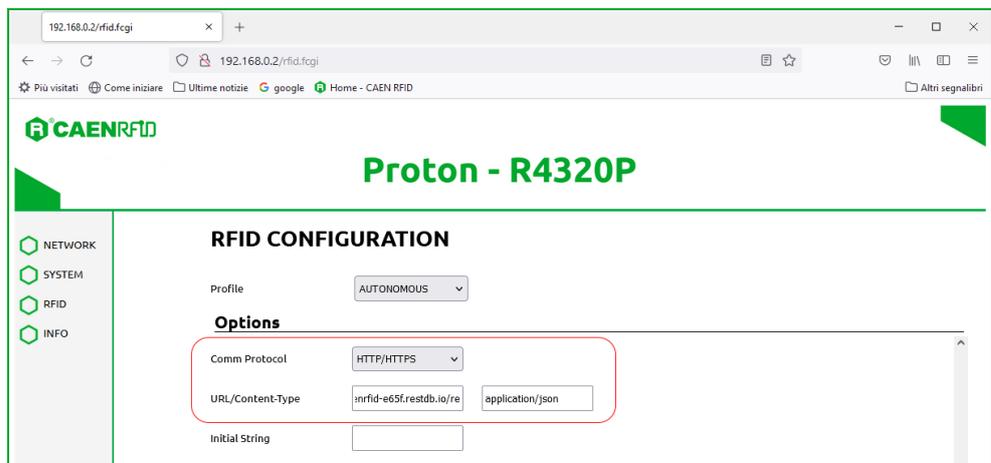

By default, the EPC AUTONOMOUS format is set to “HEX”. You can change the default value using the drop-down menu.

- **OFFSET:** optional. The “offset” indicates after how many characters start counting the “length” value. By default, the offset string is empty.
- **LENGTH:** number of characters of the EPC code to be displayed counting from the “offset”. If not set, all the EPC code is displayed. By default, the length string is empty.
- **GROUP:** the EPC code characters are grouped according to the value set in “group”. By default, the group string is empty.
- **SEPARATOR:** separator used to distinguish groups. By default, the separator string is empty.
- **PREFIX:** The PREFIX option permits to specify a string to add before the EPC when a tag is read.

The accepted characters for the prefix are listed below and in the table *Tab. 4.4: Escape Sequences supported* page 30):

'a', 'b', 'c', 'd', 'e', 'f', 'g', 'h', 'i', 'j', 'k', 'l', 'm', 'n', 'o', 'p', 'q', 'r', 's', 't', 'u', 'v', 'w', 'x', 'y', 'z', 'A', 'B', 'C', 'D', 'E', 'F', 'G', 'H', 'I', 'J', 'K', 'L', 'M', 'N', 'O', 'P', 'Q', 'R', 'S', 'T', 'U', 'V', 'W', 'X', 'Y', 'Z', '0', '1', '2', '3', '4', '5', '6', '7', '8', '9', '{', '|', '}', '!', '"', '#', '\$', '(', ')', '*', '+', ',', '-', '.', ':', ';', '=', '?', '@', '[', ']', '^', '_', ' ' , '\n', '\r', '\t', '\v', '\\', '\xhh'

By default, the prefix string is empty.



Warning: if you are using a qwerty keyboard, pay attention that it is a **standard** qwerty keyboard because if not the conversion of symbols could create display problems.

- **POSTFIX:** The POSTFIX option permits to specify a string to add after the EPC when a tag is read.

The accepted characters for the postfix are listed below and in the table *Tab. 4.4: Escape Sequences supported* page 30):

'a', 'b', 'c', 'd', 'e', 'f', 'g', 'h', 'i', 'j', 'k', 'l', 'm', 'n', 'o', 'p', 'q', 'r', 's', 't', 'u', 'v', 'w', 'x', 'y', 'z', 'A', 'B', 'C', 'D', 'E', 'F', 'G', 'H', 'I', 'J', 'K', 'L', 'M', 'N', 'O', 'P', 'Q', 'R', 'S', 'T', 'U', 'V', 'W', 'X', 'Y', 'Z', '0', '1', '2', '3', '4', '5', '6', '7', '8', '9', '{', '|', '}', '!', '"', '#', '\$', '(', ')', '*', '+', ',', '-', '.', ':', ';', '=', '?', '@', '[', ']', '^', '_', ' ' , '\n', '\r', '\t', '\v', '\\', '\xhh'

By default, the postfix string is `\r\n` (see the following table *Tab. 4.4: Escape Sequences supported* page 36).



Warning: if you are using a qwerty keyboard, pay attention that it is a **standard** qwerty keyboard because if not the conversion of symbols could create display problems.

Escape Sequences	Description
<code>\n</code>	Newline (Line Feed)
<code>\r</code>	Carriage Return
<code>\t</code>	Horizontal Tab
<code>\v</code>	Vertical Tab
<code>\\</code>	Backslash
<code>\xhh</code>	Character with HEX value hh

Tab. 4.4: Escape Sequences supported

Using the second part of the *Tab. 4.3: EPC Code parameters* page 35, the same parameters (Format, Offset, Length, Group, Separator, Prefix, Postfix) can be set for individual memory banks (RESERVED, EPC, TID and USER).

Warning: To activate the AUTONOMOUS profile click on the “SAVE” button. Note that all changes made via the web interface are active only after the reader’s reboot. Click on *SYSTEM* option in the Web Interface panel and then click on the “Reboot” button. After reboot, the new settings are active and the “UPDATE” button is enabled:

RFID CONFIGURATION

Profile AUTONOMOUS ▾

Options

ENABLE	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
ENABLE ▾	HEX ▾	<input type="text"/>	<input type="text" value="\r\n"/>				
BANK	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					

UPDATE (press SAVE then REBOOT to enable the UPDATE button)

SAVE



RFID CONFIGURATION

Profile AUTONOMOUS ▾

Options

ENABLE	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
ENABLE ▾	HEX ▾	<input type="text"/>	<input type="text" value="\r\n"/>				
BANK	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					

UPDATE

SAVE



Warning: Once the AUTONOMOUS profile has been activated, it is possible to carry out tests by changing values to the various AUTONOMOUS options and clicking only on the "UPDATE" button to make the changes immediately active:

RFID CONFIGURATION

Profile AUTONOMOUS ▾

Options

ENABLE	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
ENABLE ▾	HEX ▾	<input type="text"/>	<input type="text" value="\r\n"/>				
BANK	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					

UPDATE

SAVE



Warning: To return to the last saved configuration, just click on SYSTEM option in the Web Interface panel and then click on the "Reboot" button.

Otherwise, to save the new settings, click on the "SAVE" button. Then click on SYSTEM option in the Web Interface panel and click on the "Reboot" button. After reboot, the new settings are active.

RFID CONFIGURATION

Profile AUTONOMOUS ▾

Options

ENABLE	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
ENABLE ▾	HEX ▾	<input type="text"/>	<input type="text" value="\r\n"/>				
BANK	FORMAT	OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					
NONE ▾	HEX ▾	<input type="text"/>					

UPDATE

SAVE



EXAMPLES

Consider the following EPC MEMORY CONTENT (RAW):

0x41 0x42 0x43 0x44 0x45 0x46 0x47 0x48 0x49 0x4A 0x4B 0x4C

HEX FORMAT: 4142434445464748494A4B4C

OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
1	6	1	-		.

Result:

1-4-2-4-3-4.

OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
3	14	2	:	00	

Result:

0024:34:44:54:64:74:84

OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
4	20			CAEN	-

Result:

CAEN434445464748494A4B4C-

ASCII FORMAT: ABCDEFGHIJKL

OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
1	6	1	-	-	

Result:

-B-C-D-E-F-G

OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
3	6	2	:	-	-

Result:

-DE:FG:HI-


OFFSET	LENGTH	GROUP	SEPARATOR	PREFIX	POSTFIX
				Tag	CAEN

Result:

TagABCDEFGHIJKLCAEN

CUSTOM Configuration Options

The use of the *Custom* profile allows the user to upload his own scripts to the reader.

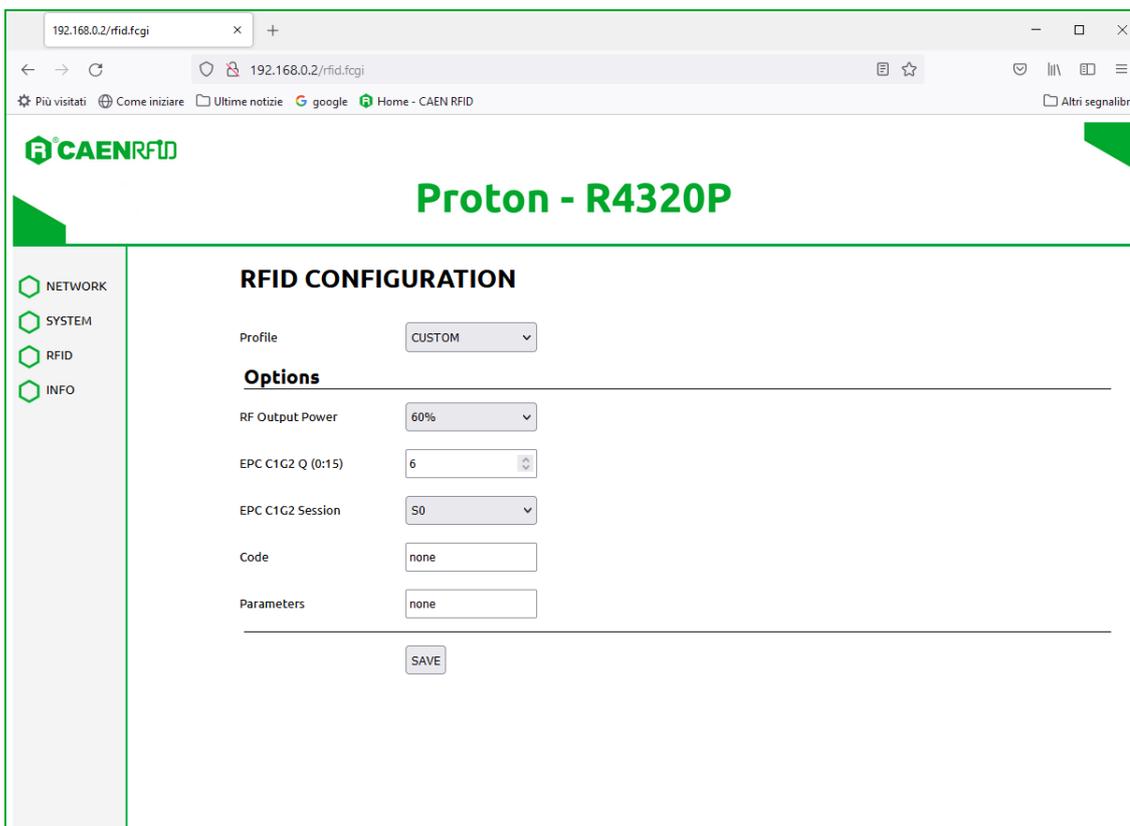

Choosing the Custom profile, the RFID Configuration submenu options are the following:

- **RF Output Power:** the default RF Power is 60%. The RF Power value at power up is expressed as a percentage value of the maximum RF output power. Through the *RF Output Power* submenu, you can set the power level emitted by the reader. You can change the default value using the drop-down menu:
 - 5%
 - 10%
 - 20%
 - 40%
 - 60%
 - 80%
 - 100%

The correspondent values are:

Percentage	Conducted Power ETSI (mW)	Conducted Power FCC (mW)
5%	70	70
10%	140	140
20%	280	280
40%	560	560
60%	840	840
80%	1120	1000 ⁴
100%	1400	1000 ³

Tab. 4.5: Conducted power


⁴ The reader with the FCC regulation cannot supply more than 1000 mW to the connector. By analogy with the power expressed in the ETSI table, the percentage refers to the full scale of 1400mW, but the percentage of 80% and 100% (that exceed 1000mW) are limited to the maximum of 1000 mW.

- **EPCC1G2 Q:** Q parameter (integer 0÷15) is useful for the optimization of the inventory efficiency: as a rule of thumb, if you have to read a huge population of tags you need to select a high value for the Q parameter, otherwise you can select a lower value. For more information on Q parameter see EPC Class1 Gen2 protocol specification [RD1]. Default value is EPCC1G2 Q =6.
- **EPC C1G2 Session:** You can change the value using the drop-down menu: S0, S1, S2 and S3. This method can be used to set the Session used by the anticollision algorithm. The reader chooses one of four sessions and inventories tags within that session. For more information on *session* see EPC Class1 Gen2 protocol specification [RD1]. Default value is *EPC C1G2 Session* = S0.
- **Code:** alphanumeric characters. The “code” is the name assigned by the user to the custom program. When the reader is turned on, if the profile is set to custom, among all the programs loaded by the user, the reader starts the custom program named “code”.
- **Parameters:** alphanumeric characters. This string can be used to assign values to the parameters defined by the user in the custom program (e.g. Q=8; n=6; cycles=20, etc...).



Warning: To save the changes click on the “SAVE” button. Note that all changes made via the web interface are active only after the reader’s reboot. Click on *SYSTEM* option in the Web Interface panel and then click on the “Reboot” button. After reboot, the new settings are active

INFO

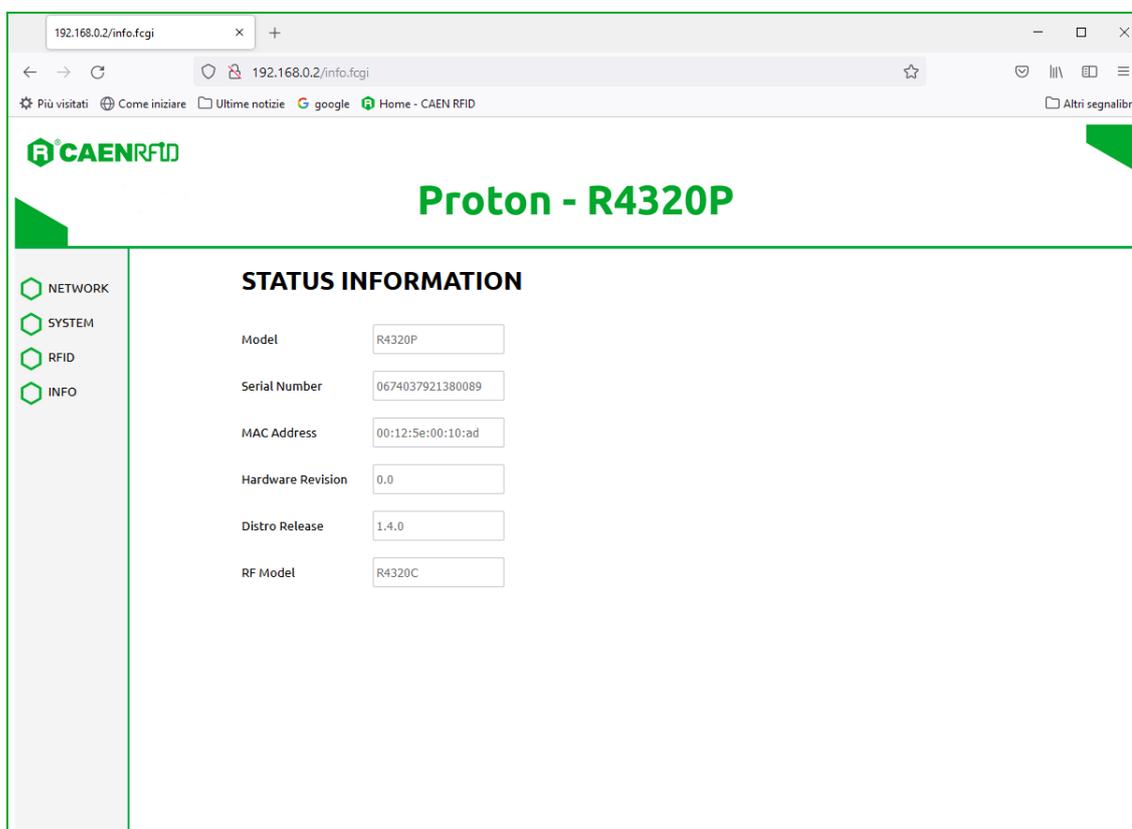

The screenshot shows a web browser window at 192.168.0.2/info.fcgi. The page header includes the CAENRFID logo and the title "Proton - R4320P". A left sidebar contains menu items: NETWORK, SYSTEM, RFID, and INFO (which is highlighted). The main content area is titled "STATUS INFORMATION" and displays the following data:

Field	Value
Model	R4320P
Serial Number	0674037921380089
MAC Address	00:12:5e:00:10:ad
Hardware Revision	0.0
Distro Release	1.4.0
RF Model	R4320C

The INFO submenu options are the following:

- **Model:** the model name (e.g. R4320P)
- **Serial Number:** the reader serial number (16 numbers)
- **MAC Address:** the reader MAC address
- **Hardware Revision:** the hardware revision of the reader
- **Distro Release:** Distribution firmware release
- **RF Model:** the internal RF module model, R4320C

5 EASY2READ PROFILE

Introduction

With the EASY2READ profile active you will use the CAEN RFID easy2read communication protocol and the reader can be controlled using the [CAEN RFID Easy Controller Application](#) or the [SDK \(Software Development Kit\)](#) library.

The connection to the Proton Reader using the EASY2READ profile is possible via the Ethernet port or the USB port.

Set the EASY2READ profile


By default, the reader profile is set to EASY2READ. If your reader is in AUTONOMOUS or CUSTOM profile active, in order to set the EASY2READ profile, please refer to § *RFID* paragraph page 27 (configuration via web interface).



Warning: Note that all changes made via the web interface are active only after the reader's reboot. To save the changes click on the "SAVE" button. Click on *SYSTEM* option in the Web Interface panel and then click on the "Reboot" button. After reboot, the new settings are active.

EASY2READ configuration options

It is possible to configure various options using the EASY2READ profile (configuration via web interface):

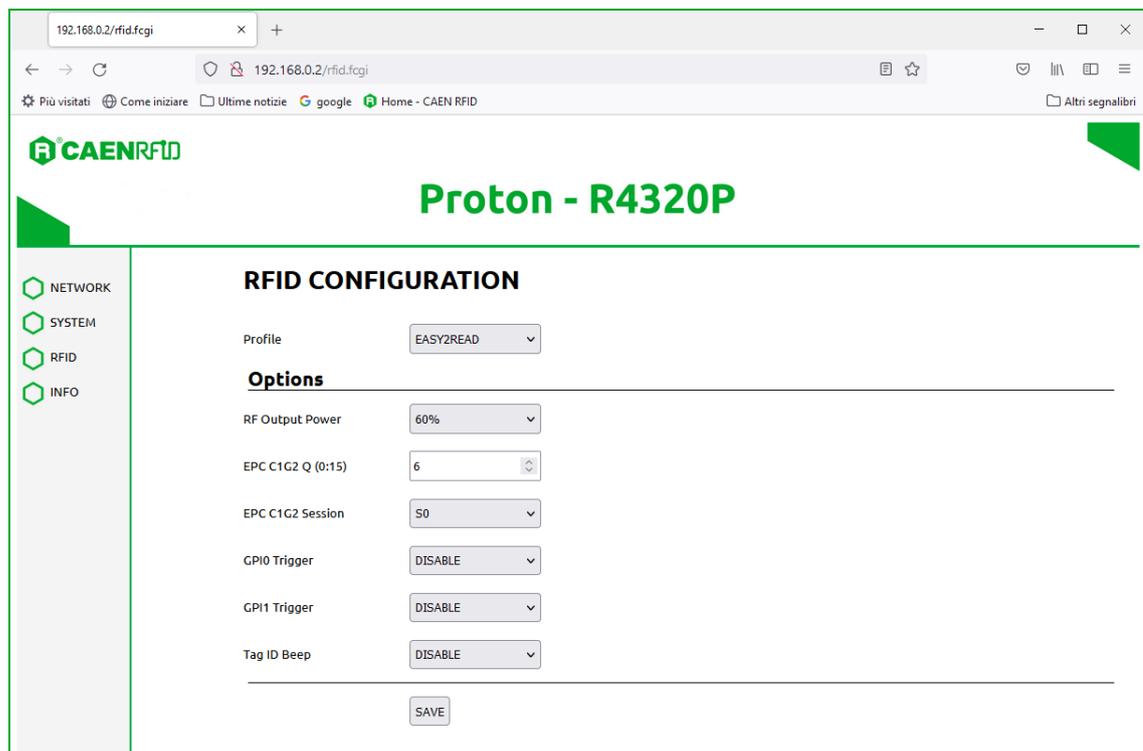

For details on the EASY2READ configuration options, refer to § *EASY2READ Configuration Options* page 28.

Connecting using the Ethernet port

Ethernet Communication Setup

The Proton reader can be connected to a PC using an Ethernet cable. In order to correctly operate with the reader, follow the steps above:


1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the easy2read profile active.
2. Plug an Ethernet cable (not provided, see § *Ordering Options* page 9) into your computer and connect the other end of the Ethernet cable to the reader. By default, the Proton reader is configured with the static IP address 192.168.0.2. If your private network matches the default network configuration of the reader you can connect to it. Otherwise you can either change the network configuration of the reader (see § *NETWORK* page 25) to connect it to your network or disconnect your PC from your network and connect it to the network of the reader.
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.

Now you can use the [CAEN RFID Easy Controller](#) Application to control the reader.


Easy Controller

Follow these steps to connect the Proton using the *Easy Controller* application for Windows:


1. Download the latest version of the Easy Controller software from the [Proton R4320P web page](#), Downloads section and install it.
2. Launch the *Easy Controller* application:

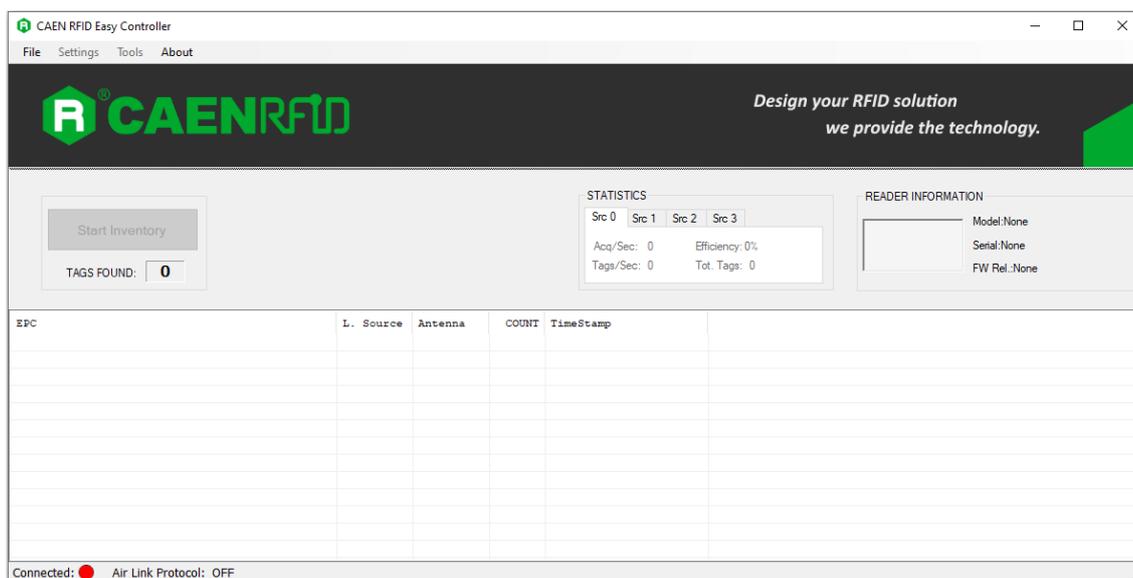


3. On the main screen click on *File* → *Connect*. A Connection windows will open. Select the *Connection Type* (TCP/IP Connection) and type the Proton IP address into the *TCP/IP Address* box (default value is 192.168.0.2). Then click on *Connect*.

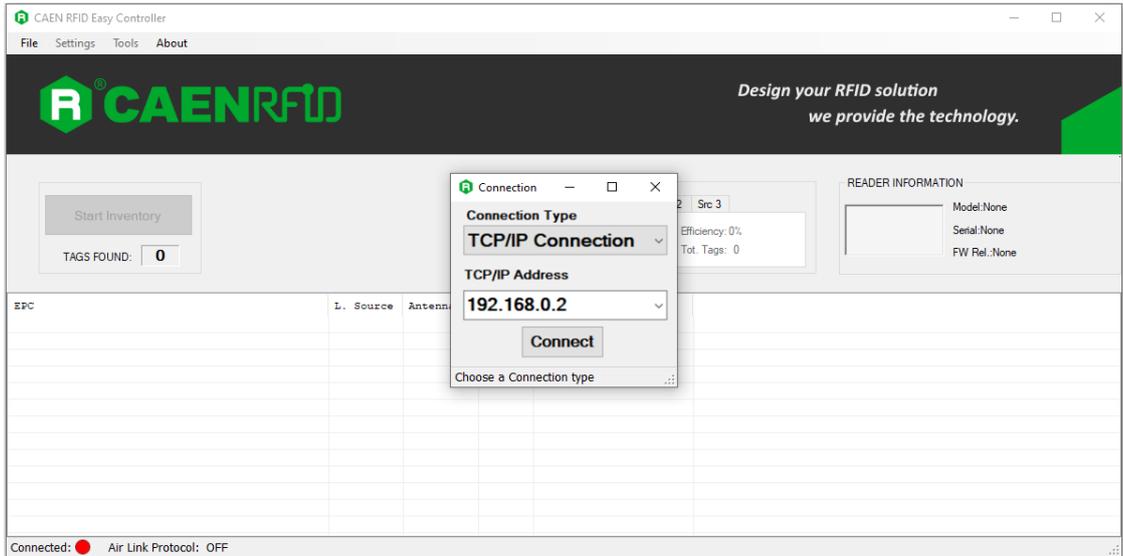

- To verify if the connection with the reader has been established, check the green dot on the bottom left side of the sidebar. Into the *READER INFORMATION* box, you can find information on reader model, serial number and firmware release:

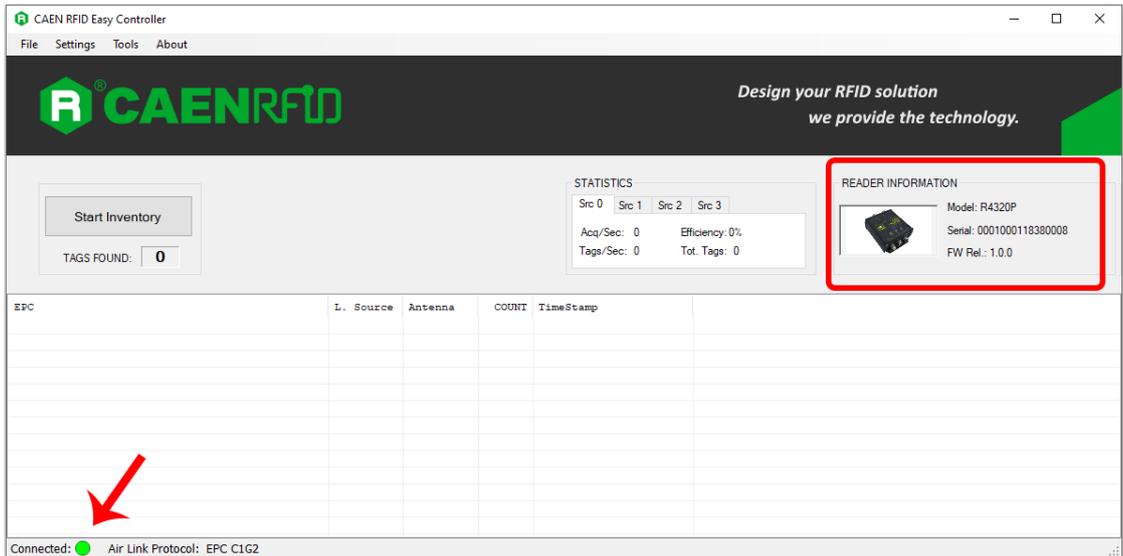

- Place a tag on the read range of the reader, click on *start inventory* and see the tag information displayed on the main window:

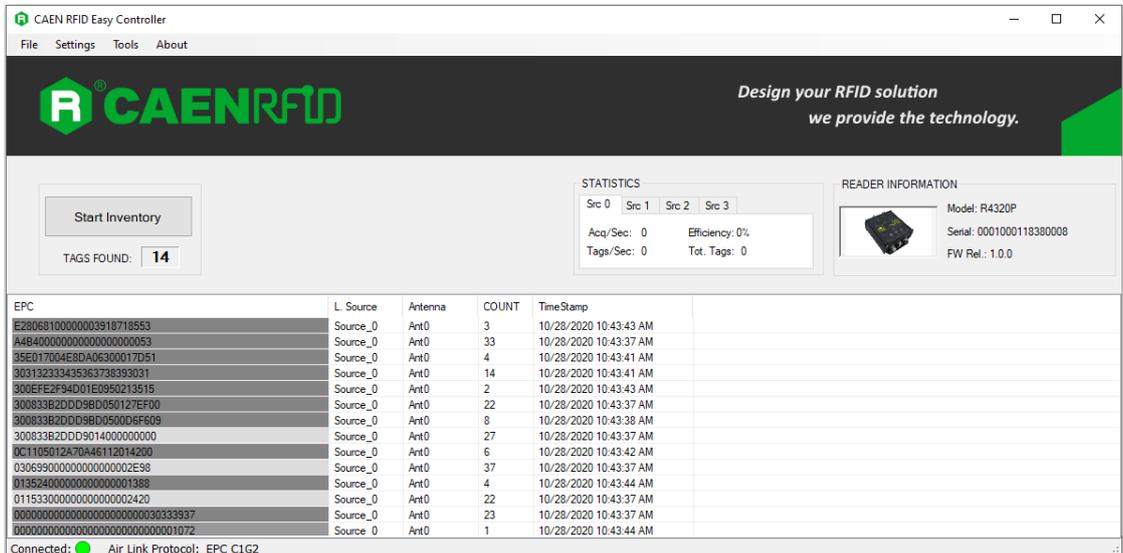

For more info on the use of the *Easy Controller*, please refer to the *CAEN RFID Easy Controller Software Technical Information Manual*, you can download it from the [Proton R4320P web page](#), *Downloads* section or in the [Manual and Documents](#) web area.

Connecting using the serial port

Serial Communication Setup


1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the easy2read profile active.
2. Connect the Proton to the I/O-Serial cable (not provided). Make the connections as indicated in the paragraph *RS232 Communication* page 20 (example of serial connection between the reader and a PC).
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.
4. If you use a native COM PORT of the PC, connect to the COM assigned by the operating system.

Otherwise, if you use a USB-SERIAL converter go to *Control Panel* → *Hardware and Sound* → *Devices and Printers*. Look at the COM port number assigned to the USB/serial converter.


Easy Controller

Follow these steps to connect the Proton using the Easy Controller application for Windows:


1. Download the latest version of the Easy Controller software from the [Proton R4320P web page](#), *Downloads* section and install it.
2. Launch the Easy Controller application:

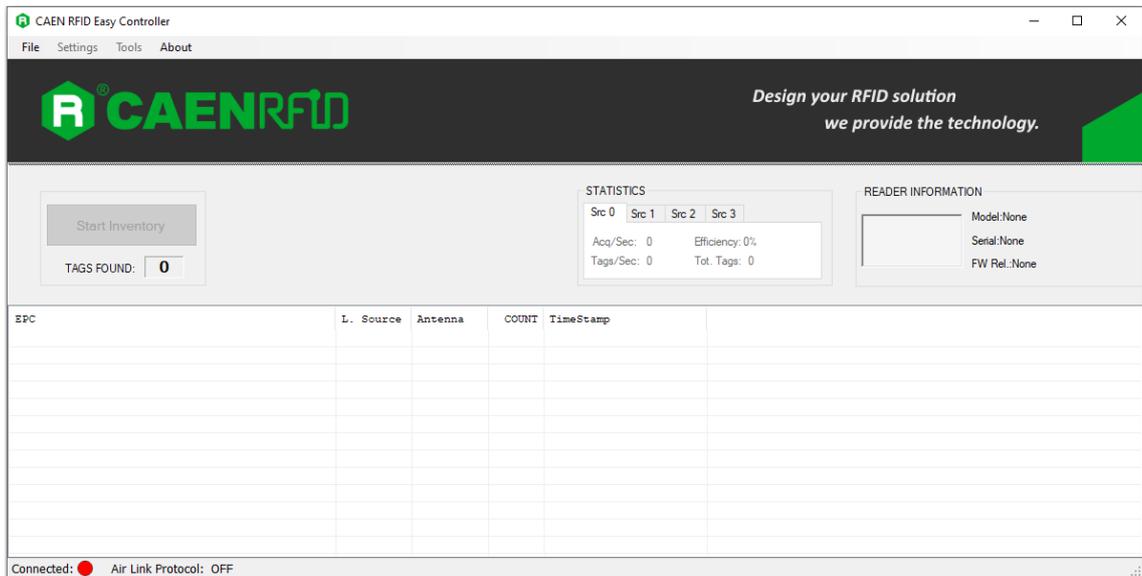


- On the main screen click on File → Connect. A Connection window will open. Select the Connection Type (RS232) and specify the RS232 port (COM 5 in this example):

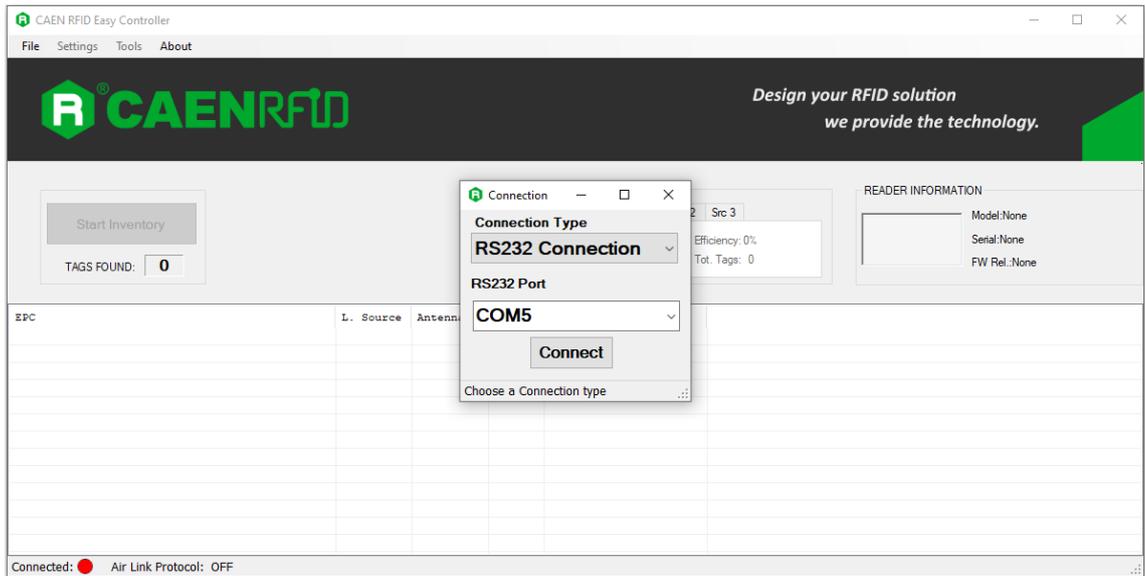

- To verify if the connection with the reader has been established, check the green dot on the bottom left side of the sidebar and on the READER INFORMATION box you can find information on reader model, serial number and firmware release:

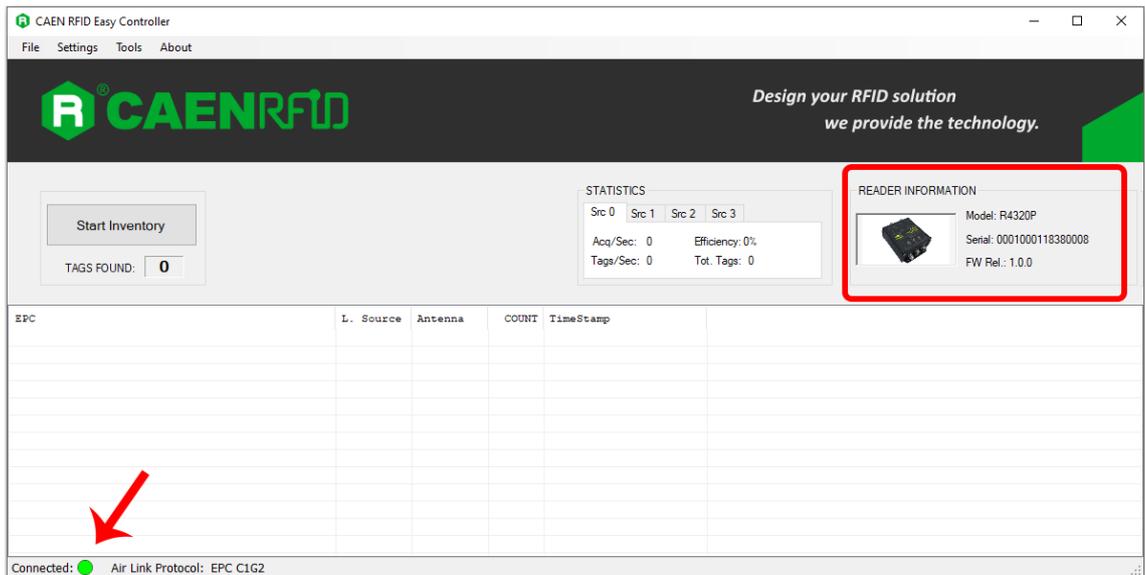

- Place a tag on the read range of the reader, click on *start inventory* and see the tag information displayed on the main window:

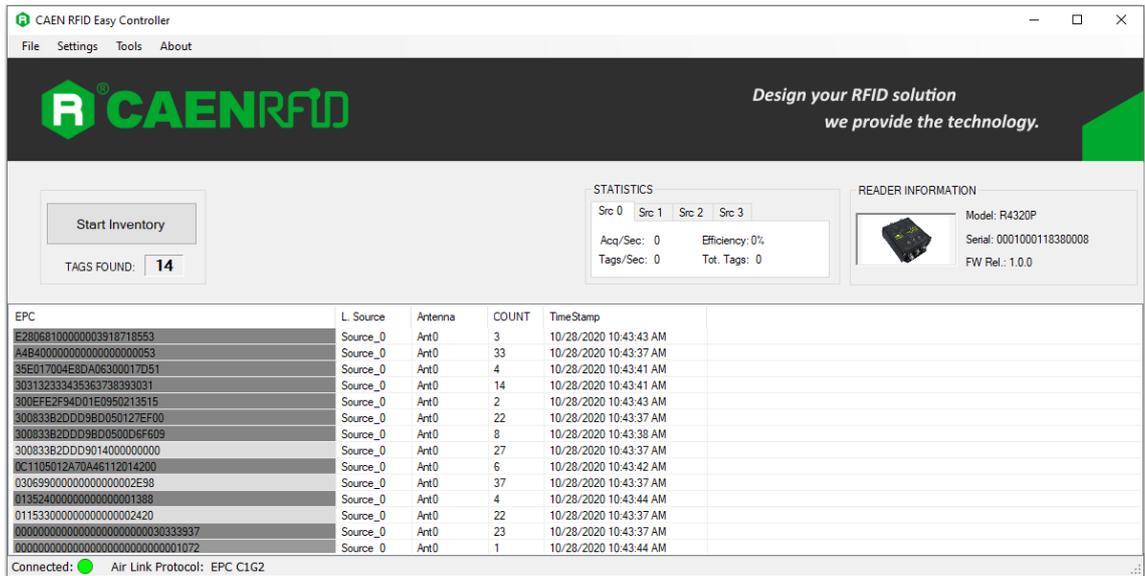

The screenshot shows the CAEN RFID Easy Controller application window. The interface includes a menu bar (File, Settings, Tools, About), a logo, and a tagline: "Design your RFID solution we provide the technology." A "Start Inventory" button is visible, and a "TAGS FOUND: 14" indicator shows the current count. The "STATISTICS" panel displays acquisition and efficiency metrics for four sources. The "READER INFORMATION" panel shows the model (R4320P), serial number (0001000118380008), and firmware version (1.0.0). A table lists the discovered tags with their EPC, source, antenna, count, and timestamp.

EPC	L. Source	Antenna	COUNT	TimeStamp
E28068100000003918718553	Source_0	Ant0	3	10/28/2020 10:43:43 AM
A4B400000000000000000053	Source_0	Ant0	33	10/28/2020 10:43:37 AM
35E017004E8DA06300017D51	Source_0	Ant0	4	10/28/2020 10:43:41 AM
303132333435363738393031	Source_0	Ant0	14	10/28/2020 10:43:41 AM
300FE2F94D01E0950213515	Source_0	Ant0	2	10/28/2020 10:43:43 AM
30083362DD9BD050127EF00	Source_0	Ant0	22	10/28/2020 10:43:37 AM
30083362DD9BD050006F609	Source_0	Ant0	8	10/28/2020 10:43:38 AM
30083362DD99014000000000	Source_0	Ant0	27	10/28/2020 10:43:37 AM
3C1105012A70A45112014200	Source_0	Ant0	6	10/28/2020 10:43:42 AM
03069900000000000002E98	Source_0	Ant0	37	10/28/2020 10:43:37 AM
013524000000000000001398	Source_0	Ant0	4	10/28/2020 10:43:44 AM
011533000000000000002420	Source_0	Ant0	22	10/28/2020 10:43:37 AM
0000000000000000000030333937	Source_0	Ant0	23	10/28/2020 10:43:37 AM
00000000000000000000001072	Source_0	Ant0	1	10/28/2020 10:43:44 AM

Connected: ● Air Link Protocol: EPC C1G2

For more information on the CAEN RFID *Easy Controller for Windows* application usage, please refer to the relevant user manual: you can download it from the [Proton R4320P web page](#), *Downloads* section or in the [Manual and Documents](#) web area.


Inventory on GPIO state change

This mode has been designed to enable the inventory at the change of state of the GPIO0 and GPIO1 as illustrated in the paragraph *Input signal* page 18. The inventory is executed until the state change persists.




In the easy2read profile it is necessary a **double** activation to perform the inventory on GPIO state change:


1. Activation **via web interface** (see § *EASY2READ Configuration Options* page 28)
2. Activation **via Easy Controller Software**:
 - a. Connect the reader to the Easy Controller software. On the main menu of the application, click on *Settings* → *Options*:

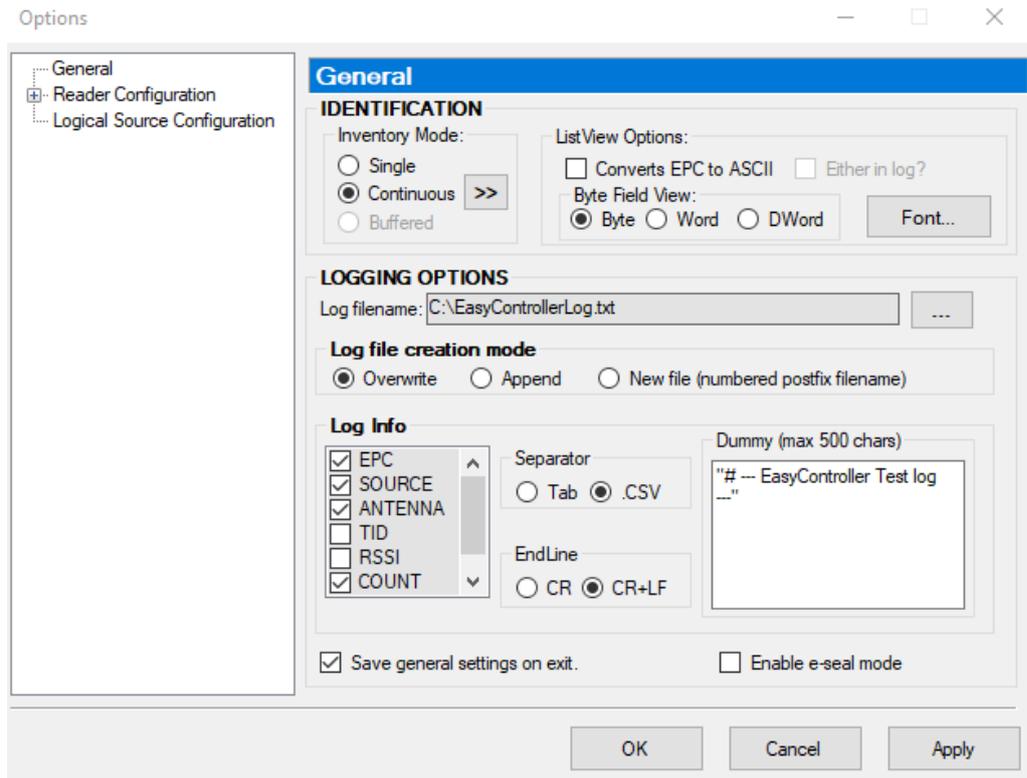

- b. By clicking on  button in the Identification box, you can access the Continuous Inventory Options window:

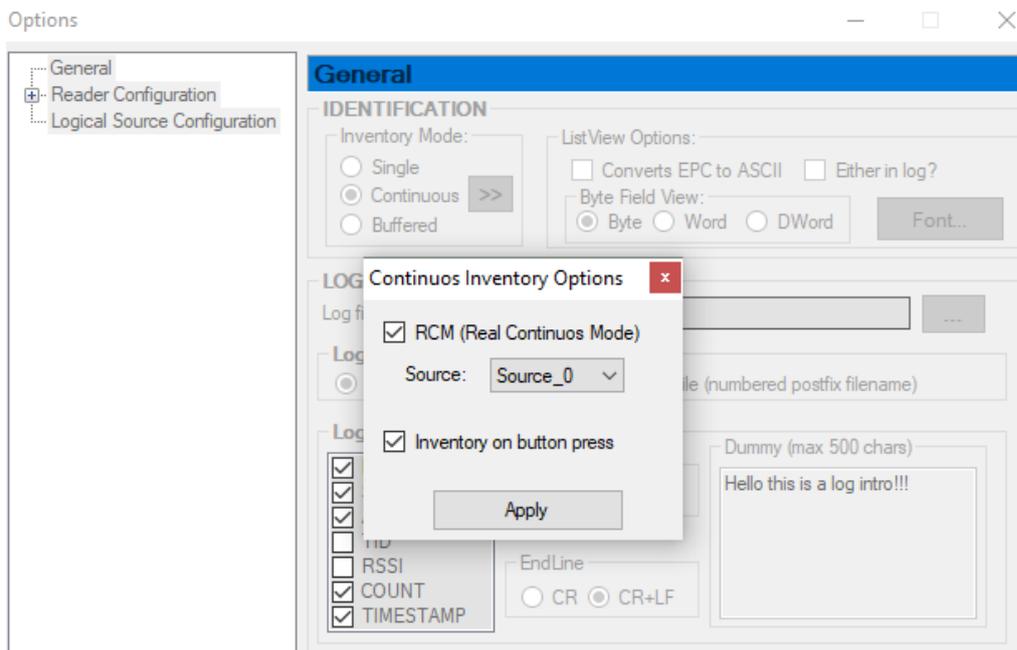

- c. Select the *RCM (Real Continuous Mode)* to perform continuous mode (i.e., a continuous inventory via hardware on the source indicated by the RCM Source parameter) and the *Inventory on button press*. Click on *Apply*. Now click on *Start Inventory* on the main window:

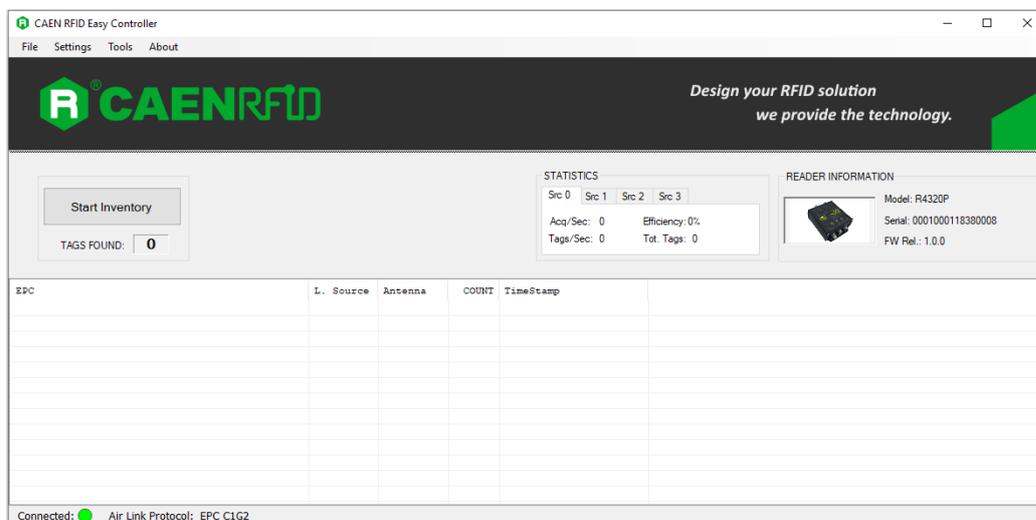

- d. Now the tag inventory is performed at the change of state of the GPIO0/1.

For more information on the CAEN RFID *Easy Controller for Windows* application usage, please refer to the relevant technical information manual: you can download it from the [Proton R4320P web page](#), [Downloads](#) section or in the [Manuals and Documents](#) web area.

6 AUTONOMOUS PROFILE

Introduction

The connection to the Proton Reader using the AUTONOMOUS profile is possible via the Ethernet port or the USB port.



Warning: Note that, when configured in the AUTONOMOUS profile, the Proton R4320P reader cannot be controlled using the *CAEN RFID Easy Controller Application*.

Set the AUTONOMOUS profile


By default, the reader profile is set to EASY2READ. If your reader is in EASY2READ or CUSTOM profile active, in order to set the AUTONOMOUS profile please refer to § *RFID* paragraph page 27 (configuration via web interface).






Warning: Note that all changes made via the web interface are active only after the reader's reboot. To save the changes click on the "SAVE" button. Click on *SYSTEM* option in the Web Interface panel and then click on the "Reboot" button. After reboot, the new settings are active.

AUTONOMOUS configuration options

It is possible to configure various options using the AUTONOMOUS profile (configuration via web interface):

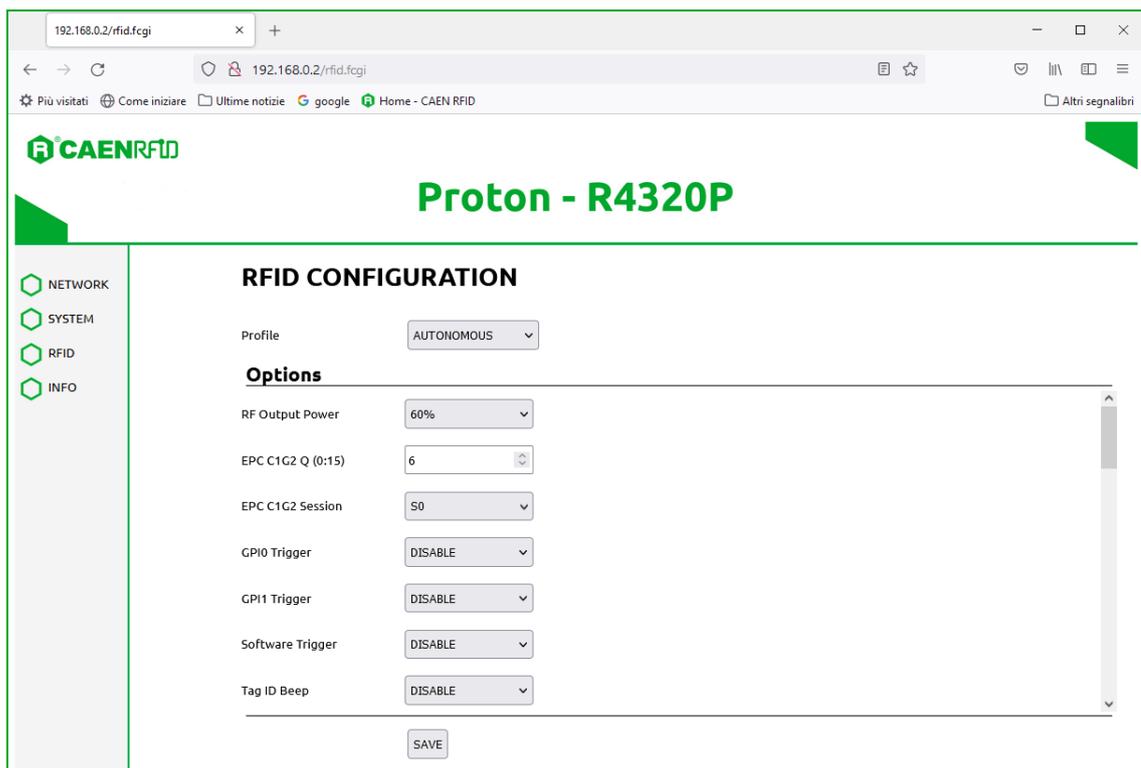

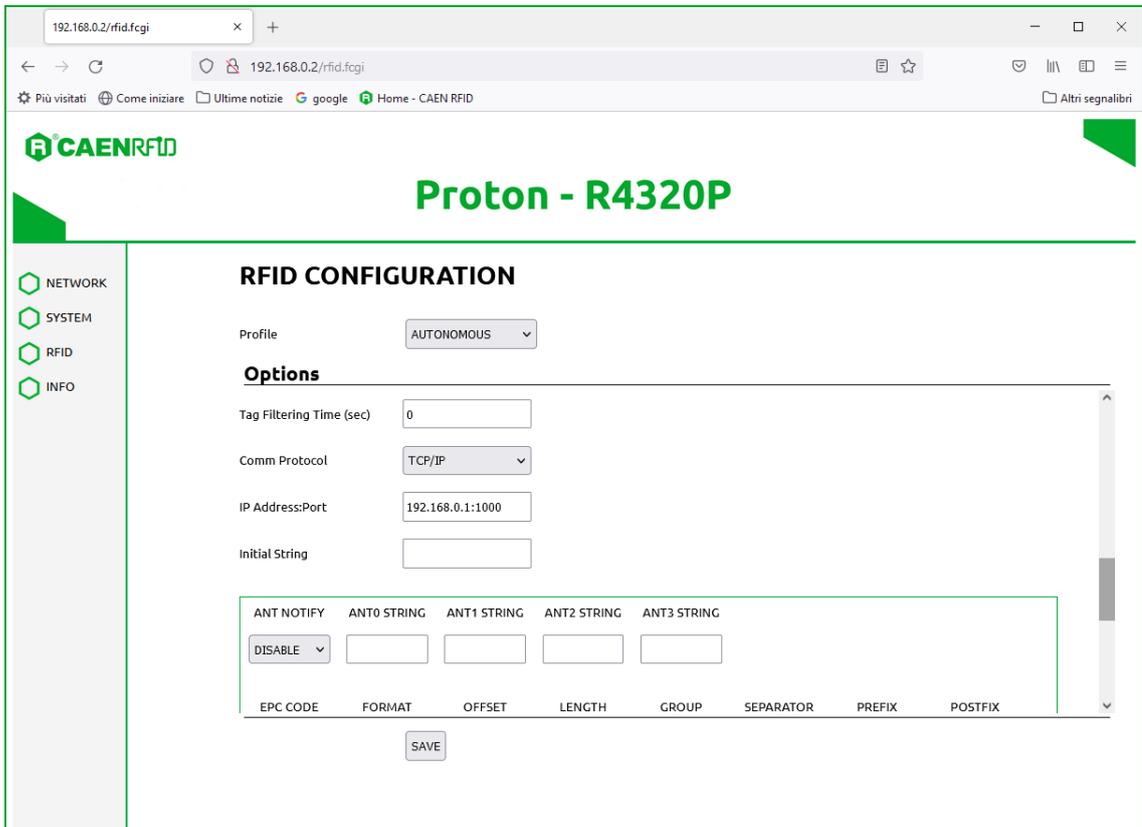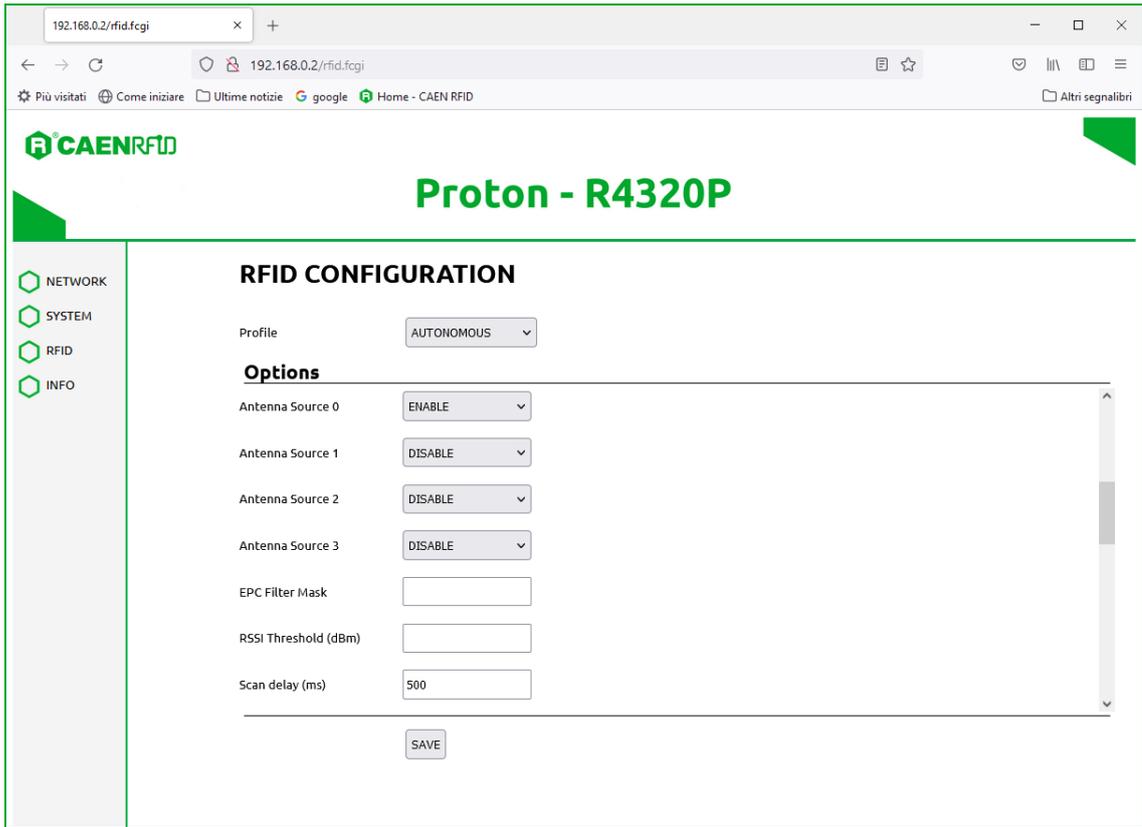

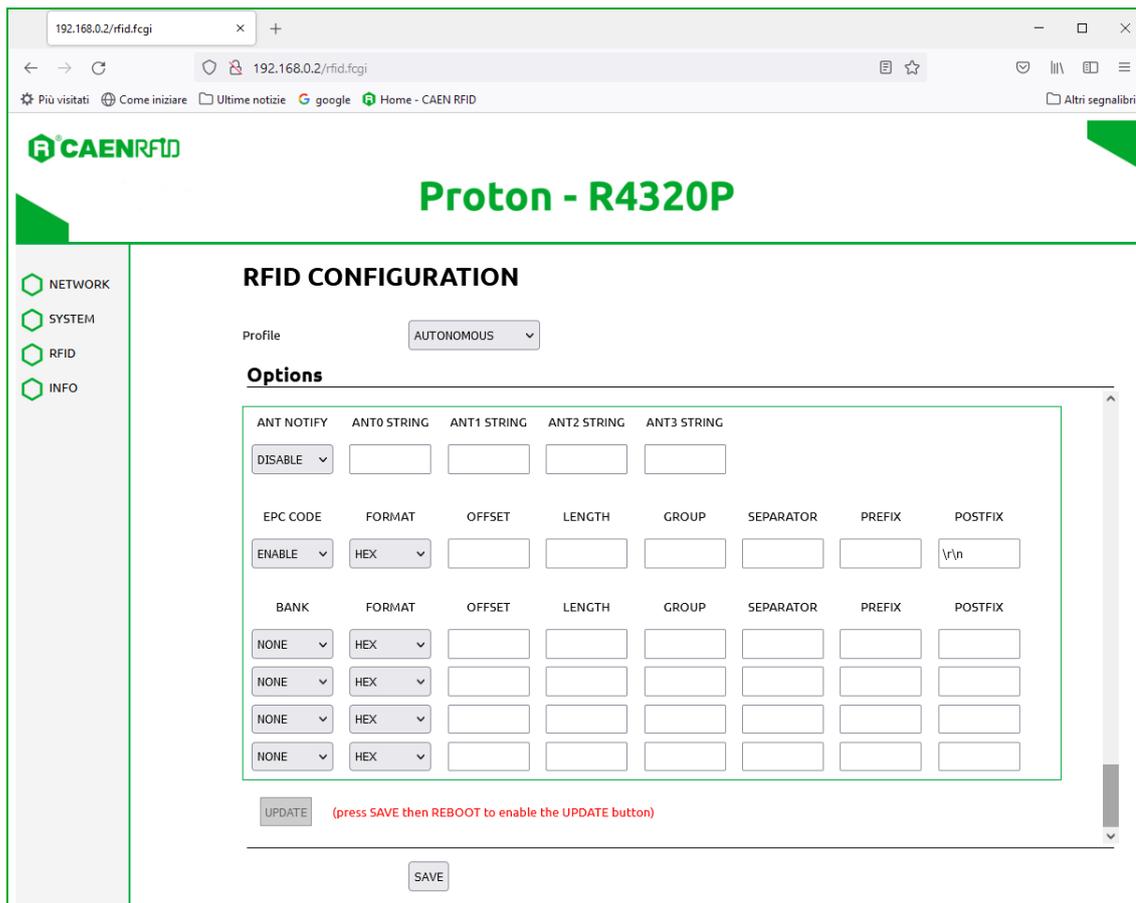

For details on the *AUTONOMOUS* configuration options, refer to § *AUTONOMOUS Configuration Options* paragraph page 30.

Connecting using the Ethernet port

Ethernet Communication Setup

The Proton reader can be connected to a PC using an Ethernet cable. In order to correctly operate with the reader, follow the steps above:

1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the *AUTONOMOUS* profile active.
2. Plug an Ethernet cable (not provided, see § *Ordering Options* page 9) into your computer and connect the other end of the Ethernet cable to the reader. By default, the Proton reader is configured with the static IP address 192.168.0.2. If your private network matches the default network configuration of the reader you can connect to it. Otherwise you can either change the network configuration of the reader (see § *NETWORK* page 25) to connect it to your network or disconnect your PC from your network and connect it to the network of the reader.
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.

Now you can use a custom server or existing servers available on the web (e.g. restdb.io) to work with your Proton R4320P reader.

Note that the EPCs of the tags are shown in the format defined in the § *EPC Code Parameters* paragraph page 35 (configuration via web interface): using the *Tab. 4.3: EPC Code parameters* page 35 you can customize the text of the EPC code displayed on the screen.

Connecting using the serial port

Serial Communication Setup



Warning: If your PC is running a Windows version older than Windows 10, to correctly operate with the reader, you need to install the *Gadget Serial USB driver*. You can download it for Windows based systems from the [Proton R4320P web page](#), *Downloads* section or from the [Software and Firmware download area](#).

1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the easy2read profile active.
2. Connect the Proton to the I/O-Serial cable (not provided). Make the connections as indicated in the paragraph *RS232 Communication* page 20 (example of serial connection between the reader and a PC).
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.
4. If you use a native COM PORT of the PC, connect to the COM assigned by the operating system.

Otherwise, if you use a USB-SERIAL converter go to *Control Panel* → *Hardware and Sound* → *Devices and Printers*. Look at the COM port number assigned to the USB/serial converter.

Now you can use a custom application or an open-source terminal emulator program (e.g. as Tera Term) to work with your Proton R4320P reader.

Note that the EPCs of the tags are shown in the format defined in the § *EPC Code Parameters* paragraph page 35 (configuration via web interface): using the *Tab. 4.3: EPC Code parameters* page 35 you can customize the text of the EPC code displayed on the screen.

7 CUSTOM PROFILE

Introduction

The use of the CUSTOM profile allows the user to upload his own scripts to the reader. The connection to the Proton Reader using the CUSTOM profile is possible only via the Ethernet port.



Warning: Note that, when configured in the CUSTOM profile, the Proton R4321P reader cannot be controlled using the *CAEN RFID Easy Controller Application*.

Set the CUSTOM profile


By default, the reader profile is set to EASY2READ. If your reader is in EASY2READ or AUTONOMOUS profile active, in order to set the CUSTOM profile please refer to § *RFID* paragraph page 27 (configuration via web interface).



Warning: Note that all changes made via the web interface are active only after the reader's reboot. To save the changes click on the "SAVE" button. Click on *SYSTEM* option in the Web Interface panel and then click on the "Reboot" button. After reboot, the new settings are active.

CUSTOM Configuration options

It is possible to configure various options using the CUSTOM profile (configuration via web interface):

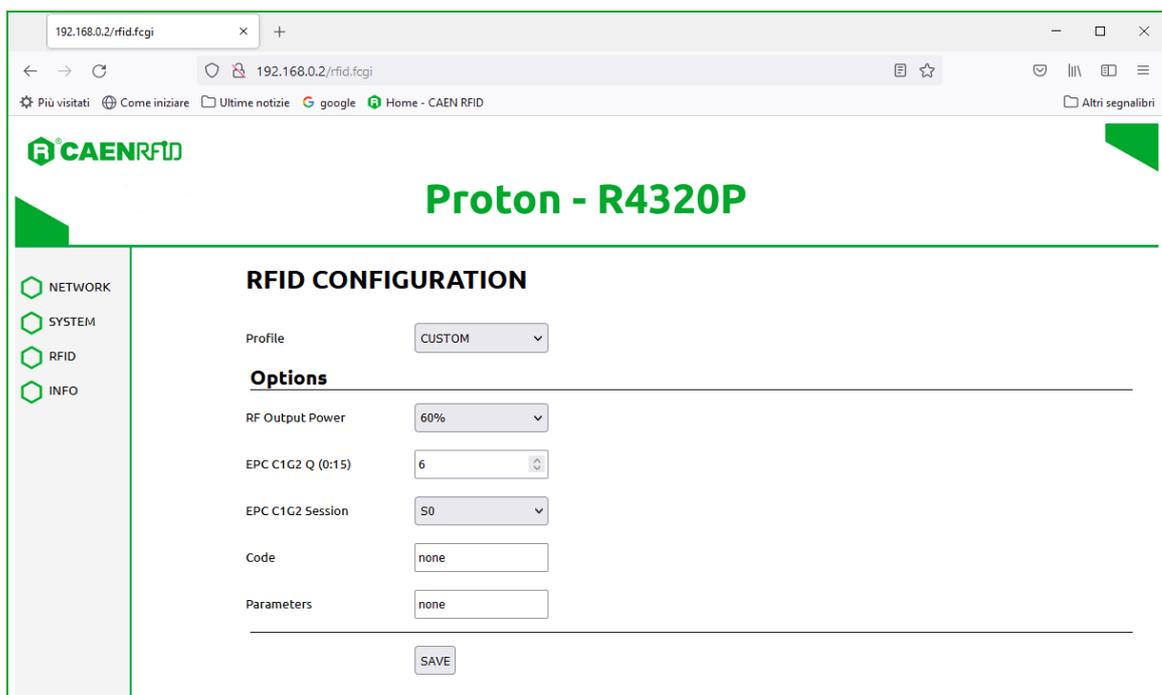

The screenshot shows a web browser window with the URL 192.168.0.2/rfid.fcgi. The page header includes the CAENRFID logo and the title 'Proton - R4320P'. A left sidebar contains navigation options: NETWORK, SYSTEM, RFID, and INFO. The main content area is titled 'RFID CONFIGURATION' and features a 'Profile' dropdown menu set to 'CUSTOM'. Below this, an 'Options' section contains several configuration fields: 'RF Output Power' (60%), 'EPC C1G2 Q (0:15)' (6), 'EPC C1G2 Session' (50), 'Code' (none), and 'Parameters' (none). A 'SAVE' button is located at the bottom of the configuration area.

For details on the CUSTOM configuration options, refer to § *CUSTOM Configuration Options* paragraph page 40.

Connecting using the Ethernet port


Ethernet Communication Setup

The Proton reader can be connected to a PC using an Ethernet cable. In order to correctly operate with the reader, follow the steps above:

1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work with the AUTONOMOUS profile active.
2. Plug an Ethernet cable (not provided, see § *Ordering Options* page 9) into your computer and connect the other end of the Ethernet cable to the reader. By default, the Proton reader is configured with the static IP address 192.168.0.2. If your private network matches the default network configuration of the reader you can connect to it. Otherwise you can either change the network configuration of the reader (see § *NETWORK* page 25) to connect it to your network or disconnect your PC from your network and connect it to the network of the reader.
3. Connect the antenna cable to Ant-0 (see § *Fig. 3.12: Proton R4320P Antennas* page 21) of the reader.

Java Virtual Machine

The user can write his own scripts in Java code and use the "Package Upload" function of the *SYSTEM* section page 26 of the web configuration to upload them on the reader:

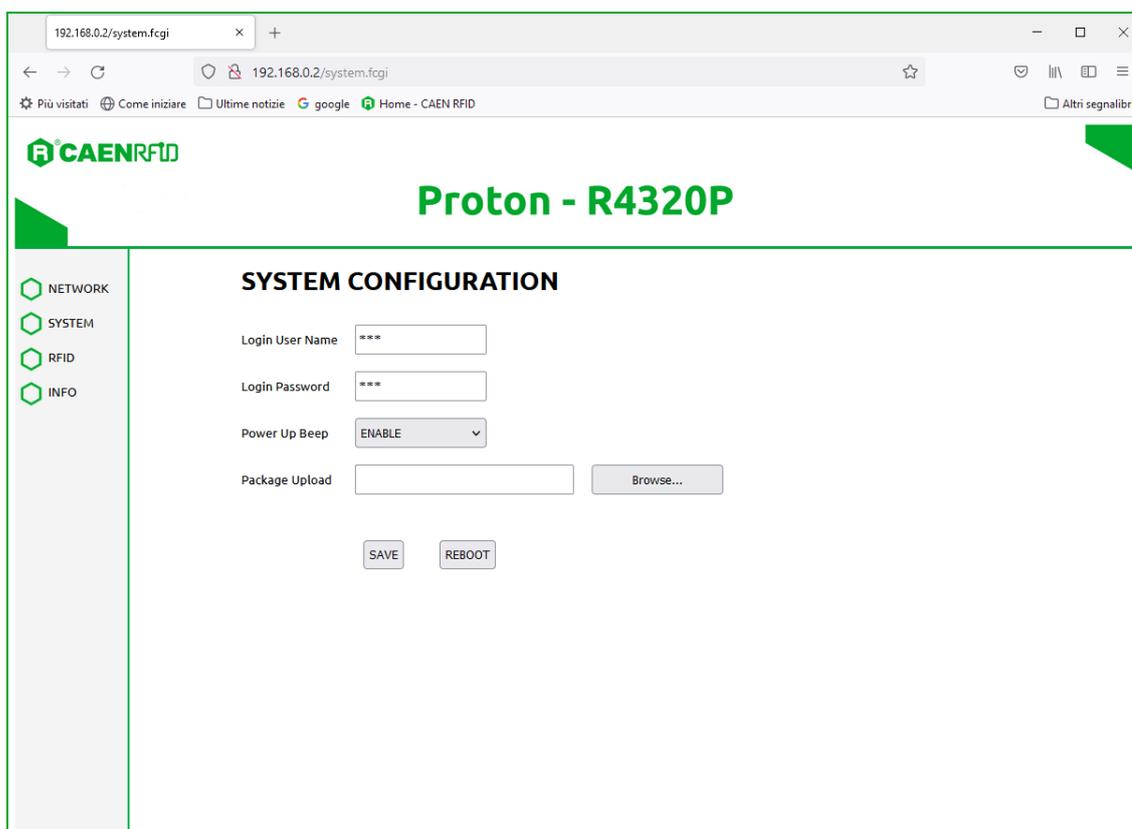

The selection of the script to be used among those loaded is done through the "Code" option of the § *CUSTOM Configuration Options* page 32.

To use the uploaded script, the user needs a Java Virtual Machine. Contact the CAEN RFID support to obtain the Virtual Machine and the guideline to its use.

8 READER RESET

It is possible to reset the reader in three different ways:

1. Turn off the reader (disconnect the power supply), **wait about 10 seconds** then turn on the reader again (connect the power supply). Wait for the reboot to be completed.
or
2. Connect the reader to the Web Interface (for more info see § *Configuration Using the Web Interface* page 23), select the *SYSTEM* option and then click on the "Reboot" button. Wait for the reboot to be completed.
or
3. Press the RESET/UPGRADE button for three seconds (see § *Connectors* page 14) until the green power LED turn off. When the LED is off, it means that the reader has been reset and the button can be released. Wait for the reboot to be completed.

9 FIRMWARE UPGRADE



Warning! The firmware upgrade is a factory reset: any scripts uploaded to the reader are deleted.


The Proton R4320P firmware upgrade can be performed only via serial port.

In order to upgrade the firmware, follow the steps described below:

1. Connect the Proton to the power supply, the power LED will turn on, wait about 30 seconds until you hear a beep, wait 10 seconds again and the reader is ready to work.
2. Connect the Proton to the I/O-Serial cable (not provided). Make the connections as indicated in the paragraph *RS232 Communication* page 20 (example of serial connection between the reader and a PC).
3. Connect to the PC a USB/Serial converter with a transfer rate up to 1Mbps.
4. In your PC, go to *Control Panel* → *Hardware and Sound* → *Devices and Printers*. Look at the COM port number assigned to the USB/Serial converter when detected.
5. Hold down the reset button (see § *Tab. 3.2: Proton R4320P Interfaces Panel* page 14) for about 20 seconds to enter the "upgrade mode".
6. Download the *Proton Upgrade Tool* and the *firmware image file* at the [Proton R4320P web page](#) of the CAEN RFID Web Site, *Downloads* section.
7. Open the FW upgrade program and click on "Next":



8. Select the COM port number assigned to the USB/Serial converter, upload the FW image file by clicking on the “Browse” button and click on the “Upgrade Firmware” button:

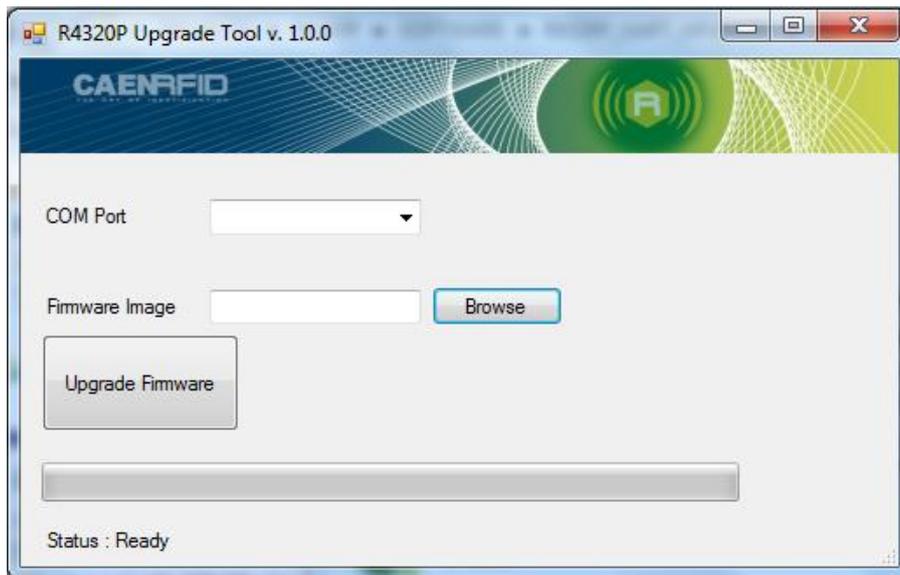

9. Wait for the upgrade process to be completed. In the window you will see the message “Status: upgrading”.
At the end of procedure, if the upgrade has been successfully performed, you will see the message “Status: ready”.
10. Turn off the reader (disconnect the power supply), **wait about 10 seconds** and then turn on the reader again (connect the power supply). Now the reader is ready to work with the new firmware upgraded.

10 TECHNICAL SPECIFICATIONS

Technical Specifications Table

Frequency Range	<ul style="list-style-type: none"> – 865.600÷867.600 MHz (ETSI EN 302 208 v3.1.1) – 902÷928 MHz (FCC part 15.247)
RF Power	<ul style="list-style-type: none"> – Up to 31.5 dBm (1.4W) conducted (ETSI) – Up to 30 dBm (1W) conducted (FCC)
Number of Channels	<ul style="list-style-type: none"> – 4 channels (compliant to ETSI EN 302 208 v3.1.1) – 50 hopping channels (compliant to FCC part 15.247)
Standard Compliance	EPC C1G2/ISO 18000-63
CPU	ARM9 @ 400MHz on Atmel AT91SAM9G25
Operating system	Linux
Receiving Capability	<ul style="list-style-type: none"> – Gen 2 Dense Reader Mode Management – Data rate up to 400 Kb/s
Connectivity	<ul style="list-style-type: none"> – RS232 Serial Communication (M12 connector) <ul style="list-style-type: none"> ▪ Baudrate up to 115.200kbps ▪ Databits: 8 ▪ Stopbit: 1 ▪ Parity: none ▪ Flow control: none – Ethernet 10/100/1000BASE-T (M12 connector) – PoE standard IEEE 802.3af
I/O Interface	<ul style="list-style-type: none"> – M12 connector – 2 digital inputs optically isolated (from 4Vdc to 48Vdc range) – 2 solid state photorelays outputs optically isolated (60Vdc max; 500mA max)
Antenna Connectors	4 TNC Reverse Polarity
Power Supply	<ul style="list-style-type: none"> – 9÷36V DC power supply (12W) – PoE standard IEEE 802.3af (12,95W)
Visual Status Indicators	Multicolor LEDs: Power, Activity, Status and Applications
Operating Temperature	-10°C to +55°C
IP Rating	IP65 ⁵
Dimensions	<ul style="list-style-type: none"> – (W)131 x(L)106 x (H)50 mm³ – (5.15 x 4.17 x 1.96 inch³)
Weight	530 g

Tab. 10.1: Proton R4320P Technical Specifications



Warning: The RF settings must match the operating country/region to comply with local laws and regulations.

The usage of the reader in different countries/regions from the one in which the device has been sold is not allowed.

⁵ Warning: To guarantee the IP65 degree of the device, the antennas must all be wired. If the connector is free, a protective cap must be applied to guarantee the IP65 degree.

Technical Drawings

The following drawings show the Proton R4320P reader from different points of view.
All dimensions are in millimeters.

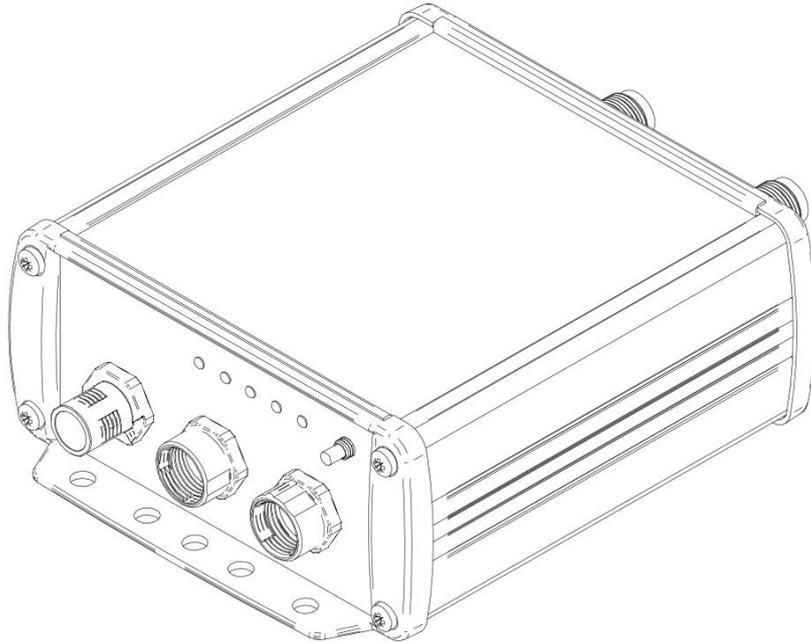


Fig. 10.1: Proton R4320P Technical Drawings – 3D view

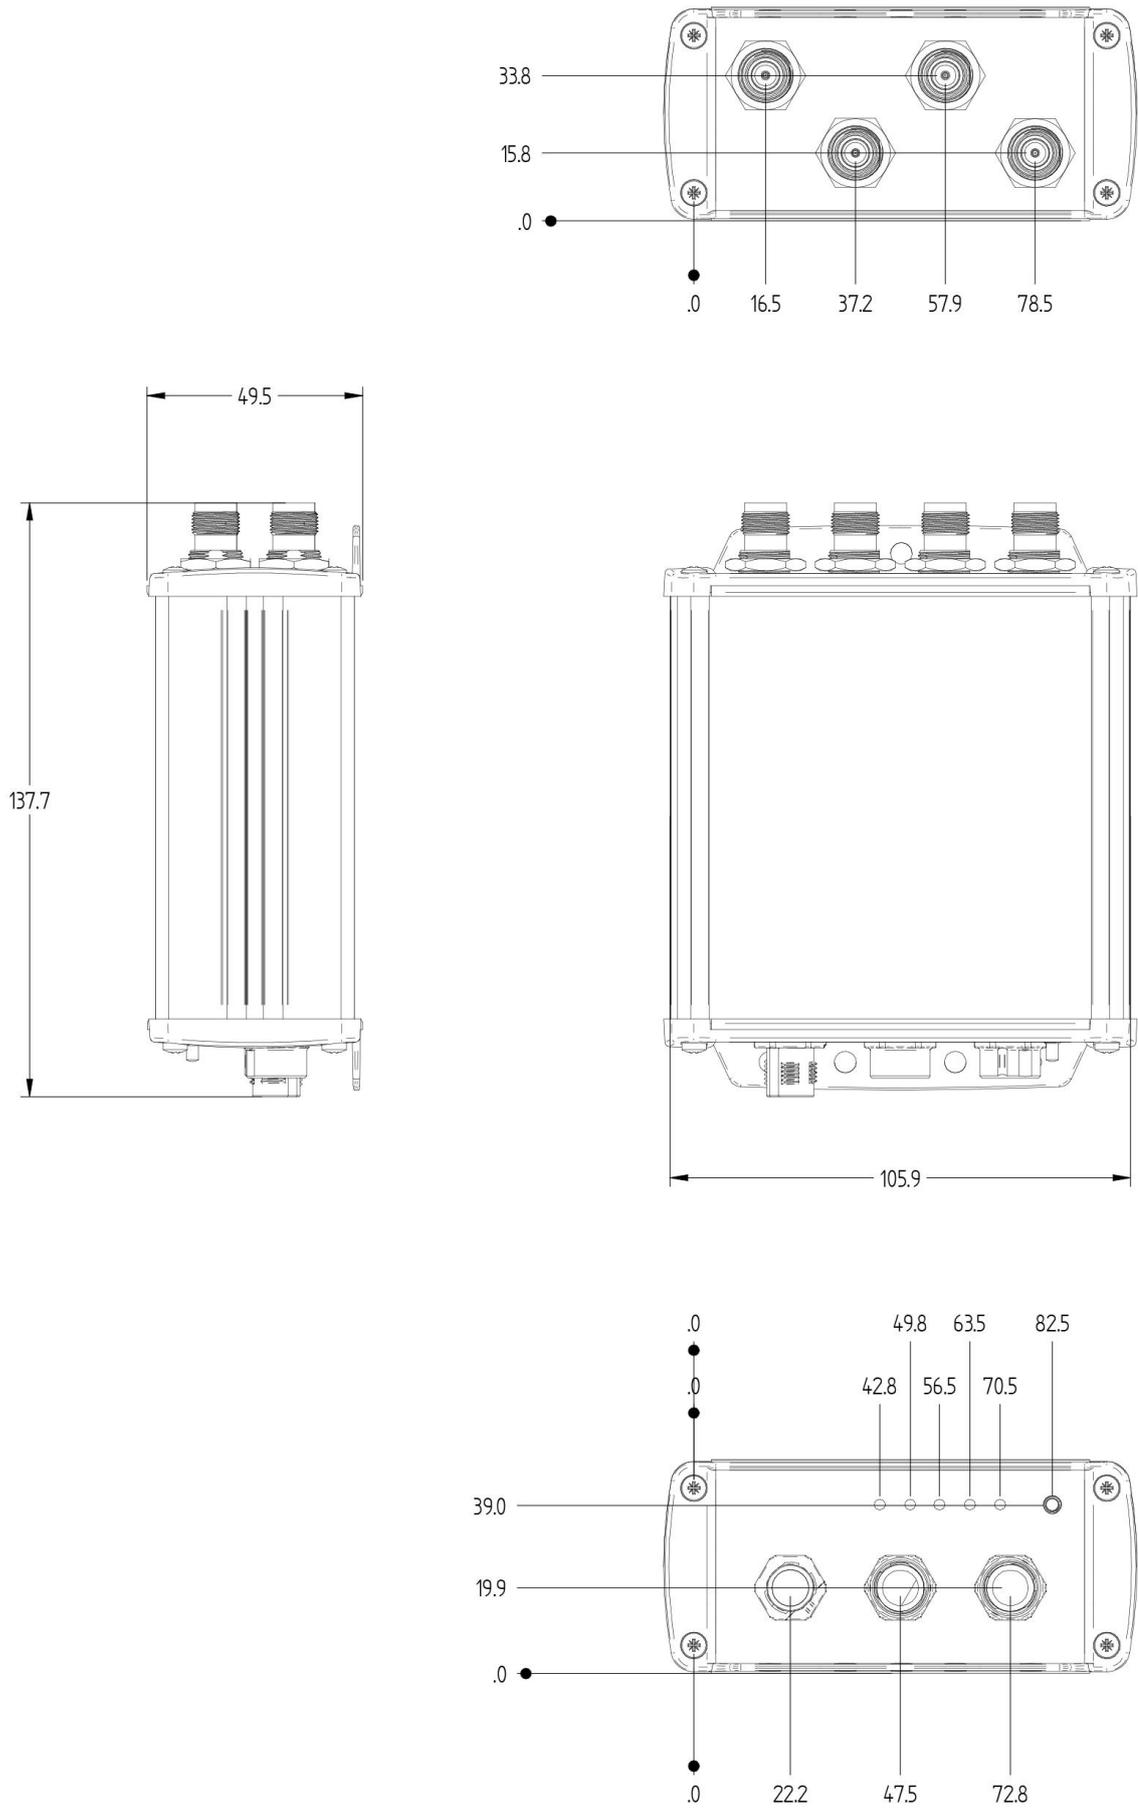


Fig. 10.2: Proton R4320P Technical Drawings

11 CONNECTING TO RA0003 MULTIPLEXER

RA0003 Multiplexer

The [RA0003](#) module is a 1 to 4 UHF antenna multiplexer that allows to expand read points management of CAEN RFID easy2read product line.

Typical usages of the device is the extension of number of read points of multiantenna reader like Proton R4320P for smart shelves installations, manufacturing lines and all other applications requiring a large number of antennas to be connected.

RA0003 has SMA RF connectors, is able to manage up to 2W RF power and can be used in the whole range of UHF RFID worldwide band.

The module has a extended supply voltage range (9Vdc – 36Vdc) and TTL level address signal.

Five LEDs provide the user with information about module operation.



Fig. 11.1: RA0003 UHF Antenna Multiplexer

Proton R4320P – RA0003 Multiplexer Connection

Depending on how the reader is powered, we can distinguish two cases of connection to the RA0003 multiplexer:

- Case 1: Proton R4320P reader powered by 9/36V DC power supply
- Case 2: Proton R4320P reader powered via POE

CASE1:

The figure below shows how to connect the Proton R4320P reader to the RA0003 multiplexer when the reader is powered by the supplied 9/36V DC power supply:

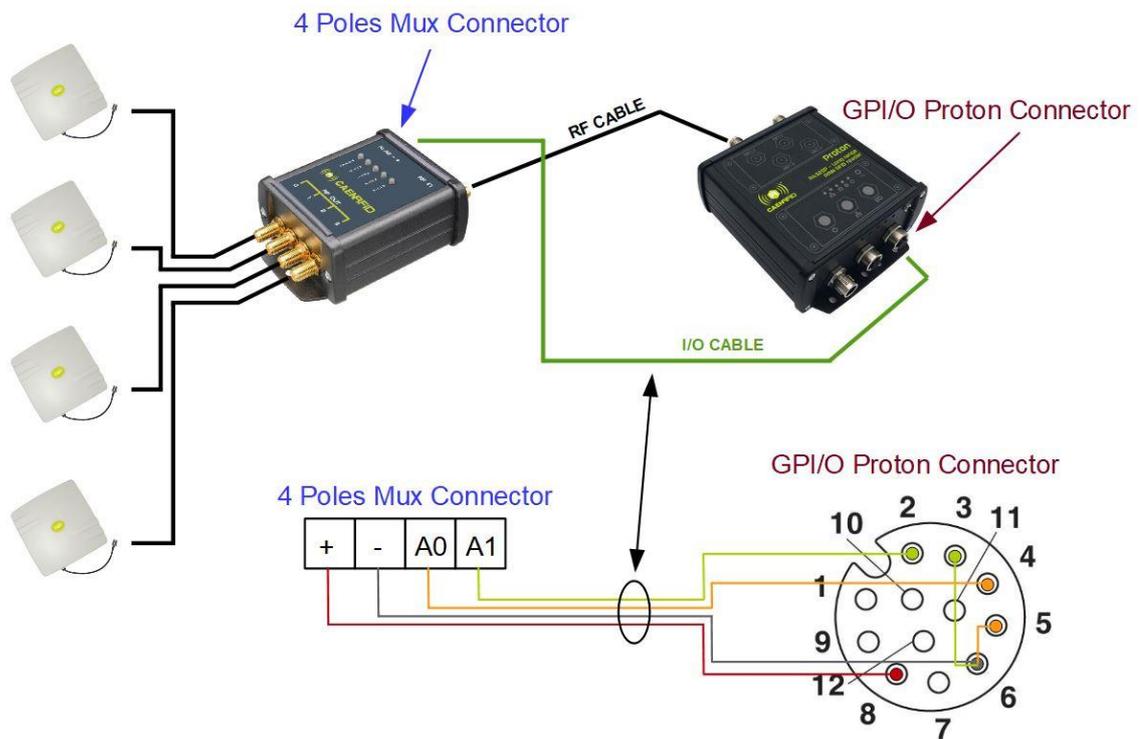


Fig. 11.2: Proton reader – RA0003 MUX Connection- case 1

The GPIO/Serial cable is not provided. We suggest to use the products described in § *GPIO/Serial* paragraph page 17.

GPIO Proton CONNECTOR		MUX CONNECTOR
pin 8: V _{INT}	→	pin 1: V _{in}
pin 6: GND	→	pin 2: GND
pin 2: OUTPUT2.2	→	pin 4: A1
pin 3: OUTPUT2.1	→	pin 2: GND
pin 4: OUTPUT1.2	→	pin 3: A0
pin 5: OUTPUT1.1	→	pin 2: GND

By enabling the relay contact (as described in the § *GPIO/Serial* paragraph page 17), pin A0 - A1 are connected to GND (low logic level) enabling the antennas according to this table:

A1	A0	Signal Path
Low	Low	IN connected to OUT0
Low	High	IN connected to OUT1
High	Low	IN connected to OUT2
High	High	IN connected to OUT3

CASE 2:

The figure below shows how to connect the Proton R4320P reader to the RA0003 multiplexer when the reader is powered via POE:

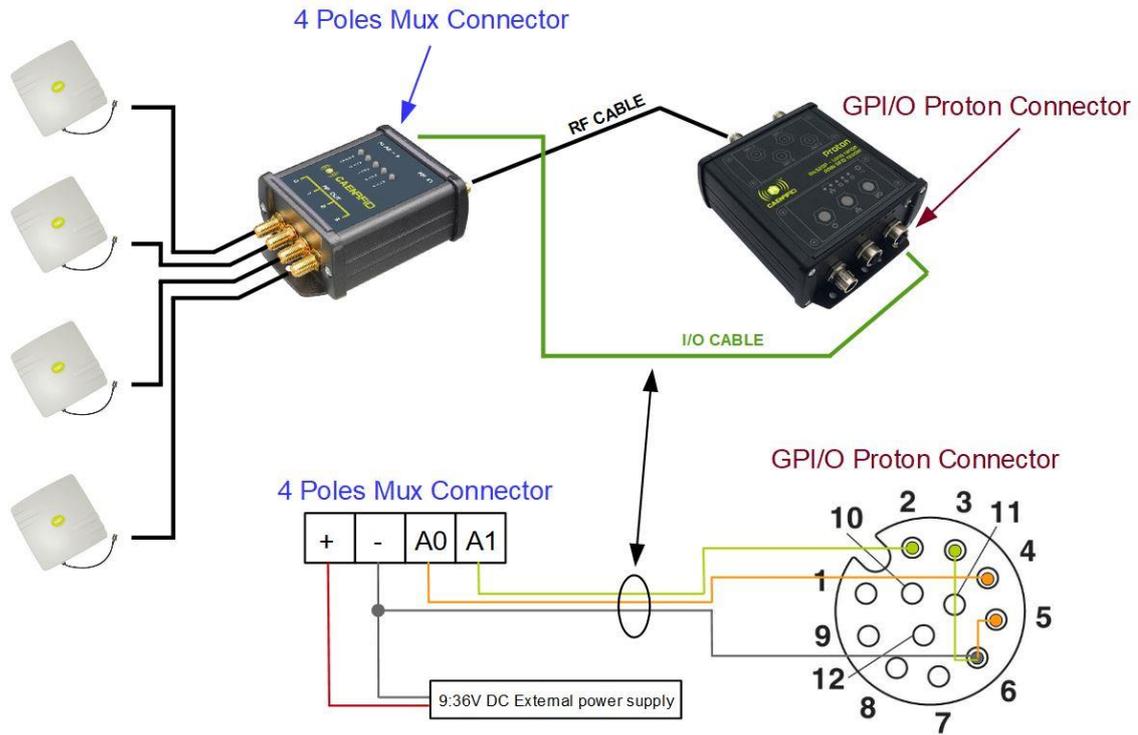


Fig. 11.3: Proton reader – RA0003 MUX Connection – case 2



Warning: If the Proton is powered via POE, the voltage present on pin 8 (V_{int}) is equal to 5V and it is not sufficient to power the multiplexer (range 9:36 V). An external power supply is required. The power supply is available upon request.

The GPIO/Serial cable is not provided. We suggest to use the products described in § *GPIO/Serial* paragraph page 17.

GPIO Proton CONNECTOR		MUX CONNECTOR	
pin 6: GND	→	pin 2: GND	
pin 2: OUTPUT2.2	→	pin 4: A1	
pin 3: OUTPUT2.1	→	pin 2: GND	
pin 4: OUTPUT1.2	→	pin 3: A0	
pin 5: OUTPUT1.1	→	pin 2: GND	

9:36 DC EXTERNAL POWER SUPPLY		MUX CONNECTOR	
pin +: Positive	→	pin 1: Vin	
pin -: Negative	→	pin 2: GND	

By enabling the relay contact (as described in the § *GPIO/Serial* paragraph page 17), pin A0 - A1 are connected to GND (low logic level) enabling the antennas according to this table:

A1	A0	Signal Path
Low	Low	IN connected to OUT0
Low	High	IN connected to OUT1
High	Low	IN connected to OUT2
High	High	IN connected to OUT3

12 REGULATORY COMPLIANCE

CE Compliance

Reference standard:

ETSI EN 301 489-1 V2.2.3:2019

ETSI EN 301 489-3 V2.1.1:2017

EN 55032:2015

ETSI EN 302 208 V3.3.1:2020

CEI EN IEC 62368-1:2020

See § **PROTON R4320P CE DECLARATION OF CONFORMITY** page 67 for the Proton R4320P CE Compliance Certificate.



Warning: The CE compliance is guaranteed only if the reader is used as described in this manual

FCC Compliance

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- a. Reorient or relocate the receiving antenna.
- b. Increase the separation between the equipment and receiver.
- c. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- d. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modification not approved by CAEN RFID could void the user's authority to operate the equipment.

The device shall be used with CAEN RFID antenna Mod. WANTENNAX020 Circular polarized antenna FCC with 5.5dBi gain.

The device shall be used such that a minimum separation distance of 25cm is maintained between the reader and user's/nearby people's body.

Reference documents:

Test report n. R19237901 [RD2] and n. R19238001 [RD3].

See § **PROTON R4320P FCC GRANT** page 68 for the Proton R4320P FCC Compliance Certificate.



Warning: The FCC compliance is guaranteed only if the reader is used as described in this manual

RoHS EU Directive

The Proton R4320P RAIN RFID reader is compliant with the EU Directive 2015/863/EU on the Restriction of the Use of certain Hazardous Substances in Electrical and Electronic Equipment (RoHS3).

PROTON R4320P CE DECLARATION OF CONFORMITY

We

CAEN RFID Srl
Via Vetraia, 11
55049 Viareggio (LU)
Italy
Tel.: +39.0584.388.398 Fax: +39.0584.388.959
Mail: info@caenrfid.com
Web site: www.caenrfid.com

herewith declare under our own responsibility that the product:

Code: WR4320PXAAAA
Description: R4320P Proton - Compact 4 - port UHF RFID Reader

corresponds in the submitted version to the following standards:

ETSI EN 301 489-1 V2.2.3:2019
ETSI EN 301 489-3 V2.1.1:2017
EN 55032:2015
ETSI EN 302 208 V3.3.1:2020
CEI EN IEC 62368-1:2020

and declare under our sole responsibility that the specified product meets the principle requirements and other applicable regulations of directives 2014/53/EU (RED) and 2015/863/EU (RoHS3)

Date: 28/02/2022



CAEN RFID Srl
Via Vetraia, 11
55049 VIAREGGIO - ITALY
VAT IT 02032050466

Adriano Bigongiari (Chief Executive Officer)

On the basis of this declaration, this product will bear the following mark:



The compliance is guaranteed only if the reader is used as described in the Proton R4320P Technical Information Manual.

PROTON R4320P FCC GRANT

TCB

**GRANT OF EQUIPMENT
AUTHORIZATION**

TCB

Certification
Issued Under the Authority of the
Federal Communications Commission
By:

EMCCons DR RASEK GmbH & Co. KG
Stoernhofer Berg 15
Unterleinleiter, 91364
Germany

Date of Grant: 12/17/2019
Application Dated: 12/17/2019

CAEN RFID srl
via Vetraia, 11 - 55049 Viareggio (LU) - ITALY
Viareggio, 55049
Italy

Attention: Adriano Bigongiari , CEO

NOT TRANSFERABLE

EQUIPMENT AUTHORIZATION is hereby issued to the named GRANTEE, and is VALID ONLY for the equipment identified hereon for use under the Commission's Rules and Regulations listed below.

FCC IDENTIFIER: UVECAENRFID028
Name of Grantee: CAEN RFID srl
Equipment Class: Part 15 Class B Digital Device
Notes: R4320P - PROTON - Long range RAIN RFID reader

<u>Grant Notes</u>	<u>FCC Rule Parts</u>	<u>Frequency Range (MHZ)</u>	<u>Output Watts</u>	<u>Frequency Tolerance</u>	<u>Emission Designator</u>
	15B				

