

## Installation Instructions DF PROFINET IO cPCI

## 1 Disclaimer

### © 2018 KUNBUS GmbH, Denkendorf (Deutschland)

The contents of this user manual have been prepared by the KUNBUS GmbH with the utmost care. Due to the technical development, the KUNBUS GmbH reserves the right to change or replace the contents of this user manual without prior notice. You can always obtain the latest version of the user manual at our homepage: www.kunbus.de

The KUNBUS GmbH shall be liable exclusively to the extent specified in General Terms and Conditions (www.kunbus.de/agb.html).

The contents published in this user manual are protected by copyright. Any reproduction or use for the in-house requirements of the user is permitted. Reproduction or use for other purposes are not permitted without the express, written consent of the KUNBUS GmbH. Contraventions shall result in compensation for damages.

### **Trademark protection**

- KUNBUS is a registered trademark of the KUNBUS GmbH
- Windows® and Microsoft® are registered trademarks of the Microsoft, Corp.

## Table of Content

1	Disclaimer	. 2
2	Safety Instructions	. 4
	Installation on the Board	
	Description of the LEDs	
	Technical Data	

# 2 Safety Instructions

WARNING	Disregarding this warning may result in damage to equipment and/or serious personal injury.
	Only qualified personnel may start up and operate this device. According to the safety instructions in this text, qualified personnel are persons who are authorized to start up, to ground, and to mark devices, systems, and equipment according to the standards of safety technology.
	In addition, these persons must be familiar with all warning instructions and maintenance measures in this text.Folgen
WARNING	The DF PROFINET IO PCI board is designed exclusively for PELV operation according to EN 60950/EN 60204/VDE 0805-1.
NOTICE	Shielding
NOTICE	The shielding ground of the connected twisted pair cables is electrically connected
NOTICE	-
	The shielding ground of the connected twisted pair cables is electrically connected to the female connector. When connecting network segments, avoid ground loops,
NOTICE	The shielding ground of the connected twisted pair cables is electrically connected to the female connector. When connecting network segments, avoid ground loops, potential transfers, and voltage equalization currents via the braided shield.
	The shielding ground of the connected twisted pair cables is electrically connected to the female connector. When connecting network segments, avoid ground loops, potential transfers, and voltage equalization currents via the braided shield. <b>Electrostatic discharge!</b> The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety
	The shielding ground of the connected twisted pair cables is electrically connected to the female connector. When connecting network segments, avoid ground loops, potential transfers, and voltage equalization currents via the braided shield. <b>Electrostatic discharge!</b> The device contains components that can be damaged or destroyed by electrostatic discharge. When handling the device, observe the necessary safety precautions against electrostatic discharge (ESD), in accordance with

## 3 Installation on the Board

The DF PROFINET IO CPCI is a Plug&Play-compatible board. The configuration entirely takes place by means of the delivered software or the BIOS of your PC respectively. Thus, no jumpers or DIP-switch adjustments are necessary.

To mount the board, please proceed as follows:

- Please see also the operating instructions of your PC.
- · Switch off the Compact PCI System and interrupt the power supply
- Select a free CPCI slot.
- Plug the DF board into the determined slot
- Screw down the board.

NOTICE

When mounting, please follow the safety instructions for electronic modules against electrostatic charge.

The DF PROFINET IO CPCI does not support Hot Plugging. If in-stalling/ uninstalling the board the Compact PCI system must be switched off and the power supply must be interrupted.

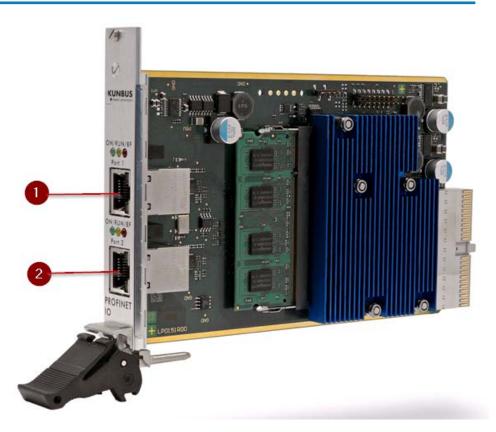


Illustration 1: DF PROFINET IO CPCI - Board

- 1 LAN socket for controller functionality
- 2 LAN socket for device functionality

# 4 Description of the LEDs

LED	State	Meaning	
Green	on	Firmware loaded and started	
	off	Firmware not loaded	
Yellow	on	PROFINET IO started	
	off	PROFINET IO stopped	
Red	Operation as PROFINET IO Controller on Ethernet Interface 1		
	on	PROFINET IO-Failure (min. one device not connected to the PROFINET IO network or with external diagnosis)	
	off	No PROFINET IO-Failure	
	Opera	tion as PROFINET IO Device on Ethernet Interface 2	
	on	PROFINET IO-Failure (No active PROFINET IO controller connected)	
	off	No PROFINET IO-Failure	

# 5 Technical Data

Functionality	PN IO Controller, PN IO Device, also simulteanously
PN IO Specification	V 2.3
PN IO Performance Class	Class B (<= 1 ms)
Processor	1.3 GHz Freescale PowerQUICC III
Memory	1 GB DDR II
	32 MB Flash Memory
C-PCI Interface	PCI Rev. 2.2, 32 Bit
Ethernet Interface 1 (Controller)	RJ45 100 Base-T(X)
Ethernet Interface 2 (Device)	RJ45 100 Base-T(X)
Data Size of Process Image	16 KB
Power Consumption	Typical 7W
Ambient Temperature Range	0°C – 55°C
Dimensions	213 mm x 129 mm x 20mm